Pioneer sound.vision.soul

Service Manual

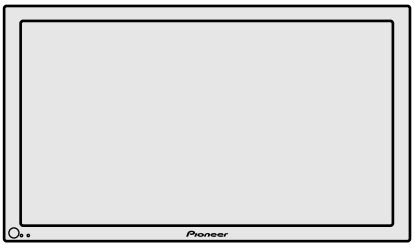

PDP-5004

ORDER NO.
ARP3250

PLASMA DISPLAY

PDP-5004
PDP-4304
PDP-5014
PDP-4314

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
PDP-5004, PDP-5014	KUCXC	AC120V	
PDP-4304, PDP-4314	KUCXC	AC120V	

HOW TO DISTINGUISH THE CURRENT MODEL FROM THE PREVIOUS MODEL

• Serial No.

Previous model
(PDP-5004/KUC)
(PDP-5014/KUC)
(PDP-4304/KUC)
(PDP-4314/KUC)

Current model
(PDP-5004/KUCXC)
(PDP-5014/KUCXC)
(PDP-4304/KUCXC)
(PDP-4314/KUCXC)

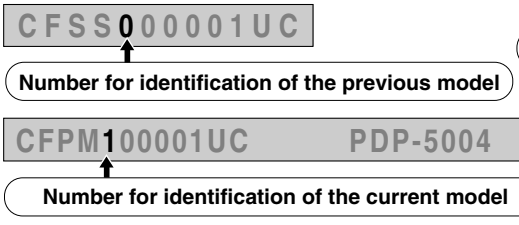
CFSS000001UC
Number for identification of the previous model
CFPM100001UC PDP-5004
Number for identification of the current model

•Name label, Barcode label

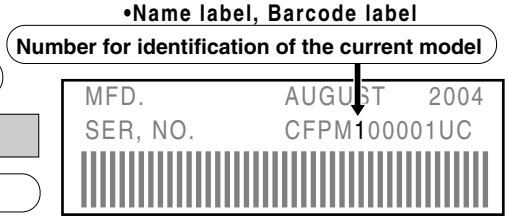

For details, see the next section "How to distinguish the current model from the previous model."

For details, refer to "Important Check Points for Good Servicing".

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
ⓒ**PIONEER CORPORATION 2004**

T-ZZY DEC. 2004 printed in Japan

HOW TO DISTINGUISH THE CURRENT MODEL FROM THE PREVIOUS MODEL

Label reading

You can distinguish the current model from the previous model by referring to the model-name label and the barcode label.

● On the serial label

Current model
(PDP-5004/KUCXC)
(PDP-5014/KUCXC)
(PDP-4304/KUCXC)
(PDP-4314/KUCXC)

CFPM**1**00001UC PDP-5004

1: Current model

Previous model
(PDP-5004/KUC)
(PDP-5014/KUC)
(PDP-4304/KUC)
(PDP-4314/KUC)

CFSS**0**00001UC

0: Previous model

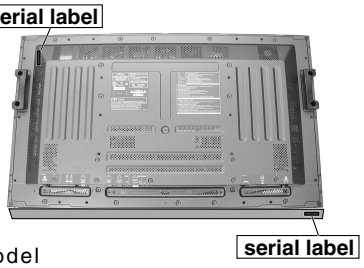

● On the barcode label

Current model : 1
Previous model : 0

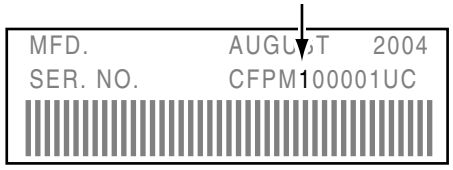

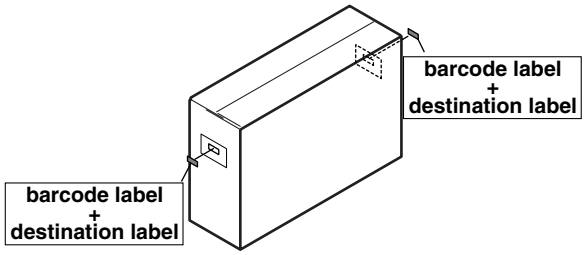

Distinction of PC boards

Some PC boards of the previous model are incompatible with the current model.
Do NOT mount a PC board of the previous model in the current model, as it may cause a failure.
When ordering a PC board, be sure to check the part number correctly.

On a PC board of the current model, "G5" is marked, as shown below.

Note: The photo is from a 50-inch model, but G5 markings are provided in exactly the same way as with the 50-inch model.

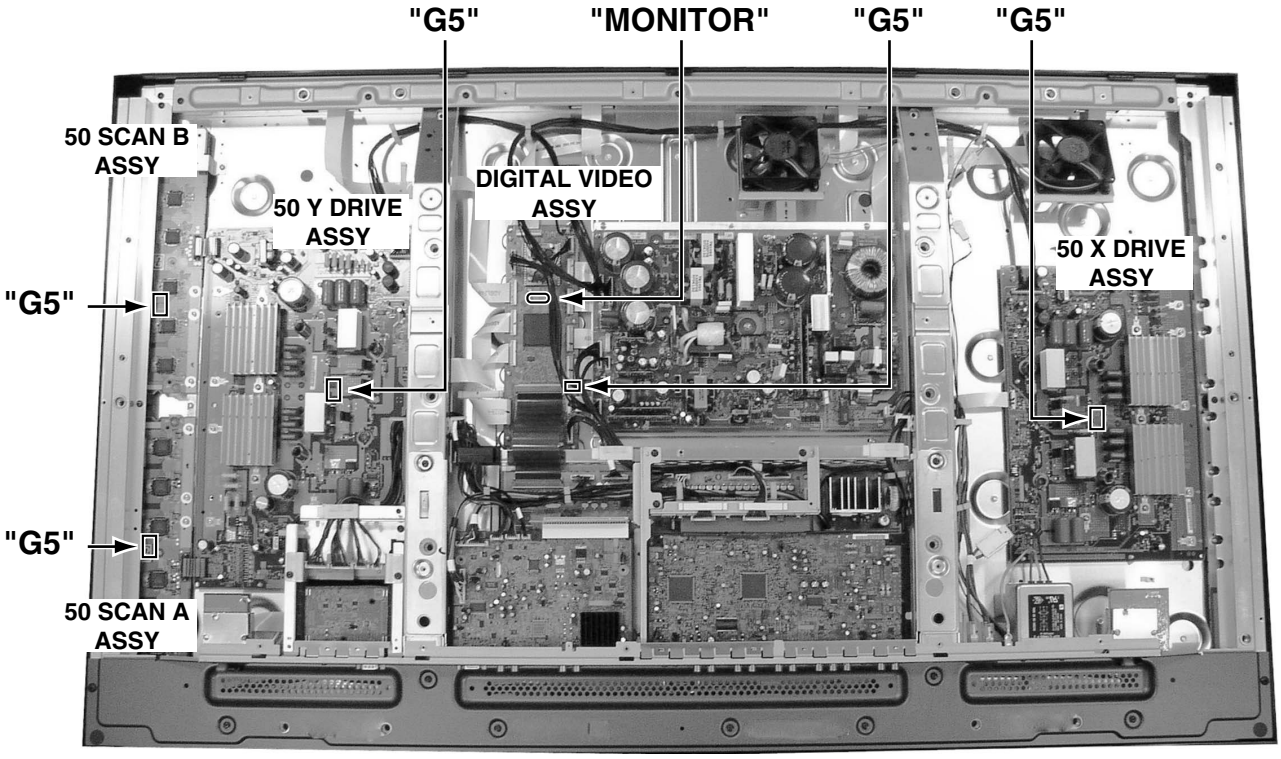

SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING
This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 - Proposition 65

NOTICE
(FOR CANADIAN MODEL ONLY)
Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE
(POUR MODÈLE CANADIEN SEULEMENT)
Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.

SAFETY PRECAUTIONS

NOTICE : Comply with all cautions and safety related notes located on or inside the cabinet and on the chassis.

The following precautions should be observed :

1. When service is required, even though the PDP UNIT an isolation transformer should be inserted between the power line and the set in safety before any service is performed.
2. When replacing a chassis in the set, all the protective devices must be put back in place, such as barriers, nonmetallic knobs, adjustment and compartment covershields, isolation resistor-capacitor, etc.
3. When service is required, observe the original lead dress. Extra precaution should be taken to assure correct lead dress in the high voltage circuitry area.
4. Always use the manufacture's replacement components. Especially critical components as indicated on the circuit diagram should not be replaced by other manufacture's. Furthermore where a short circuit has occurred, replace those components that indicate evidence of overheating.
5. Before returning a serviced set to the customer, the service technician must thoroughly test the unit to be certain that it is completely safe to operate without danger of electrical shock, and be sure that no protective device built into the set by the manufacture has become defective, or inadvertently defeated during servicing. Therefore, the following checks should be performed for the continued protection of the customer and servicetechnician.
6. Perform the following precautions against unwanted radiation and rise in internal temperature.
   - Always return the internal wiring to the original styling.
   - Attach parts (Gascket, Ferrite Core, Ground, Rear Cover, Shield Case etc.) surely after disassembly.
7. Perform the following precautions for the PDP panel.
   - When the front case is removed, make sure nothing hits the panel face, panel corner, and panel edge (so that the glass does not break).
   - Make sure that the panel vent does not break. (Check that the cover is attached.)
   - Handle the FPC connected to the panel carefully. Twisting or pulling the FPC when connecting it to the connector will cause it to peel off from the panel.
8. Pay attention to the following.
   - When the front case is removed, infrared ray is radiated and may disturb reception of the remote control unit.
   - Pay extreme caution when the front case and rear panel are removed because this may cause a high risk of disturbance to TVs and radios in the surrounding.

Leakage Current Cold Check

With the AC plug removed from an AC power source, place a jumper across the two plug prongs. Turn the AC power switch on. Using an insulation tester (DC 500V), connect one lead to the jumpered AC plug and touch the other lead to each exposed metal part (input/output terminals, screwheads, metal overlays, control shafts, etc.), particularly any exposed metal part having a return path to the chassis. Exposed metal parts having a return path to the chassis should have a minimum resistor reading of 0.3MΩ and a maximum resistor reading of 5MΩ. Any resistor value below or above this range indicates an abnormality which requires corrective action. Exposed metal parts not having a return path to the chassis will indicate an open circuit.

Leakage Current Hot Check

Plug the AC line cord directly into an AC power source (do not use an isolation transformer for this check).
Turn the AC power switch on.
Using a "Leakage Current Tester (Simpson Model 229 equivalent)", measure for current from all exposed metal parts of the cabinet (input/output terminals, screwheads, metal overlays, control shaft, etc.), particularly any exposed metal part having a return path to the chassis, to a known earth ground (water pipe, conduit, etc.). Any current measured must not exceed 0.5mA.

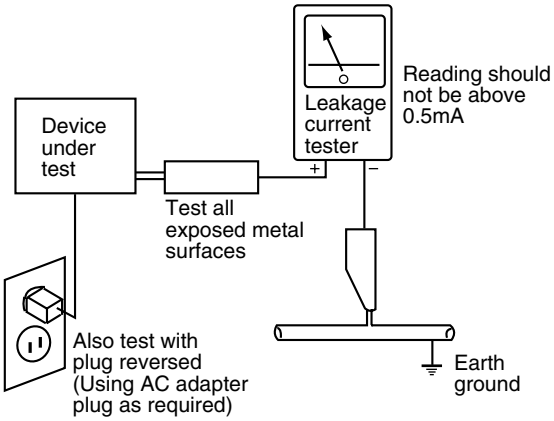
Reading should not be above 0.5mA
Leakage current tester
Device under test
+
–
Test all exposed metal surfaces
Also test with plug reversed (Using AC adapter plug as required)
Earth ground

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE SET TO THE CUSTOMER.

PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in PIONEER set have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.
Electrical components having such features are identified by marking with a ⚠ on the schematics and on the parts list in this Service Manual.
The use of a substitute replacement component which dose not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire or other hazards.
Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

■ Charged Section

The places where the commercial AC power is used without passing through the power supply transformer.
If the places are touched, there is a risk of electric shock. In addition, the measuring equipment can be damaged if it is connected to the GND of the charged section and the GND of the non-charged section while connecting the set directly to the commercial AC power supply. Therefore, be sure to connect the set via an insulated transformer and supply the current.

1. AC Power Cord
2. AC Inlet with Filter
3. Power Switch (S1)
4. Fuse (In the POWER SUPPLY Unit)
5. STB Transformer and Converter Transformer (In the POWER SUPPLY Unit)
6. Other primary side of the POWER SUPPLY Unit

■ High Voltage Generating Point

The places where voltage is 100 V or more besides the live parts are described above. You must not touch them, since there is risk of electric shock.
The VSUS voltage remains for several minutes after the power to the unit is turned off. These places must not be touched until about 10 minutes after the power is turned off, or it is confirmed with a tester that there is no residual VSUS voltage.

1. POWER SUPPLY Unit.....(223V)
2. 50 X DRIVE Assy .....(–230V to 223V)
3. 50 Y DRIVE Assy .....(353V)
4. 50 SCAN A Assy ..... (353V)
5. 50 SCAN B Assy ..... (353V)
6. X CONNECTOR A Assy .....(–230V to 223V)
7. X CONNECTOR B Assy ..... (–230V to 223V)

Discharge the VSUS voltage, as shown below:

[Method for discharging the VSUS voltage]

1. Set DRF_SW on the DIGITAL VIDEO Assy to ON (Drive OFF status). ∗1, ∗2
2. Leave the switch at that position for about 20-30 seconds.
3. If the power is on, turn it off. Then return DRF_SW to the OFF position. ∗3

Notes

∗1: You can also set the unit to "Drive OFF status" by sending the "DRF" RS232C command from the PC.
∗2: DRF_SW can be switched whether the power is on or off.
∗3: Power-down will occur if DRF_SW is set to OFF while the power is on. (See "7.1.5 POWER ON/OFF FUNCTION FOR THE LARGE-SIGNAL SYSTEM".)

• For 50 inch model (PDP-5004, PDP-5014)

▨ : Part is Charged Section.
□ : Part is the High Voltage Generating Points other than the Charged Section.

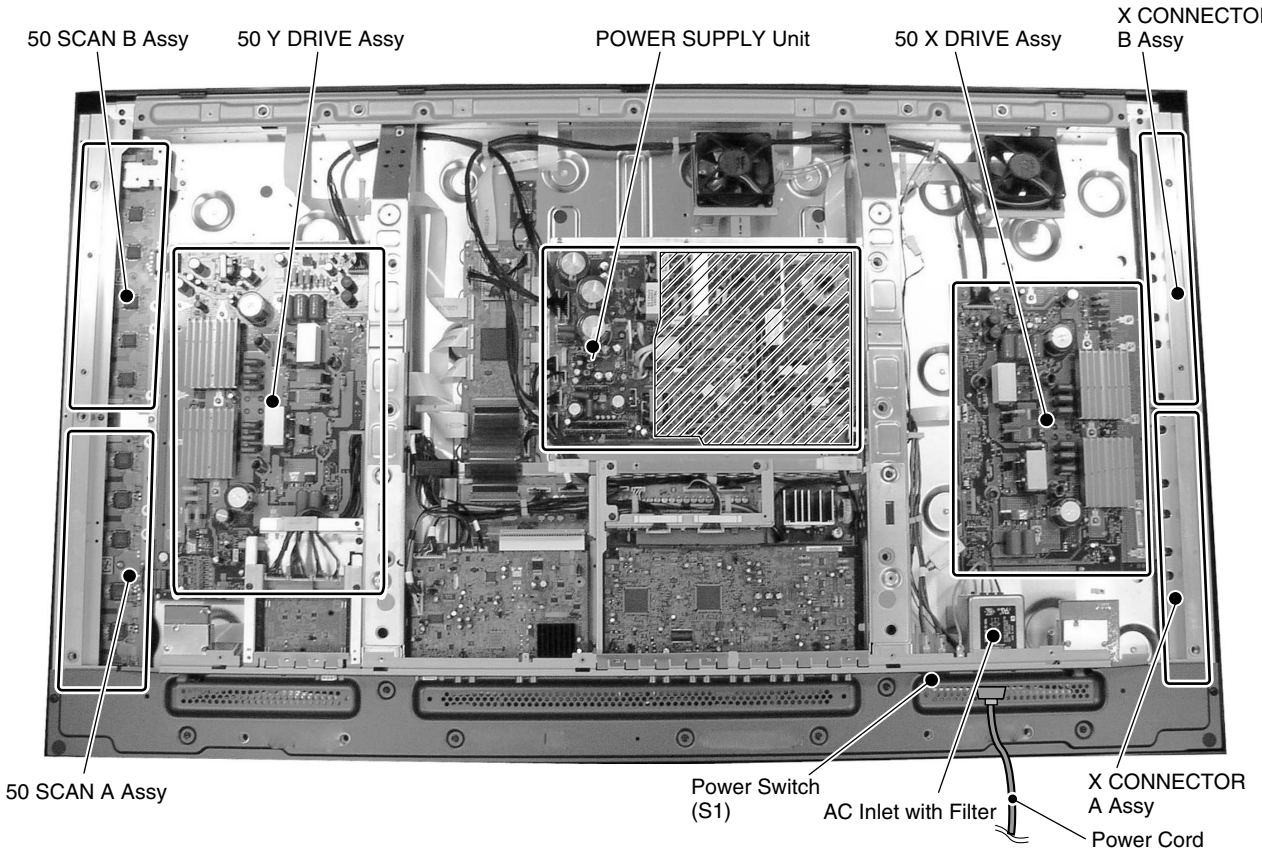

Fig.1 Charged Section and High Voltage Generating Point (Rear View)

■Charged Section

The places where the commercial AC power is used without passing through the power supply transformer.
If the places are touched, there is a risk of electric shock. In addition, the measuring equipment can be damaged if it is connected to the GND of the charged section and the GND of the non-charged section while connecting the set directly to the commercial AC power supply. Therefore, be sure to connect the set via an insulated transformer and supply the current.

1. AC Power Cord
2. AC Inlet with Filter
3. Power Switch (S1)
4. Fuse (In the POWER SUPPLY Unit)
5. STB Transformer and Converter Transformer (In the POWER SUPPLY Unit)
6. Other primary side of the POWER SUPPLY Unit

• For 43 inch model (PDP-4304, PDP-4314)

▨ : Part is Charged Section.

□ : Part is the High Voltage Generating Points other than the Charged Section.

■High Voltage Generating Point

The places where voltage is 100 V or more besides the live parts are described above. You must not touch them, since there is risk of electric shock.
The VSUS voltage remains for several minutes after the power to the unit is turned off. These places must not be touched until about 10 minutes after the power is turned off, or it is confirmed with a tester that there is no residual VSUS voltage.

1. POWER SUPPLY Unit.....(215V)
2. 43 X DRIVE Assy .....(–235V to 215V)
3. 43 Y DRIVE Assy .....(345V)
4. 43 SCAN A Assy ..... (345V)
5. 43 SCAN B Assy ..... (345V)
6. X CONNECTOR A Assy .....(–235V to 215V)
7. X CONNECTOR B Assy ..... (–235V to 215V)

Discharge the VSUS voltage, as shown below:

[Method for discharging the VSUS voltage]

1. Set DRF_SW on the DIGITAL VIDEO Assy to ON (Drive OFF status). ∗1, ∗2
2. Leave the switch at that position for about 20-30 seconds.
3. If the power is on, turn it off. Then return DRF_SW to the OFF position. ∗3

Notes

∗1: You can also set the unit to "Drive OFF status" by sending the "DRF" RS232C command from the PC.
∗2: DRF_SW can be switched whether the power is on or off.
∗3: Power-down will occur if DRF_SW is set to OFF while the power is on. (See "7.1.5 POWER ON/OFF FUNCTION FOR THE LARGE-SIGNAL SYSTEM".)

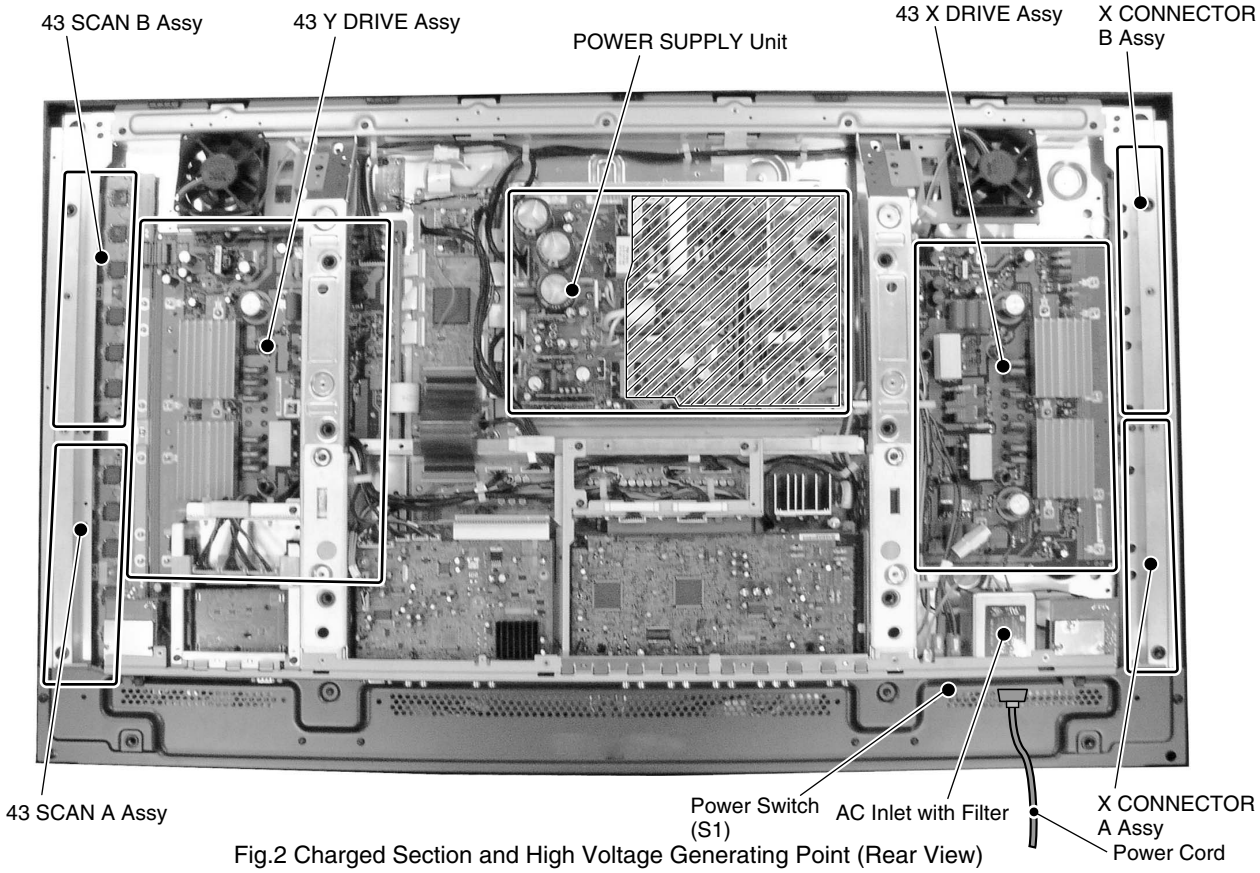

Fig.2 Charged Section and High Voltage Generating Point (Rear View)

[Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol.
Please be sure to confirm and follow these procedures.

1. Product safety

Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

① Use specified parts for repair.

Use genuine parts. Be sure to use important parts for safety.

② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification(addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris.
Soldering should be finished with the proper quantity. (Refer to the example)

④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs.
In addition, be sure that there are no pinched wires, etc.

⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages.
If you find a damaged power cord, please exchange it with a suitable one.

⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries.
Please pay attention to your surroundings and repair safely.

2. Adjustments

To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification.
Adjustments should be performed in accordance with the procedures/instructions described in this manual.

3. Lubricants, Glues, and Replacement parts

Use grease and adhesives that are equal to the specified substance.
Make sure the proper amount is applied.

4. Cleaning

For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

5. Shipping mode and Shipping screws

To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

COTENTS

SAFETY INFORMATION 3
1. SPECIFICATIONS 9
2. EXPLODED VIEWS AND PARTS LIST 10
2.1 PACKING for PDP-5004, PDP-5014, PDP-4304 and PDP-4314 models 10
2.1.1 PACKING 10
2.2 PDP-5004, PDP-5014 models 12
2.2.1 CHASSIS SECTION (1) 12
2.2.2 CHASSIS SECTION (2) 14
2.2.3 FRAME SECTION 16
2.2.4 TERMINAL PANEL and REAR SECTION 18
2.2.5 FRONT SECTION 20
2.2.6 PANEL CHASSIS (50) ASSY (AWU1111) 22
2.2.7 PDP SERVICE ASSY (AWU1114) 23
2.3 PDP-4304, PDP-4314 models 24
2.3.1 CHASSIS SECTION (1) 24
2.3.2 CHASSIS SECTION (2) 26
2.3.3 FRAME SECTION 28
2.3.4 TERMINAL PANEL and REAR SECTION 30
2.3.5 FRONT SECTION 32
2.3.6 PANEL CHASSIS (43) ASSY (AWU1112) 34
2.3.7 PDP SERVICE ASSY (AWU1115) 35
2.4 MULTI BASE SECTION for PDP-5004, PDP-5014, PDP-4304 and PDP-4314 36
2.4.1 MULTI BASE SECTION 36
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM (Refer to “Service Manual: ARP3251”) 38
3.1 BLOCK DIAGRAM 38
3.1.1 OVERALL BLOCK DIAGRAM (1/2) for PDP-5004 and PDP-5014 models 38
3.1.2 OVERALL BLOCK DIAGRAM (1/2) for PDP-4304 and PDP-4314 models 40
3.1.3 OVERALL BLOCK DIAGRAM (2/2) for PDP-5004, PDP-5014, PDP-4304 and PDP-4314 models 42
3.1.4 SIGNAL ROUTE 44
3.1.5 50 Y DRIVE ASSY 45
3.1.6 43 Y DRIVE ASSY 46
3.1.7 50 X DRIVE ASSY 47
3.1.8 43 X DRIVE ASSY 48
3.1.9 DIGITAL VIDEO ASSY 49
3.1.10 AV I/O ASSY 50
3.1.11 RGB ASSY 51
3.1.12 AUDIO AMP and COMM SLOT ASSYS 52
3.1.13 VIDEO SLOT 2 ASSY 53
3.2 WAVEFORMS 54
3.3 VOLTAGES 60
4. PCB CONNECTION DIAGRAM (Refer to “Service Manual: ARP3251”)
5. PCB PARTS LIST 68
6. ADJUSTMENT 89
6.1 ADJUSTMENT REQUIRED WHEN THE SET IS REPAIRED OR REPLACED 89
6.2 DRIVE ASSY ADJUSTMENT 90
6.3 SERVICE FACTORY MODE 91
6.4 HOW TO ENTER FACTORY MODE 92
6.5 METHOD FOR REPLACING THE SERVICE PANEL ASSY 116
6.6 COMMAND DESCRIPTION 117
7. GENERAL INFORMATION 127
7.1 DIAGNOSIS 127
7.1.1 CONFIGURATION OF THE PC BOARD 127
7.1.2 DIAGNOSIS FOR SHUTDOWN AND POWER-DOWN BY LED 128
7.1.3 PROCESSING AT THE TIME OF ABNORMALITIES 135
7.1.4 TEMPERATURE COMPENSATION OF DRIVE SYSTEM VOLTAGE 135
7.1.5 POWER ON/OFF FUNCTION FOR THE LARGE-SIGNAL SYSTEM 136
7.1.6 BACKUP THE ADJUSTMENT VALUES FOR THE MAIN UNIT 137
7.1.7 TROUBLESHOOTING 139
7.1.8 CANCELING DETECTION BY THE TRAP SWITCH 141
7.1.9 DISASSEMBLY 142
7.2 IC INFORMATIION 148
8. PANEL FACILITIES 190

1. SPECIFICATIONS

■ PLASMA DISPLAY

General (PDP-5004 /PDP-5014)

Light emission panel ..... 50-inch AC Plasma Panel
109.8 (W) x 62.1 (H) x 126.1 (diagonal) cm
Number of pixels ..... 1280 x 768
Power supply ..... AC 120 V, 60 Hz
Rated current ..... 3.1 A
Standby power consumption ..... 0.6 W
External dimensions
.... 1218 (W) x 714 (H) x 98 (D: Not including handles) mm
47-31/32 (W) x 28-1/8 (H) x 3-7/8
(D: Not including handles) in.
Weight ..... 41.0 kg (90 lbs. 7 oz)
Operating temperature range ..... 0 to 40 °C (32 to 104˚F)

General (PDP-4304/ PDP-4314)

Light emission panel ..... 43-inch AC Plasma Panel
95.2 (W) x 53.6 (H) x 109.3 (diagonal) cm
Number of pixels ..... 1024 x 768
Power supply ..... AC 120 V, 60 Hz
Rated current ..... 2.6 A
Standby power consumption ..... 0.6 W
External dimensions
.... 1070 (W) x 630 (H) x 98 (D: Not including handles) mm
42-1/8 (W) x 24-13/16 (H) x 3-7/8
(D: Not including handles) in.
Weight ..... 33.5 kg (73 lbs. 14 oz)
Operating temperature range ..... 0 to 40 °C (32 to 104˚F)

Input/output

Video

INPUT1

(Input) Mini D-sub 15 pin (socket connector)
- RGB signal (G ON SYNC compatible)
  RGB ... 0.7 Vp-p/75Ω/no sync.
  HD/CS, VD ... TTL level
  /positive and negative polarity
  /2.2 kΩ
  G ON SYNC
  ... 1 Vp-p/75Ω/negative sync.
  *Compatible with Microsoft Plug & Play
  (VESA DDC1/2B)
- Component video signal
  Y ... 1 Vp-p/75Ω negative sync.
  C_B/P_B, C_R/P_R ... 0.7 Vp-p (color100%)/75Ω

INPUT2

(Input) HDMI
- Digital signal
  3.3V T.M.D.S. /50Ω

INPUT3

(Input) S jack (Mini DIN 4 pin)
- Y/C separate video signal
  Y . . . 1 Vp-p/75Ω/negative sync.
  C . . . 0.286 Vp-p/75Ω
  (Color Burst Level)

INPUT4

(Input) RCA jack
- Composite video signal
  1 Vp-p/75Ω/negative sync.

(Output) RCA jack
75Ω /with buffer

INPUT5

(Input) RCA jack
- Component video signal
  Y…1 Vp-p /75Ω negative sync.
  C_B/P_B, C_R/P_R…
  0.7 Vp-p (color 100%) / 75Ω
- RGB signal
  G ON SYNC ...
  1 Vp-p/75Ω/negative sync.
  R/B ... 0.7 Vp-p/75Ω/no sync.

Audio

(Input) AUDIO INPUT (for INPUT1)
Pin jack (x2)
L/R ... 500 mVrms/more than 10 kΩ

AUDIO INPUT (for INPUT2)
Pin jack (x2)
L/R ... 500 mVrms/more than 10 kΩ

AUDIO INPUT (for INPUT3)
Pin jack (x2)
L/R ... 500mVrms/more than 10 kΩ

AUDIO INPUT (for INPUT4)
Pin jack (x2)
L/R ... 500mVrms/more than 10 kΩ

AUDIO INPUT (for INPUT5)
Pin jack (x2)
L/R ... 500mVrms/more than 10 kΩ

(Output) SPEAKER
L/R ... 8 – 16Ω/7 W +7 W (at 8Ω)

Control

RS-232C... D-sub 9 pin (pin connector)

● Accessories

- Power Cord (ADG1215)

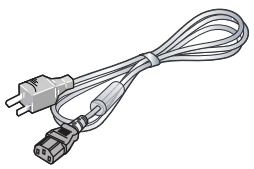

- Remote Control Unit for PDP-5004, PDP-4304 (AXD1496)

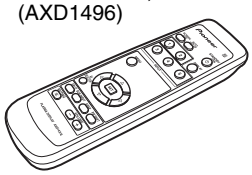

- Remote Control Unit for PDP-5014, PDP-4314 (AXD1497)

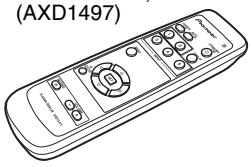

- Binder Assy (AEC1758)
  - Speed Clamp (×2)



  - Bead Bands (×2)



- Dry Cell Battery (R6P, AA)



- Cleaning Cloth (for wiping front panel) (AED1208)

2. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

2.1 PACKING for PDP-5004, PDP-5014, PDP-4304 and PDP-4314 models

2.1.1 PACKING

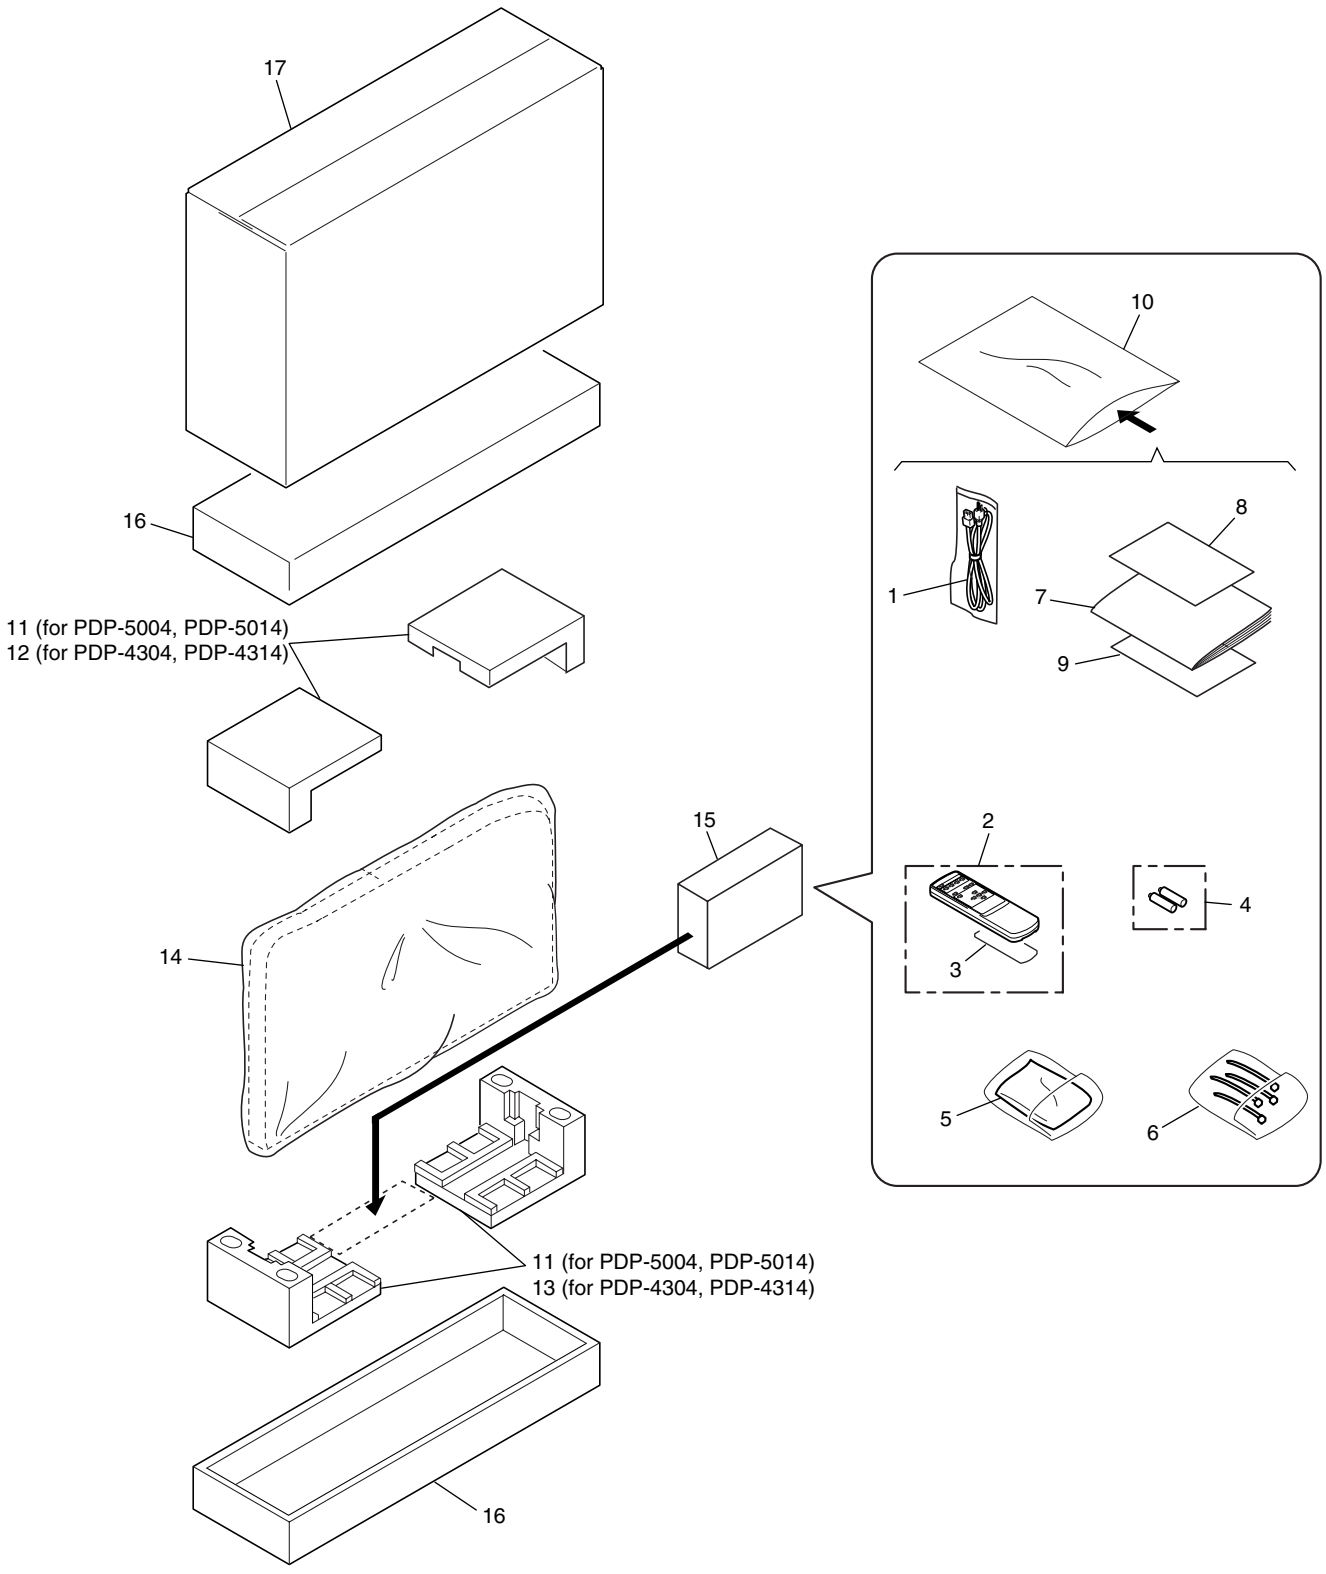

PACKING Parts List

Mark	No.	Description	Part No.
⚠	1	Power Cord	ADG1215
	2	Remote Control Unit	See Contrast table (2)
	3	Battery Cover	AZN2462
NSP	4	Dry Cell Battery (R6P, AA)	VEM1031
	5	Wiping Cloth (for screen)	AED1208
	6	Binder Assy (Speed Clamp x2, Bead Band x2)	AEC1758
	7	Operating Instructions (English / French / Spanish)	ARE1387
NSP	8	Warranty Card	ARY1145
NSP	9	Card	ARY1156
	10	Vinyl Bag	AHG1347
	11	Pad	See Contrast table (2)
	12	Pad (43U)	See Contrast table (2)
	13	Pad (43L)	See Contrast table (2)
	14	Mirror Mat	AHG1352
	15	Accessory Case	AHC1059
	16	Under Carton	See Contrast table (2)
	17	Upper Carton	See Contrast table (2)

(2) CONTRAST TABLE

PDP-5004/KUCXC, PDP-5014/KUCXC, PDP-4304/KUCXC and PDP-4314/KUCXC are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-5004/ KUCXC	PDP-5014/ KUCXC	PDP-4304/ KUCXC	PDP-4314/ KUCXC
	2	Remote Control Unit	AXD1496	AXD1497	AXD1496	AXD1497
	11	Pad	AHA2400	AHA2400	Not used	Not used
	12	Pad (43U)	Not used	Not used	AHA2401	AHA2401
	13	Pad (43L)	Not used	Not used	AHA2402	AHA2402
	16	Under Carton	AHD3300	AHD3300	AHD3306	AHD3306
	17	Upper Carton	AHD3301	AHD3302	AHD3304	AHD3305

2.2 PDP-5004, PDP-5014 models

2.2.1 CHASSIS SECTION (1)

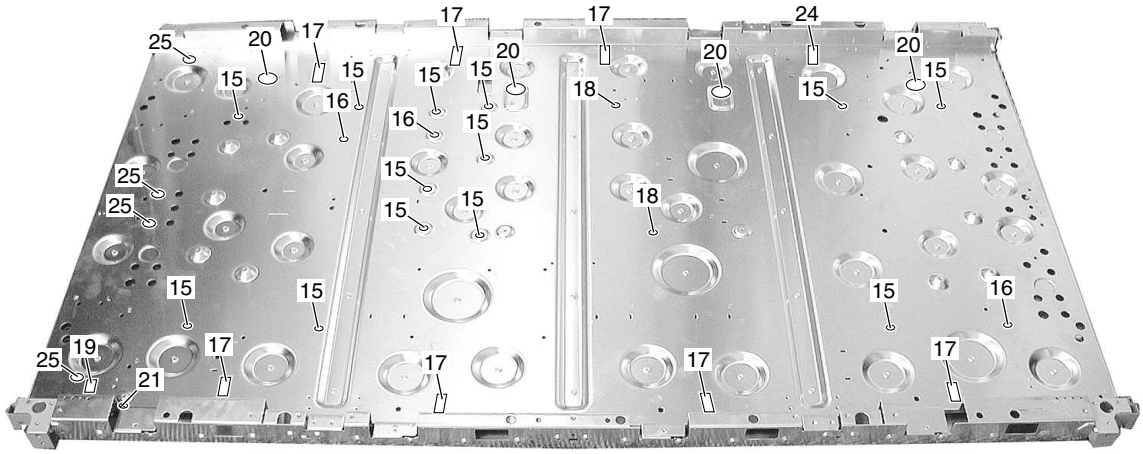

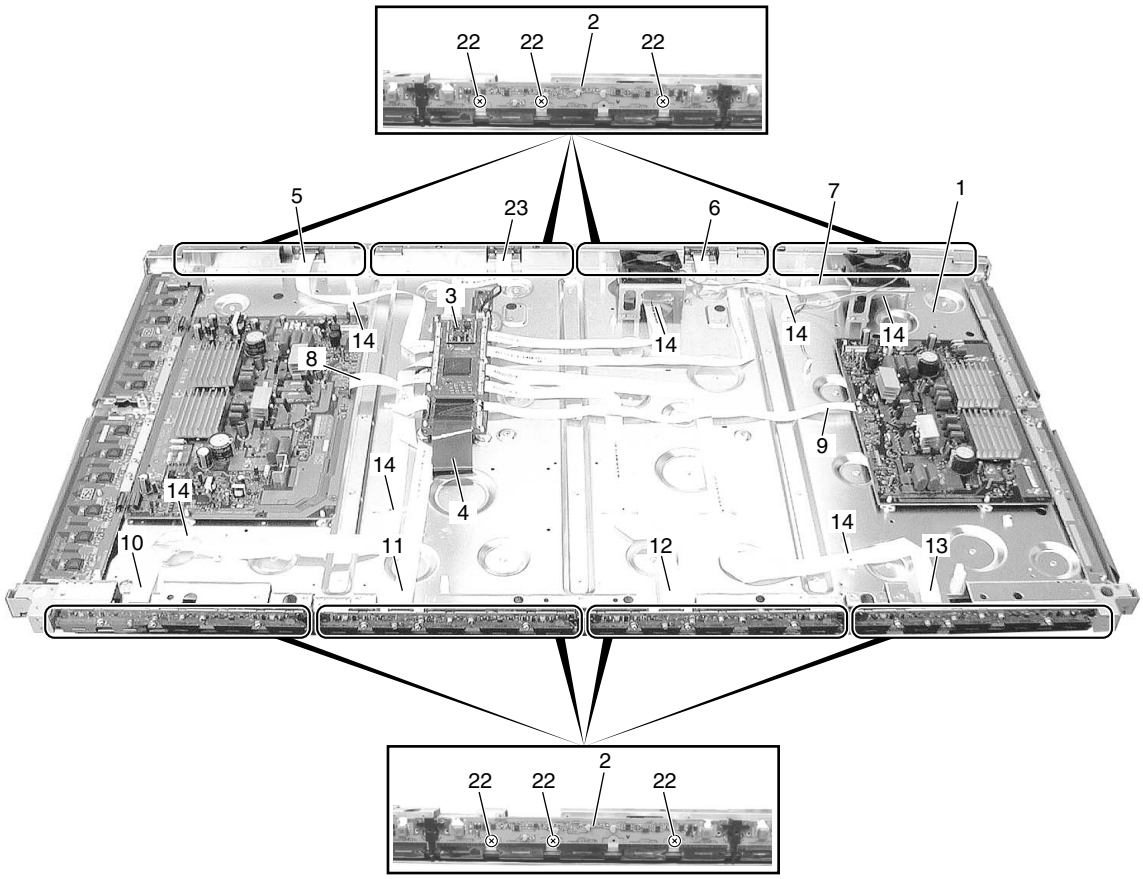

CHASSIS SECTION (1) parts List

Mark	No.	Description	Part No.
NSP	1	P. Chassis (50) Assy	AWU1111
NSP	2	50 ADDRESS Assy	AWZ6870
	3	DIGITAL VIDEO Assy	AWV2169
	4	FPC (114P)	ADY1081
	5	Flexible Cable (J201)	ADD1248
	6	Flexible Cable (J203)	ADD1250
	7	Flexible Cable (J204)	ADD1283
	8	Flexible Cable (J209)	ADD1236
	9	Flexible Cable (J210)	ADD1237
	10	Flexible Cable (J205)	ADD1252
	11	Flexible Cable (J206)	ADD1253
	12	Flexible Cable (J207)	ADD1254
	13	Flexible Cable (J208)	ADD1255
	14	Flat Clamp	AEC1879
	15	PCB Spacer	AEC1941
	16	PCB Support	AEC1938
	17	Wire Saddle	AEC1745
	18	PCB Spacer	AEC1947
	19	Wire Clip	AEC1948
	20	Rear Corner Label	AAX3081
	21	Screw	ABZ30P060FMC
	22	Screw	VBB30P080FNI
	23	Flexible Cable (J202)	ADD1249
	24	Wire Clip	AEC1992
	25	Edge Card Spacer	AEC1998

2.2.2 CHASSIS SECTION (2)

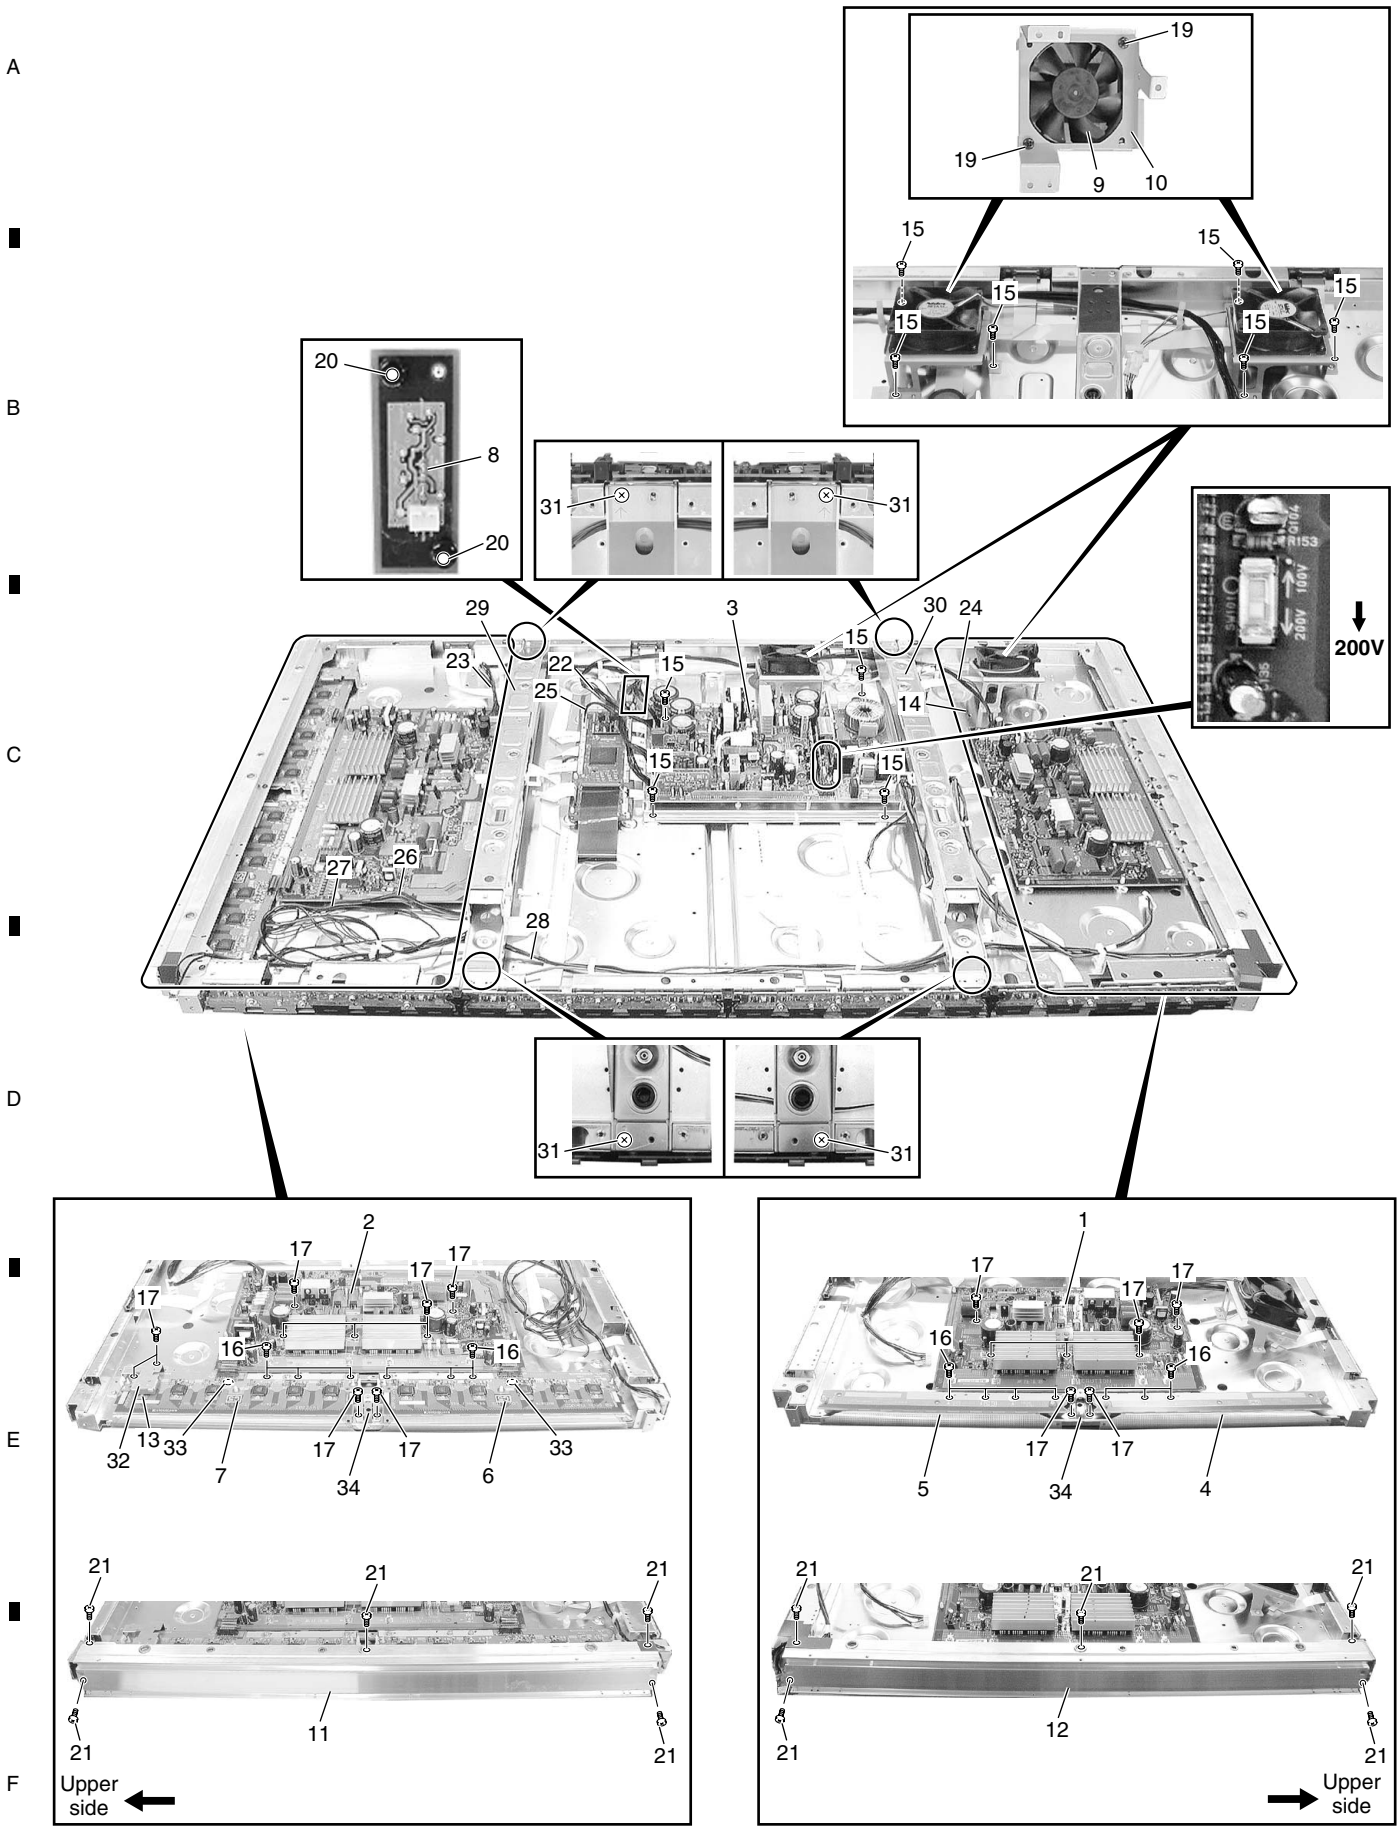

CHASSIS SECTION (2) parts List

Mark	No.	Description	Part No.
	1	50 X DRIVE Assy	AWZ6877
	2	50 Y DRIVE Assy	AWV2082
⚠	3	POWER SUPPLY Unit	AXY1083
NSP	4	X CONNECTOR B Assy	AWZ6881
NSP	5	X CONNECTOR A Assy	AWZ6880
NSP	6	50 SCAN A Assy	AWZ6878
NSP	7	50 SCAN B Assy	AWZ6879
	8	PANEL SENSOR Assy	AWZ6872
	9	Fan Motor (80 x 25)	AXM1044
	10	Fan Angle	ANG2609
	11	F. Chassis VL (50M)	ANA1753
	12	F. Chassis VR (50M)	ANA1754
	13	Silicon Sheet SC	AEH1080
	14	Housing Wire (J117)	ADX3059
	15	Screw	ABZ30P060FMC
	16	Screw	PMB30P060FNI
	17	Screw	VBB30P080FNI
	18	•••••	
	19	Screw	PPZ50P100FZK
	20	Nylon Rivet	AEC1671
	21	Screw	AMZ30P060FZK
	22	3P Housing Wire (J109)	ADX3006
	23	11P Housing Wire (J102)	ADX3009
	24	12P Housing Wire (J103)	ADX3010
	25	Wire A (J101)	ADX3004
	26	WireD (J118)	ADX3030
	27	Wire E (J119)	ADX3031
	28	9P Housing Wire (J115)	ADX3057
	29	SUB Frame L assy (50M)	ANG2596
	30	SUB Frame R assy (50M)	ANG2598
	31	Screw	AMZ30P080FZK
	32	SCAN Heatsink	ANH1630
NSP	33	Card Spacer	AEC2013
	34	Sel Plate	ANG2712

2.2.3 FRAME SECTION

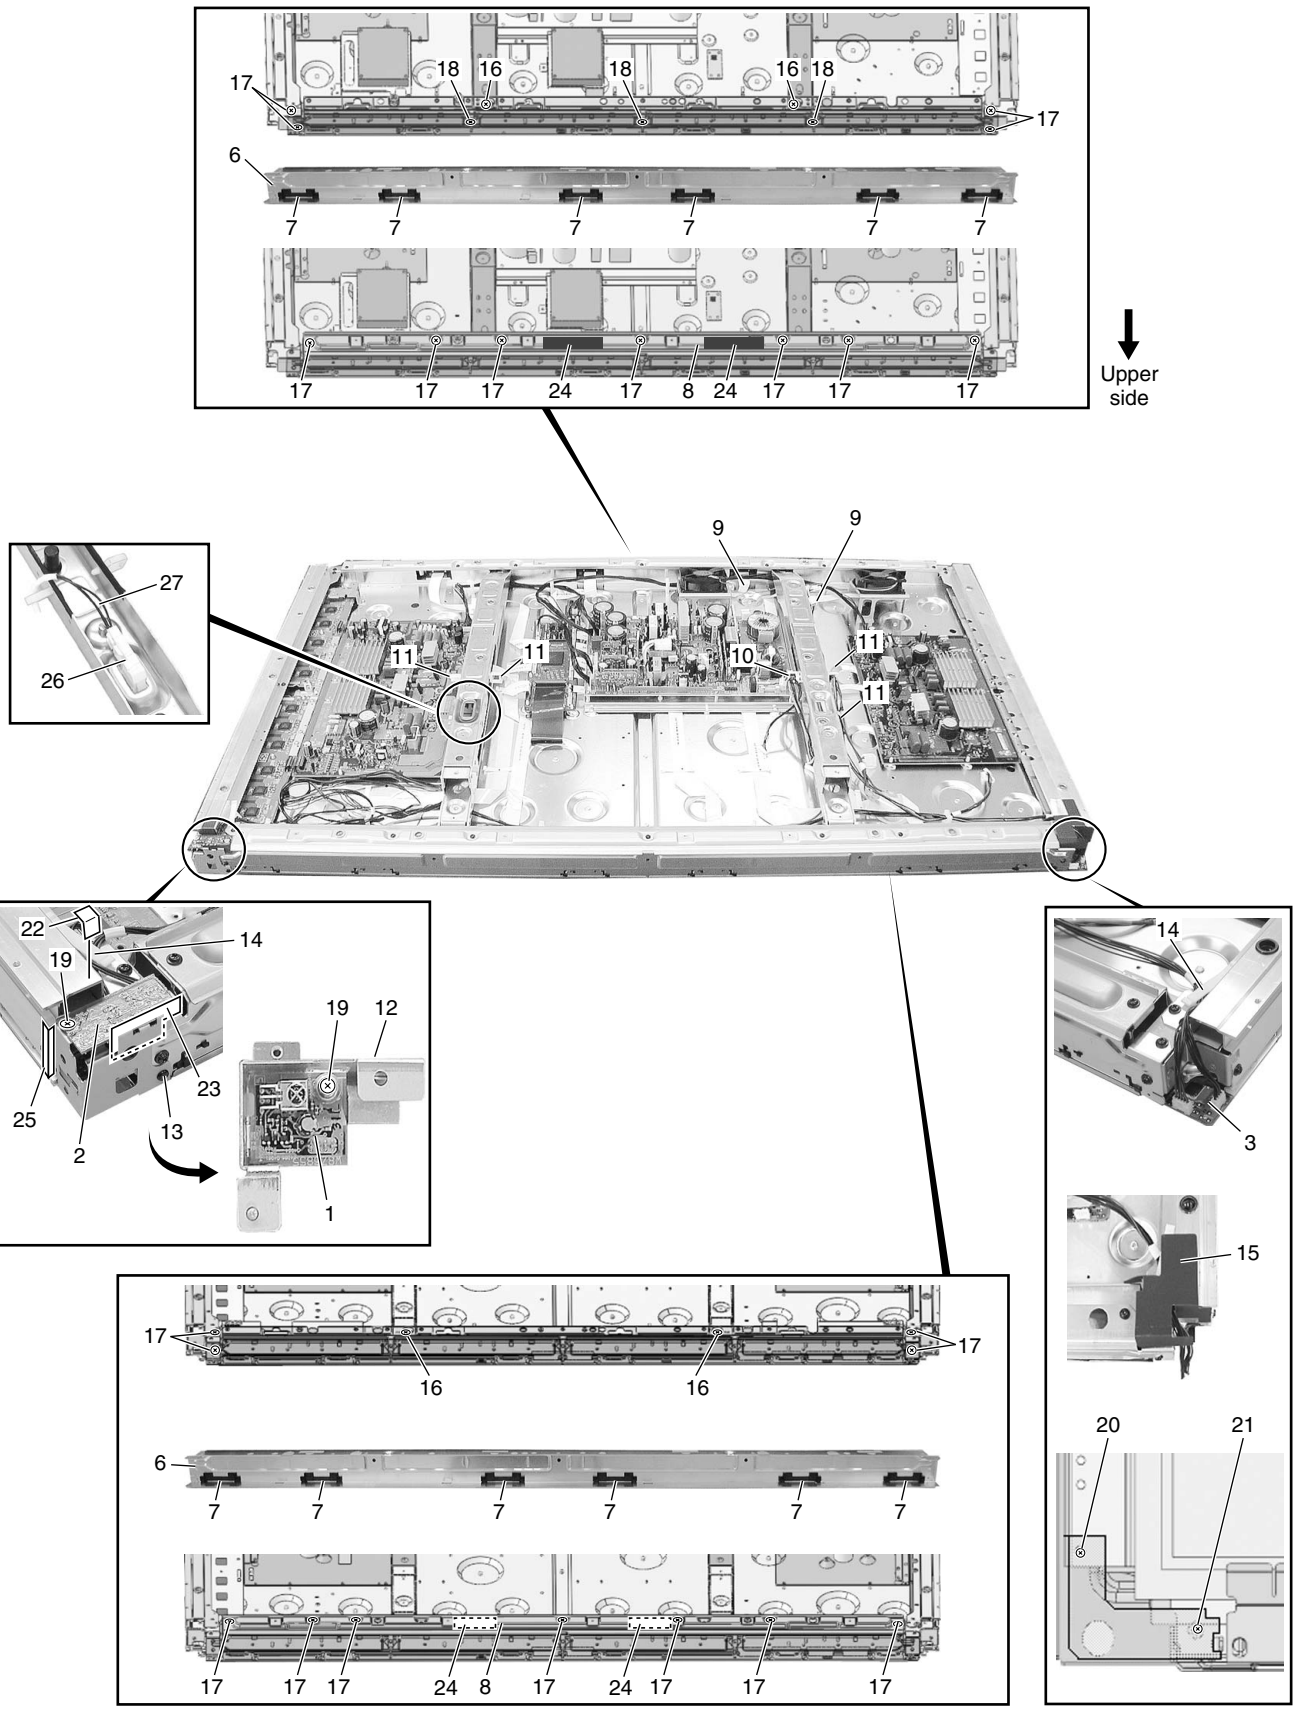

FRAME SECTION parts List

Mark	No.	Description	Part No.
	1	IR RECEIVE Assy	AWZ6855
	2	KEY CONTROL Assy	AWZ6969
	3	LED Assy	AWZ6966
	4	•••••	
	5	•••••	
	6	Front Chassis H (50)	ANA1733
	7	Front Spacer (CMX)	AMR3384
	8	Rear Frame (50M)	ANG2602
	9	Wire Clip	AEC1948
	10	Wire Clip	AEC1992
	11	Wire Saddle	AEC1745
NSP	12	IR Holder	ANG2551
	13	Nylon Rivet	AEC1671
	14	Flat Clamp	AEC1879
	15	Enclosure Sheet 1	AMR3405
	16	Screw	AMZ30P080FTC
	17	Screw	AMZ30P060FZK
	18	Screw	BPZ30P080FTB
	19	Screw	ABZ30P060FMC
	20	Nylon Rivet	AEC1997
	21	Screw	BBZ30P050FMC
	22	Enclosure Sheet 2 (V)	AMR3411
	23	Enclosure Sheet 3	AMR3407
	24	Gasket (CM)	ANK1748
	25	Gasket FC-IR	ANK1758
	26	Power Switch (S2)(TRAP)	ASG1089
	27	3P Housing Wire (J114)	ADX3032

2.2.4 TERMINAL PANEL and REAR SECTION

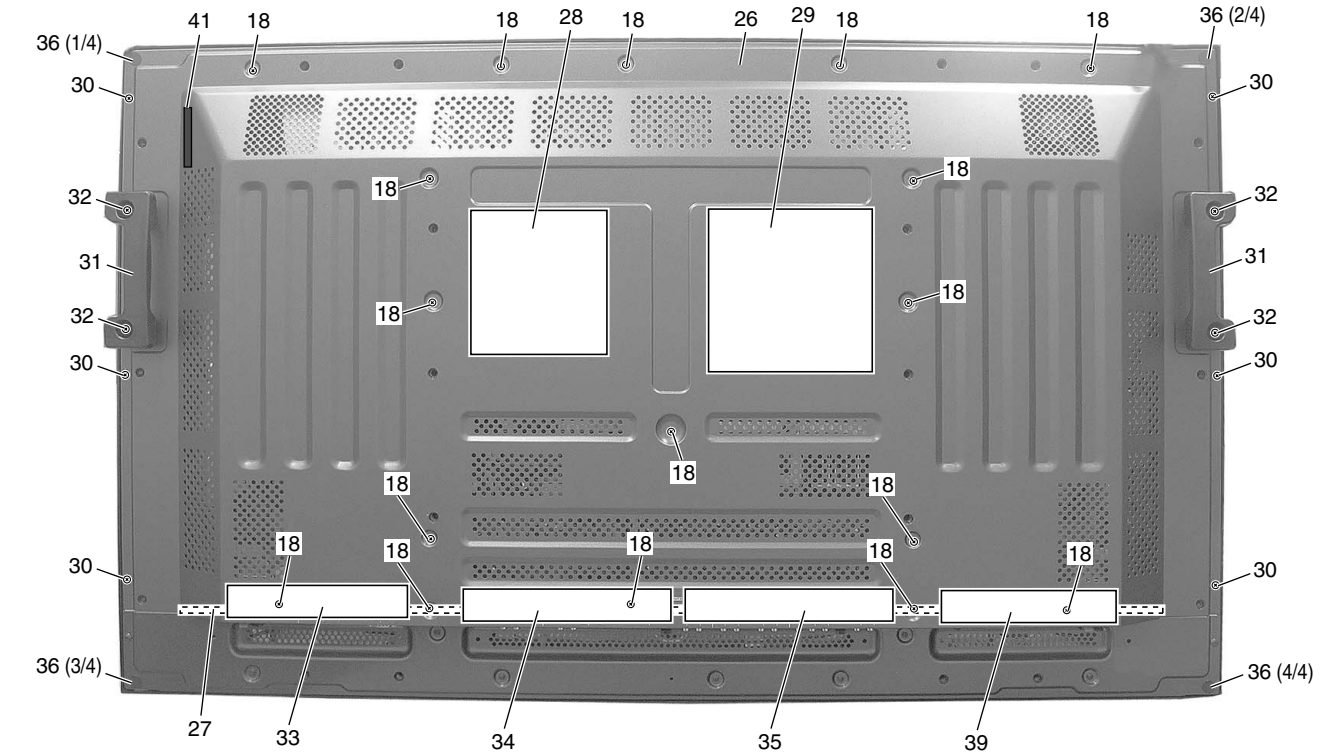

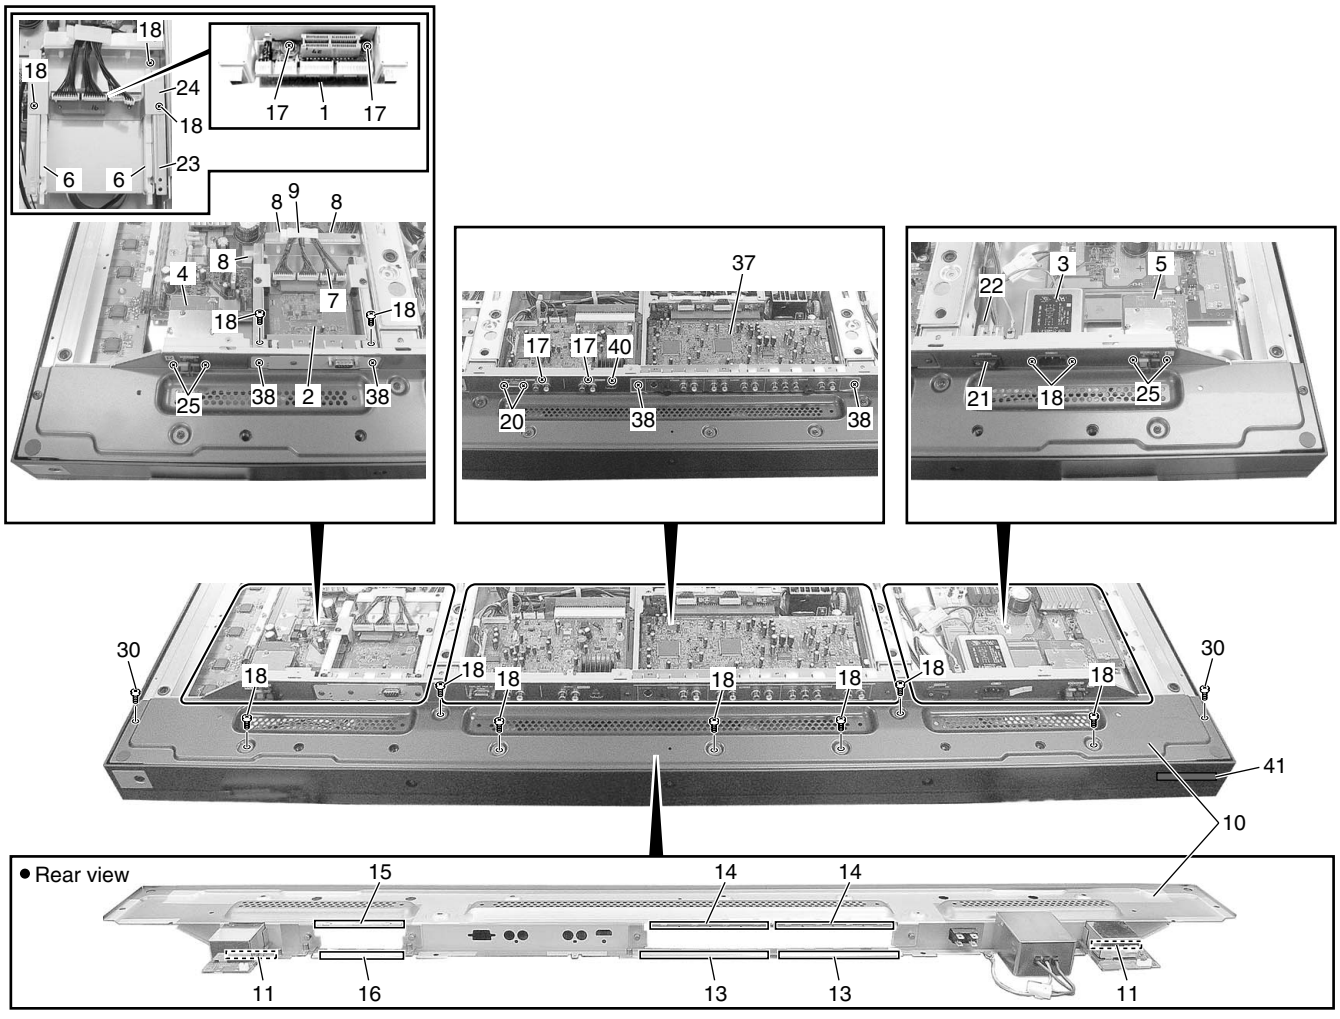

TERMINAL PANEL and REAR SECTION parts List

Mark	No.	Description	Part No.
	1	COMM SLOT I/F Assy	AWZ6964
	2	COMM SLOT Assy	AWZ6968
⚠	3	AC Inlet (CN1)	AKP1244
	4	SP TERMINAL R Assy	AWZ6857
	5	SP TERMINAL L Assy	AWZ6856
	6	Guide Rail EX	AEC1994
	7	6P Housing Wire (J108)	ADX3029
	8	Wire Saddle	AEC1745
	9	Clamp	AEC1884
	10	Terminal Panel (F50)	ANG2685
	11	Gasket SP-T	ANK1750
	12	•••••	
	13	Slot Spring B126	ABK1033
	14	Slot Spring T130	ABK1032
	15	Slot Spring T94	ABK1034
	16	Slot Spring B92	ABK1035
	17	Screw	VBB30P080FNI
	18	Screw	AMZ30P060FZK
	19	•••••	
	20	Hexagon Head Screw	BBA1051
⚠	21	Power Switch (S1)	ASG1094
	22	Housing Wire (MX)(J116)	ADX3058
	23	COMM Stay A	ANG2605
	24	COMM Stay B	ANG2606
	25	Screw	APZ30P080FZK
	26	Rear Case (50M)	ANE1623
	27	Gasket T-R50	ANK1751
NSP	28	Name Label	See Contrast table (2)
	29	Caution Label	AAX3048
	30	Screw	TBZ40P080FZK
	31	Grip	AMR3380
	32	Screw	HMB50P140FZK
	33	Terminal Label R (SF50C)	AAX3126
	34	Terminal Label C (SF50C)	AAX3130
	35	Terminal Label V (CM)	AAX3137
	36	Rear Corner Label (15)	AAX3081
	37	VIDEO SLOT 2 Assy	AWV2159
	38	Screw	ABA1300
	39	Terminal Label L (50M)	AAX3061
	40	Screw	BMZ30P080FZK
	41	Serial Seal	AAX1144

(2) CONTRAST TABLE

PDP-5004/KUCXC and PDP-5014/KUCXC are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-5004/ KUCXC	PDP-5014/ KUCXC
NSP	28	Name Label (SF50C)	AAL2606	Not used
NSP	28	Name Label (SF50S)	Not used	AAL2607

2.2.5 FRONT SECTION

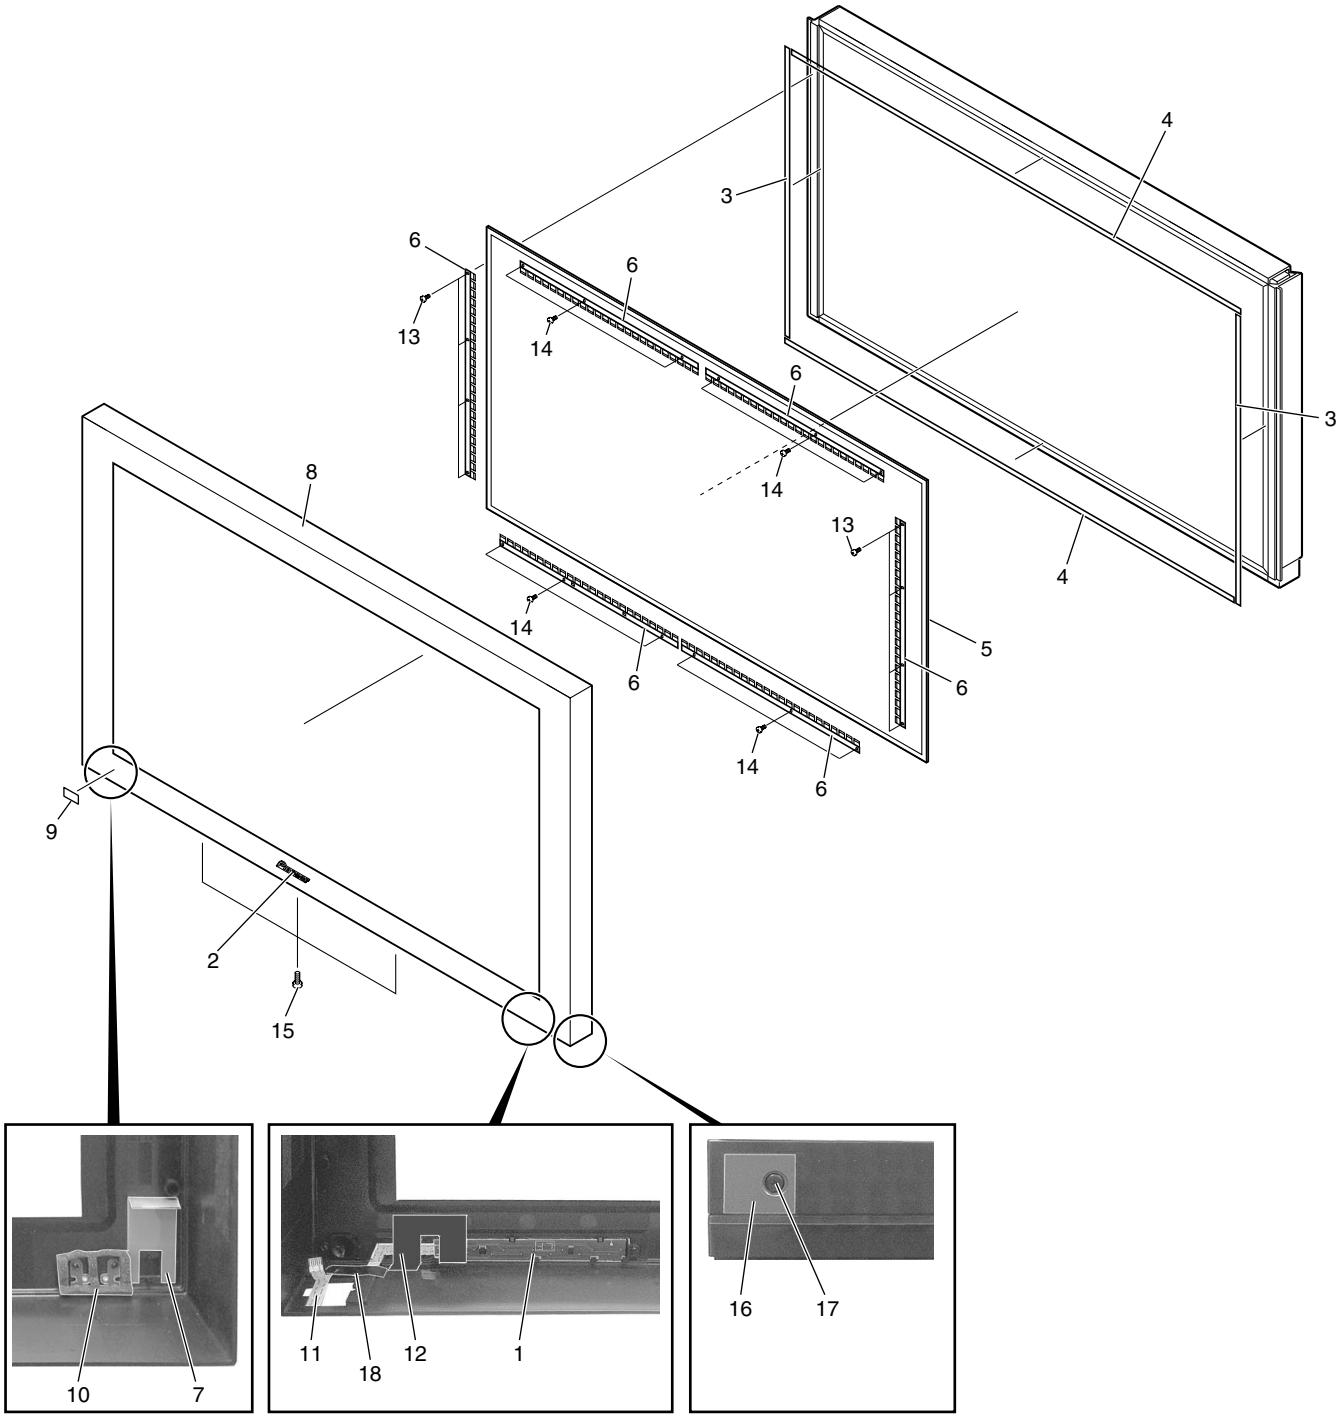

FRONT SECTION parts List

Mark	No.	Description	Part No.
	1	FRONT KEY Assy	AWZ6970
	2	PIONEER Badge	AAM1091
	3	Panel Cushion V	AED1269
	4	Panel Cushion H	AED1270
⚠	5	Protect Panel Assy (50)	AMR3348
	6	Panel Holder (50)	ANG2563
	7	Earth Plate (MX)	AMR3432
	8	Front Case Assy	See Contrast table (2)
NSP	9	Energy Star Label	AAX8022
	10	Blind Cushion	AEB1400
	11	Flexible Cable (J211)	ADD1281
	12	Flexible Seal (P)	AEH1072
	13	Screw	ABZ30P060FMC
	14	Screw	APZ30P080FZK
	15	Screw	APZ30P120FZK
	16	Lead Cover	See Contrast table (2)
	17	Rivet	AEC1877
	18	Flexible Seal (SF)	AEH1082

(2) CONTRAST TABLE

PDP-5004/KUCXC and PDP-5014/KUCXC are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-5004/ KUCXC	PDP-5014/ KUCXC
	8	Front Case Assy (F50C)	AMB2843	Not used
	8	Front Case Assy (F50S)	Not used	AMB2844
	16	Lead Cover (SF)	AMR3436	Not used
	16	Lead Cover (4G)	Not used	AMR3395

2.2.6 PANEL CHASSIS (50) ASSY (AWU1111)

Panel Chassis (50) Assy (AWU1111)

- Parts List

Mark	No.	Description	Part No.
NSP		1..50 ADDRESS Assy	AWV2080
NSP		2..50 ADDRESS Assy	AWZ6870
NSP		1..50 SCAN FUKUGO Assy	AWV2083
NSP		2..50 SCAN A Assy	AWZ6878
NSP		2..50 SCAN B Assy	AWZ6879
NSP		2..X CONNECTOR A Assy	AWZ6880
NSP		2..X CONNECTOR B Assy	AWZ6881
NSP		Address Module (IC1-IC40)	AXF1129
NSP		Plasma Panel Assy (50")	AAV1249
NSP		FPC (50XGA-X)	ADY1084
NSP		FPC (50XGA-Y)	ADY1085
NSP		Chassis Assy (50)	ANA1803
		Edge Card Spacer	AEC1998
		PCB Spacer	AEC1944
		PCB Support	AEC1958
		Rivet	AMR1066
		FC Spacer	AMR3370
NSP		Adhesive	ZBA-KE3424S
NSP		Cleaner	ZLX-AP7
NSP		Tape	ZTA-8101-12
NSP		Double Faced Tape	ZTB-5015-18
NSP		Tape	ZTC-POLYCA-11
NSP		Tape	ZTC-POLYCA-20
NSP		Tape	ZTB-5015-9
NSP		Tape	ZTC-900UL-15
NSP		Silicon Rubber	ZTX-HC20-15
NSP		Wiping Cloth	ZTX-MX100-13
NSP		Film	ZTX-2102Y35-2R5
NSP		Film	ZTX-2102Y45-2R5
NSP		Film	ZTX-2102Y45-5
NSP		Silicon Rubber	ZTX-HC50-15
NSP		Silicon Rubber	ZTC-EM7KBOR85T-15W

2.2.7 PDP SERVICE ASSY (AWU1114)

PDP SERVICE Assy (AWU1114)

• Parts List

Mark	No.	Description	Part No.
NSP		P. Chassis (50) Assy	AWU1111
		Front Chassis H (50)	ANA1733
		F. Chassis VL (50M)	ANA1753
		F. Chassis VR (50M)	ANA1754
		Sub Frame L Assy (50M)	ANG2596
		Sub Frame R Assy (50M)	ANG2598
		Rear Frame (50M)	ANG2602
NSP		SVC.Terminal P504CMX	ANG2680
		Wire Saddle	AEC1745
		PCB Support	AEC1938
		PCB Spacer	AEC1941
		PCB Spacer	AEC1947
		Wire Clip	AEC1948
		Panel Cushion V	AED1269
		Panel Cushion H	AED1270
		Front Spacer (CMX)	AMR3384
		Wire Clip	AEC1992
		Enclosure Sheet 1	AMR3405
		Enclosure Sheet 2 (V)	AMR3411
		Caution Label	AAX3031
NSP		Drive Voltage Label	ARW1097
		Screw	ABZ30P060FTC
		Screw	AMZ30P060FTB
		Screw	AMZ30P080FTC
		Screw	BPZ30P080FTB
		Screw	APZ30P120FTB
		Screw	TBZ40P080FTB
		Screw	VBB30P080FNI
NSP		Front Case (504CMX SVC)	AMB2839
		Rear Case (50M)	ANE1623
		Pad	AHA2280
		Under Carton	AHD3037
NSP		Upper Carton 504CMX S	AHD3256
		Protect Sheet	AHG1331
		SCAN Heatsink	ANH1630
		Sel Plate	ANG2712
NSP		Card Spacer	AEC2013
		SCAN Silicon Sheet	AEH1080
		Gasket (CM)	ANK1748
		Rear Corner Label (15)	AAX3081

2.3 PDP-4304, PDP-4314 models

2.3.1 CHASSIS SECTION (1)

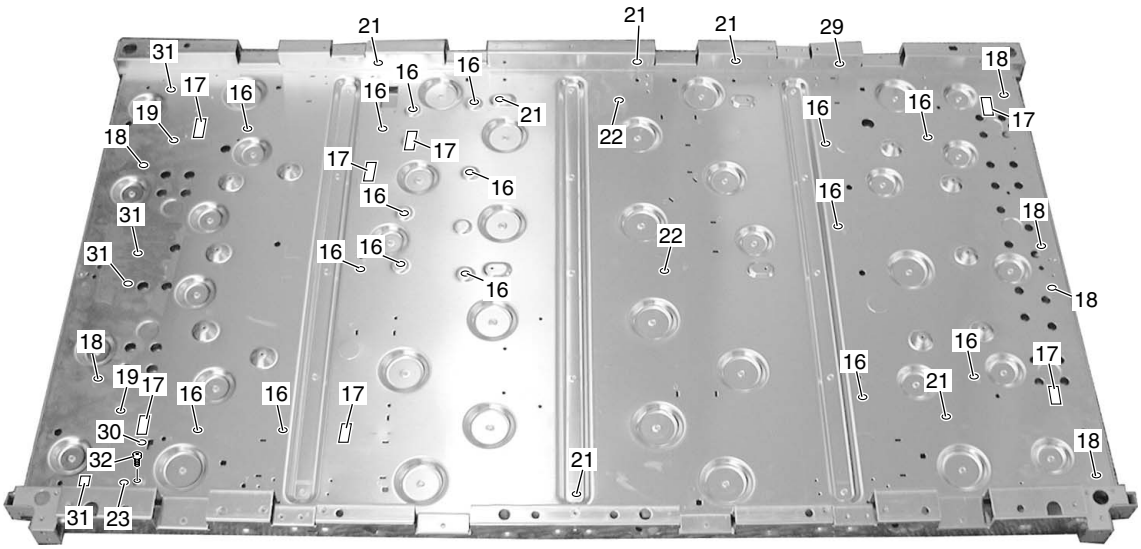

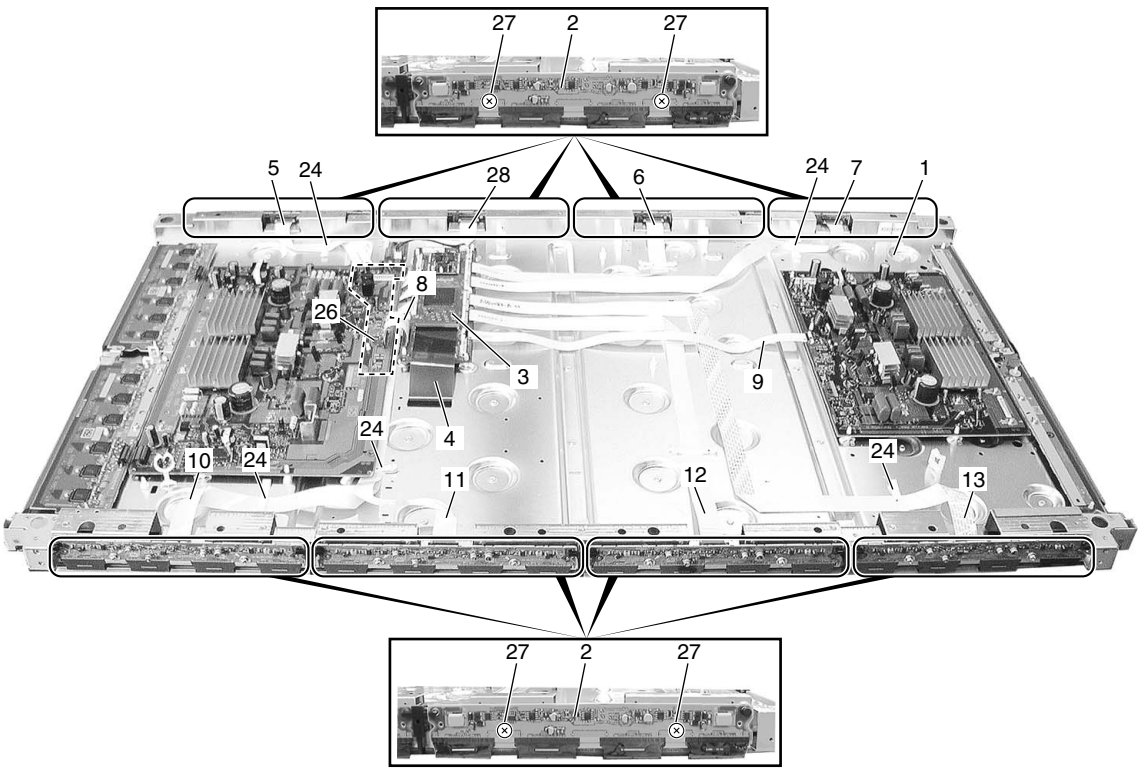

CHASSIS SECTION (1) parts List

Mark	No.	Description	Part No.
NSP	1	P. Chassis (43) Assy	AWU1112
NSP	2	43 ADDRESS Assy	AWZ6862
	3	DIGITAL VIDEO Assy	AWV2169
	4	FPC (114P)	ADY1081
	5	Flexible Cable (J201)	ADD1257
	6	Flexible Cable (J203)	ADD1259
	7	Flexible Cable (J204)	ADD1260
	8	Flexible Cable (J209)	ADD1223
	9	Flexible Cable (J210)	ADD1224
	10	Flexible Cable (J205)	ADD1261
	11	Flexible Cable (J206)	ADD1262
	12	Flexible Cable (J207)	ADD1263
	13	Flexible Cable (J208)	ADD1282
	14	•••••	
	15	•••••	
	16	PCB Spacer	AEC1941
	17	PCB Support	AEC1938
	18	PCB Spacer	AEC1944
	19	PCB Support	AEC1958
	20	•••••	
	21	Wire Saddle	AEC1745
	22	PCB Spacer	AEC1947
	23	Wire Clip	AEC1948
	24	Flat Clamp	AEC1879
	25	•••••	
	26	Y Drive Protect Sheet	AMR3346
	27	Screw	VBB30P080FNI
	28	Flexible Cable (J202)	ADD1258
	29	Wire Clip	AEC1992
	30	HL 18	AEC1980
	31	Edge Card Spacer	AEC1998
	32	Screw	ABZ30P060FMC

2.3.2 CHASSIS SECTION (2)

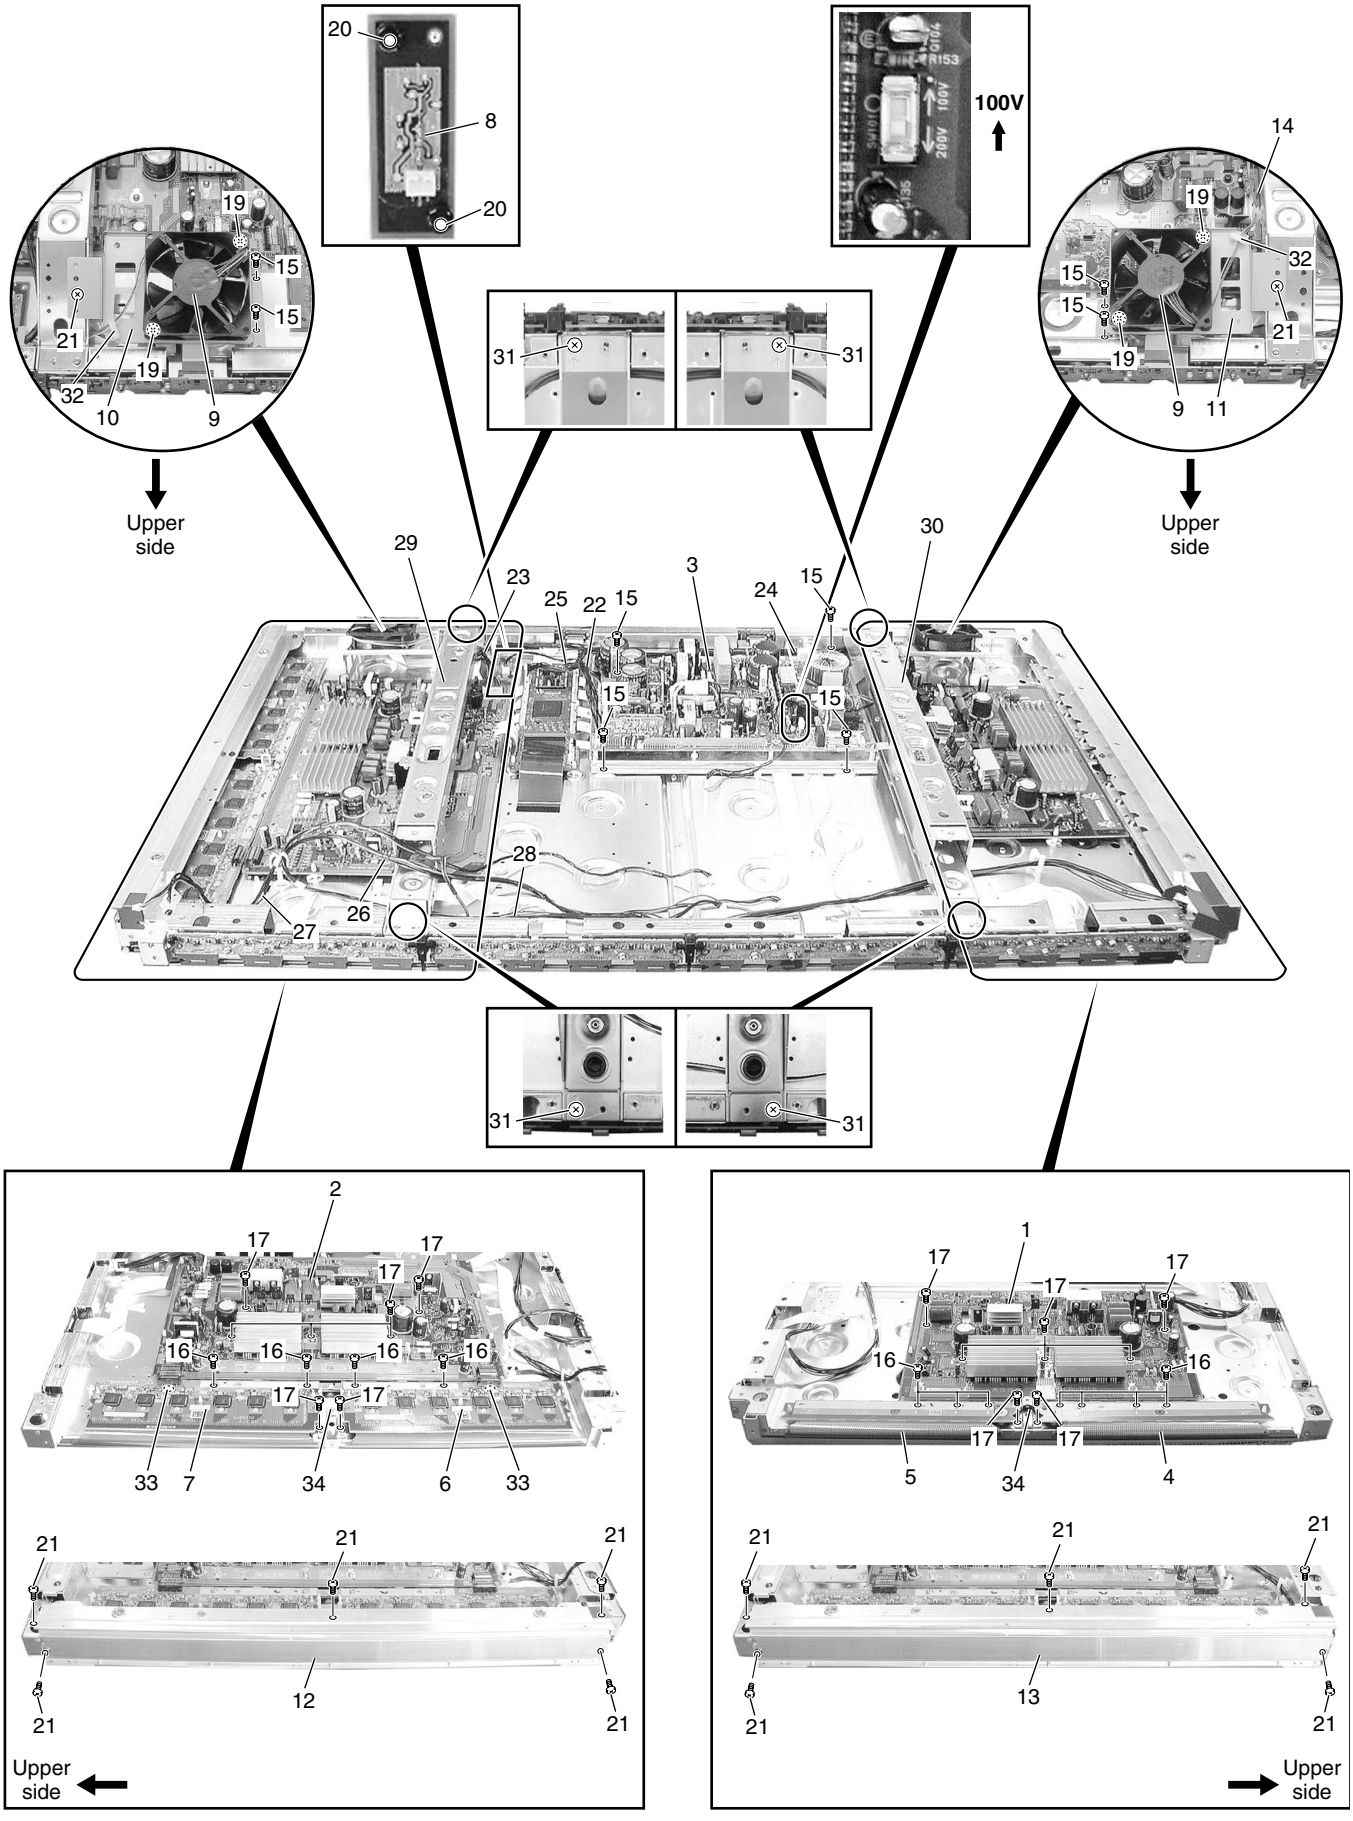

CHASSIS SECTION (2) parts List

Mark	No.	Description	Part No.
	1	43 X DRIVE Assy	AWZ6865
	2	43 Y DRIVE Assy	AWV2078
⚠	3	POWER SUPPLY Unit	AXY1083
NSP	4	X CONNECTOR B Assy	AWZ6876
NSP	5	X CONNECTOR A Assy	AWZ6875
NSP	6	43 SCAN A Assy	AWZ6873
NSP	7	43 SCAN B Assy	AWZ6874
	8	PANEL SENSOR Assy	AWZ6872
	9	Fan Motor (80 x 25)	AXM1044
	10	Fan Angle L (43M)	ANG2655
	11	Fan Angle R (43M)	ANG2656
	12	F. Chassis VL (43M)	ANA1755
	13	F. Chassis VR (43M)	ANA1756
	14	Housing Wire (J117)	ADX2904
	15	Screw	ABZ30P060FMC
	16	Screw	PMB30P060FNI
	17	Screw	VBB30P080FNI
	18	•••••	
	19	Screw	PPZ50P100FZK
	20	Nylon Rivet	AEC1671
	21	Screw	AMZ30P060FZK
	22	3P Housing Wire (J109)	ADX3006
	23	11P Housing Wire (J102)	ADX3005
	24	12P Housing Wire (J103)	ADX2841
	25	Wire A (J101)	ADX3004
	26	Wire G (J118)	ADX3034
	27	Wire F (J119)	ADX3035
	28	9P Housing Wire (J115)	ADX2902
	29	SUB Frame L Assy (43M)	ANG2623
	30	SUB Frame R Assy (43M)	ANG2625
	31	Screw	AMZ30P080FZK
	32	Wire Clip	AEC1948
NSP	33	Card Spacer	AEC2013
	34	Sel Plate	ANG2712

2.3.3 FRAME SECTION

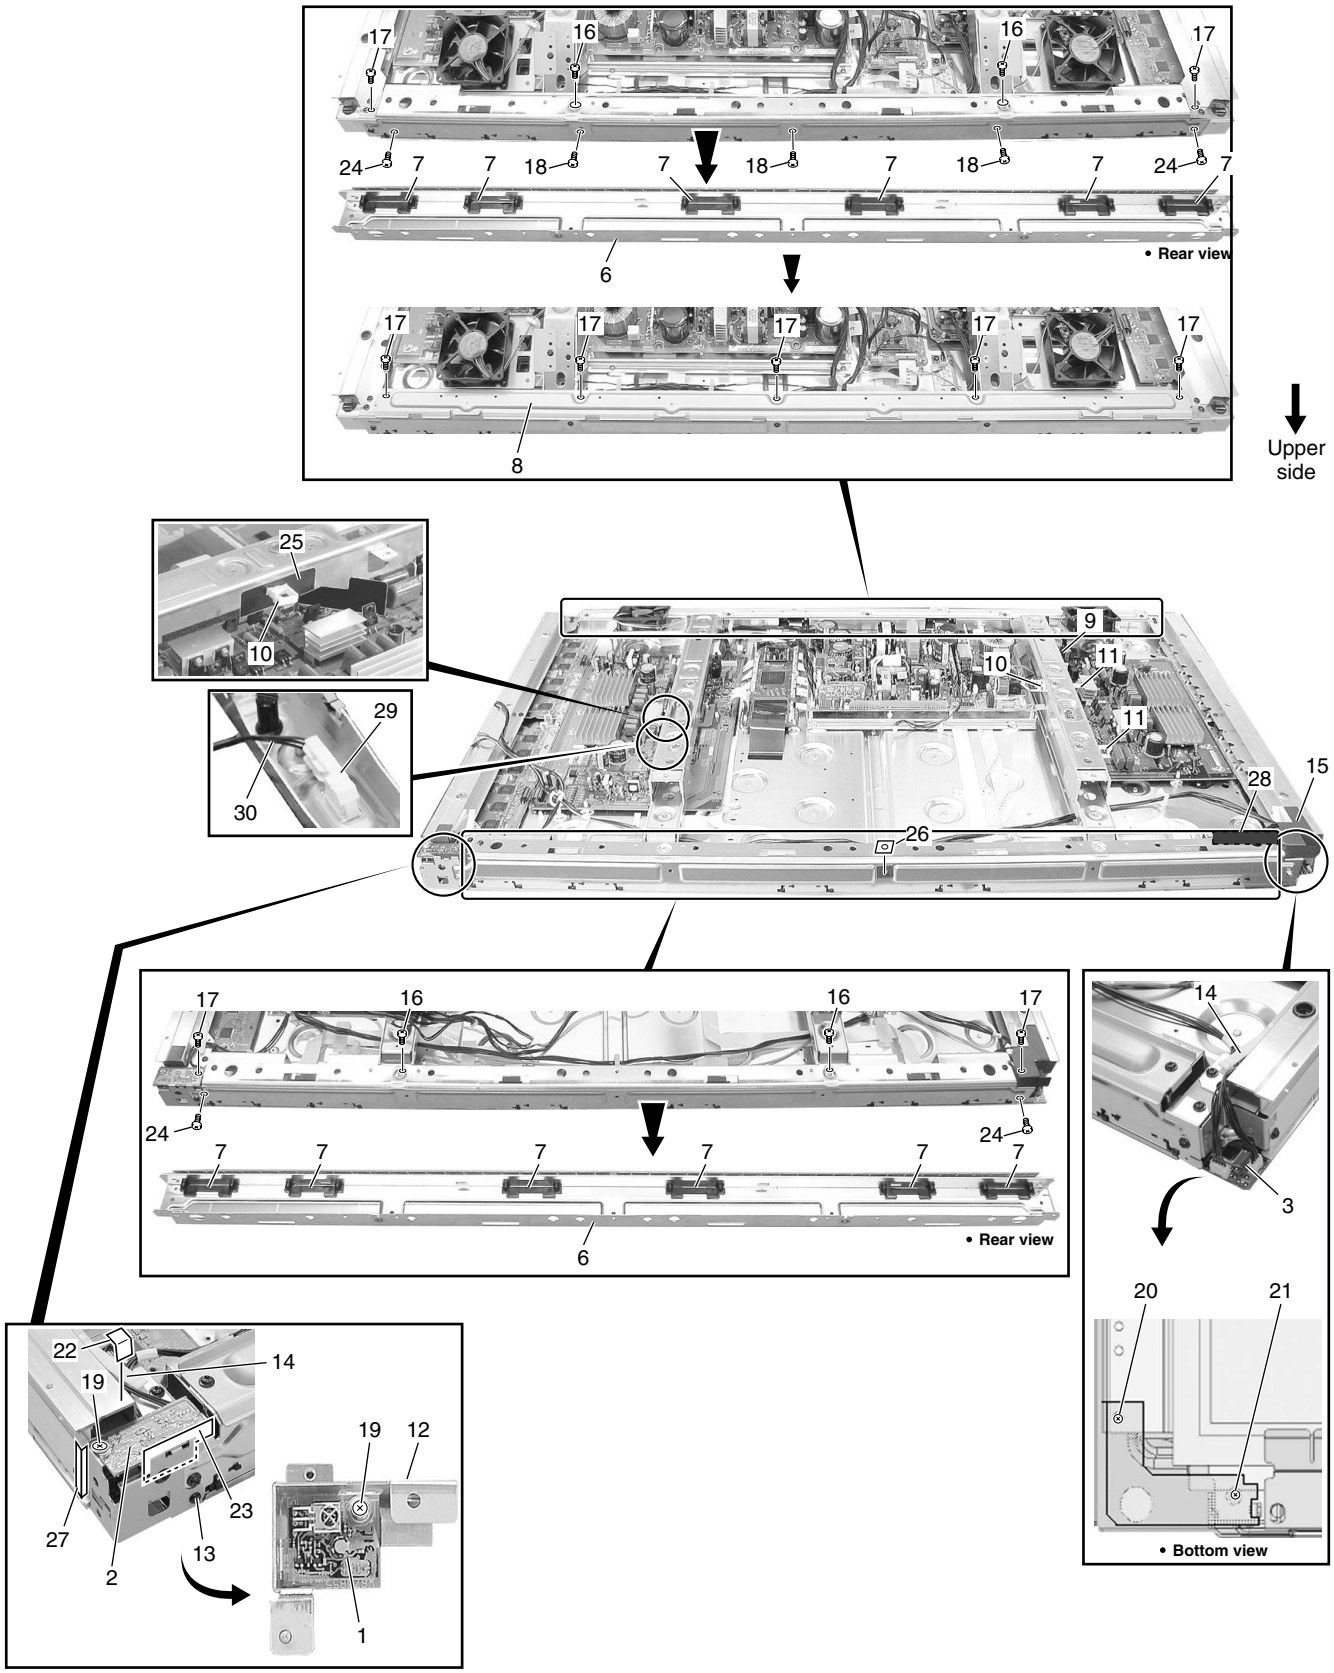

FRAME SECTION parts List

Mark	No.	Description	Part No.
	1	IR RECEIVE Assy	AWZ6855
	2	KEY CONTROL Assy	AWZ6969
	3	LED Assy	AWZ6966
	4	•••••	
	5	•••••	
	6	Front Chassis H (43)	ANA1714
	7	Front Spacer (CMX)	AMR3384
	8	Rear Frame (43M)	ANG2613
	9	Wire Clip	AEC1948
	10	Wire Clip	AEC1992
	11	Wire Saddle	AEC1745
NSP	12	IR Holder	ANG2551
	13	Nylon Rivet	AEC1671
	14	Flat Clamp	AEC1879
	15	Enclosure Sheet 1	AMR3405
	16	Screw	AMZ30P080FTC
	17	Screw	AMZ30P060FZK
	18	Screw	BPZ30P080FTB
	19	Screw	ABZ30P060FMC
	20	Nylon Rivet	AEC1997
	21	Screw	BBZ30P050FMC
	22	Enclosure Sheet 2 (V)	AMR3411
	23	Enclosure Sheet 3	AMR3407
	24	Screw	PMB30P060FNI
	25	Cable Gard	AMR3439
NSP	26	Front Case Spacer	AMR3430
	27	Gusket FC-IR	ANK1758
	28	Gusket FC-T	ANK1757
	29	Power Switch (S2)(TRAP)	ASG1089
	30	3P Housing Wire (J114)	ADX3036

A B C D E F

2.3.4 TERMINAL PANEL and REAR SECTION

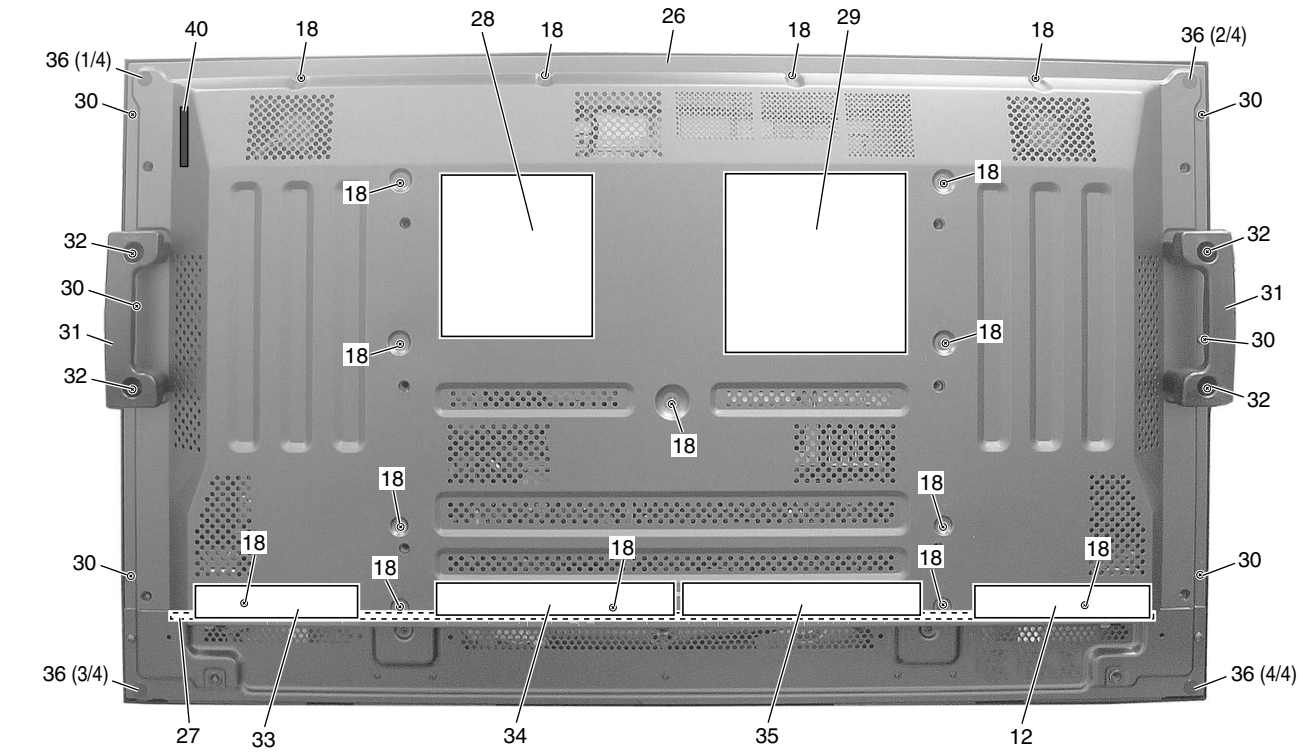

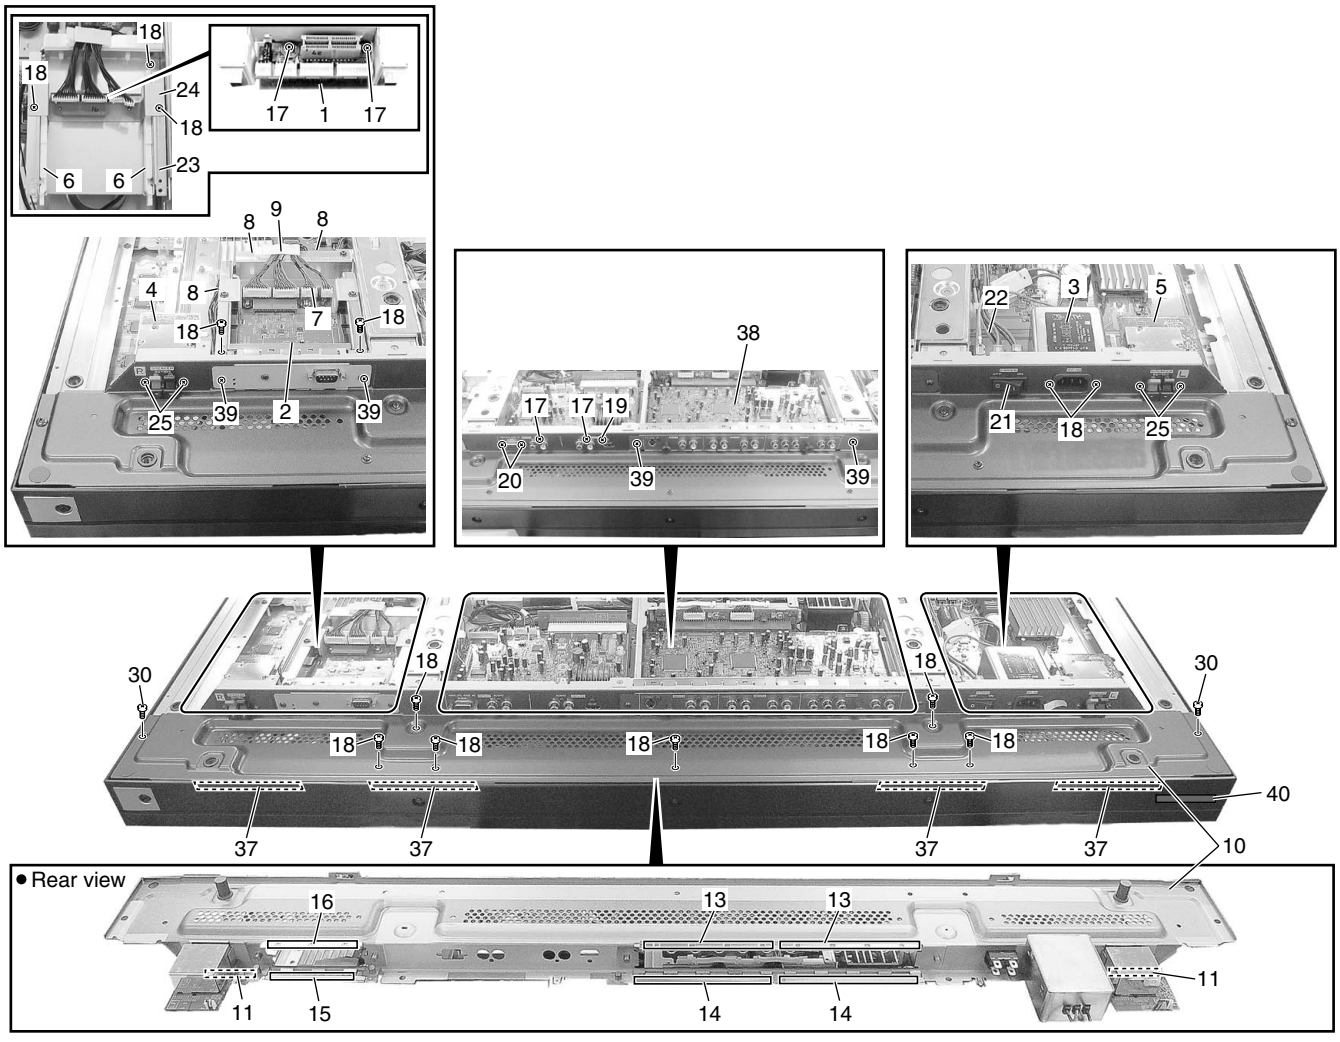

TERMINAL PANEL and REAR SECTION parts List

Mark	No.	Description	Part No.
	1	COMM SLOT I/F Assy	AWZ6964
	2	COMM SLOT Assy	AWZ6968
⚠	3	AC Inlet (CN1)	AKP1244
	4	SP TERMINAL R Assy	AWZ6857
	5	SP TERMINAL L Assy	AWZ6856
	6	Guide Rail EX	AEC1994
	7	6P Housing Wire (J108)	ADX3033
	8	Wire Saddle	AEC1745
	9	Clamp	AEC1884
	10	Terminal Panel (F43)	ANG2735
	11	Gasket SP-T	ANK1750
	12	Terminal Label L (43M)	AAX3062
	13	Slot Spring B126	ABK1033
	14	Slot Spring T130	ABK1032
	15	Slot Spring T94	ABK1034
	16	Slot Spring B92	ABK1035
	17	Screw	VBB30P080FNI
	18	Screw	AMZ30P060FZK
	19	Screw	BMZ30P080FZK
	20	Hexagon Head Screw	BBA1051
⚠	21	Power Switch (S1)	ASG1094
	22	Housing Wire (MX)(J116)	ADX3058
	23	COMM Stay A	ANG2605
	24	COMM Stay B	ANG2606
	25	Screw	APZ30P080FZK
	26	Rear Case (43M)	ANE1624
	27	Gasket T-R43	ANK1754
NSP	28	Name Label	See Contrast table (2)
	29	Caution Label (M)	AAX3048
	30	Screw	TBZ40P080FZK
	31	Grip	AMR3380
	32	Screw	HMB50P140FZK
	33	Terminal Label R (SF43C)	AAX3128
	34	Terminal Label C (SF43C)	AAX3130
	35	Terminal Label V (CM)	AAX3137
	36	Rear Corner Label (15)	AAX3081
	37	Spacer	AMR3433
	38	VIDEO SLOT 2 Assy	AWV2159
	39	Screw	ABA1300
	40	Serial Seal	AAX1144

(2) CONTRAST TABLE

PDP-4304/KUCXC and PDP-4314/KUCXC are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-4304/ KUCXC	PDP-4314/ KUCXC
NSP	28	Name Label (SF43C)	AAL2609	Not used
NSP	28	Name Label (SF43S)	Not used	AAL2610

2.3.5 FRONT SECTION

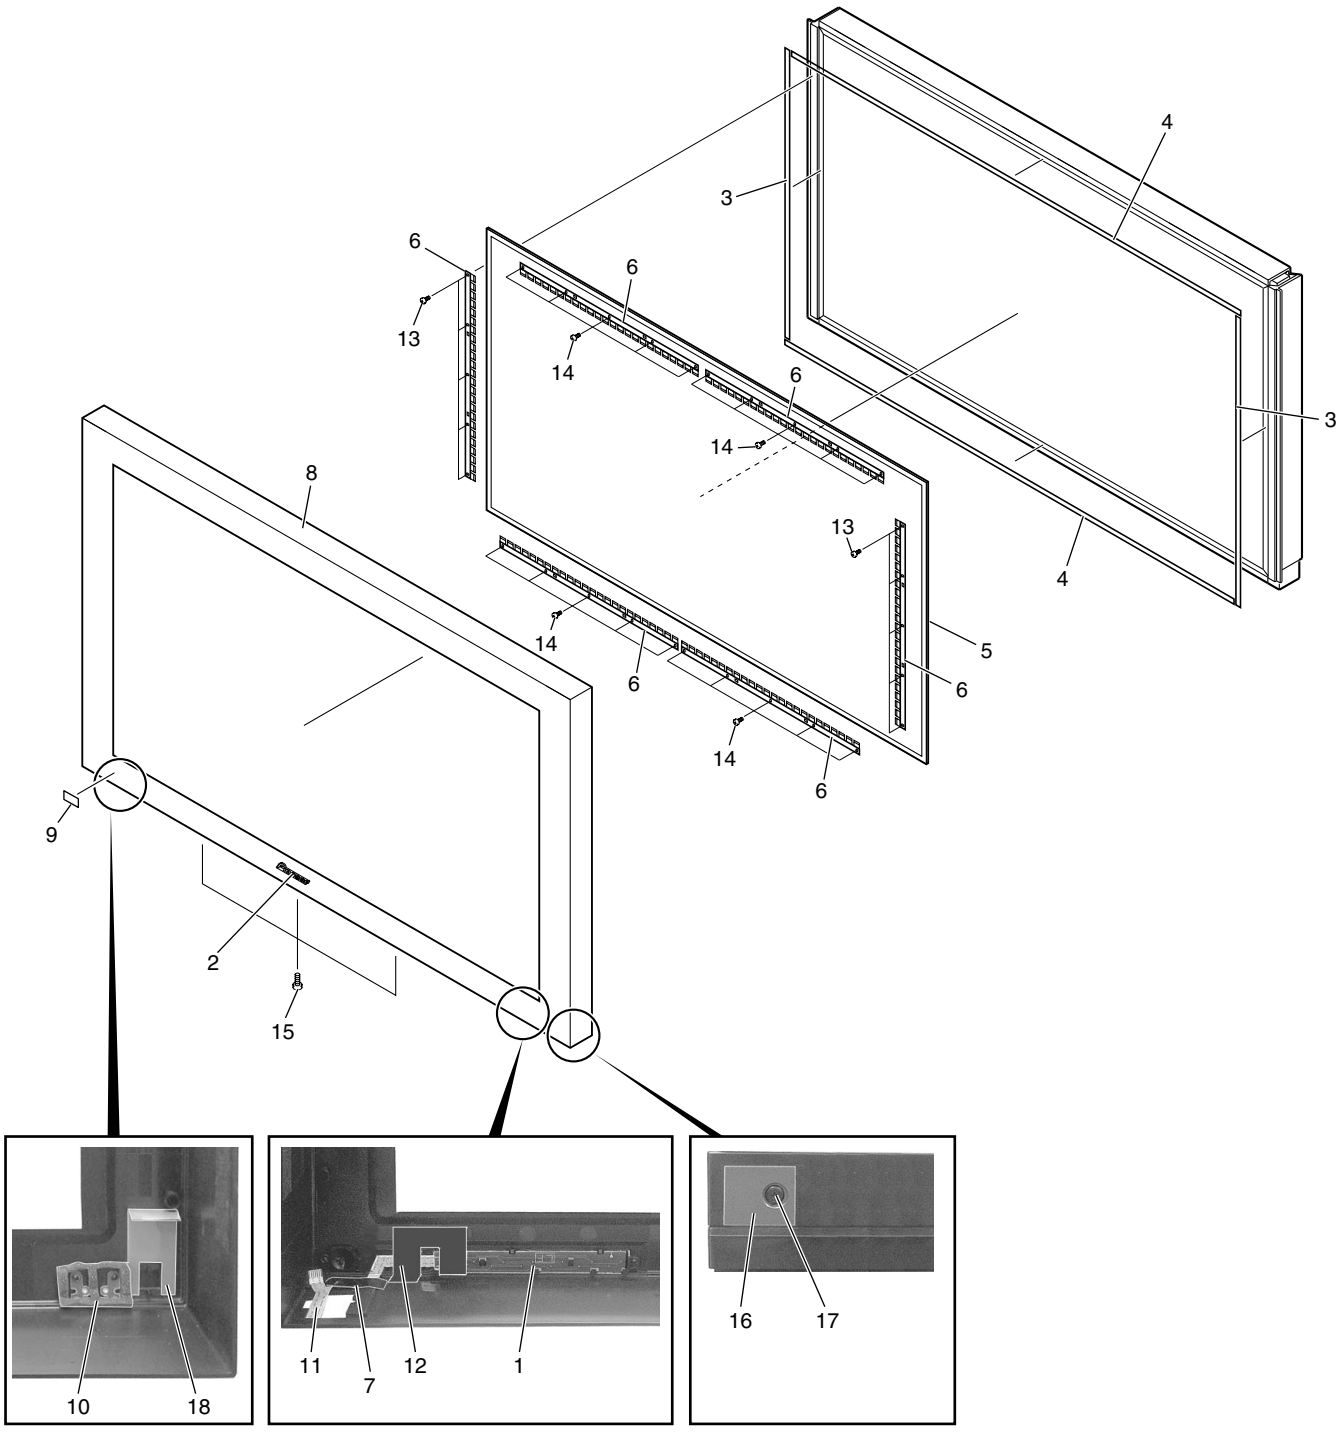

FRONT SECTION (1) parts List

Mark	No.	Description	Part No.
	1	FRONT KEY Assy	AWZ6970
	2	Pioneer Name Plate	AAM1091
	3	Panel Cushion V (43M)	AED1254
	4	Panel Cushion H (43M)	AED1253
⚠	5	Protect Panel Assy (43)	AMR3345
NSP	6	Panel Holder (43)	ANG2552
	7	Flexible Seal (SF)	AEH1082
	8	Front Case Assy	See Contrast table (2)
NSP	9	Energy Star Label	AAX8022
	10	Blind Cushion	AEB1400
	11	Flexible Cable (J211)	ADD1281
	12	Flexible Seal (P)	AEH1072
	13	Screw	ABZ30P060FMC
	14	Screw	APZ30P080FZK
	15	Screw	APZ30P120FZK
	16	Lead Cover	See Contrast table (2)
	17	Rivet	AEC1877
	18	Earth Plate (MX)	AMR3432

(2) CONTRAST TABLE

PDP-4304/KUC and PDP-4314/KUC are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-4304/ KUCXC	PDP-4314/ KUCXC
	8	Front Case Assy (F43C)	AMB2846	Not used
	8	Front Case Assy (F43S)	Not used	AMB2847
	16	Lead Cover (SF)	AMR3436	Not used
	16	Lead Cover (4G)	Not used	AMR3395

2.3.6 PANEL CHASSIS (43) ASSY (AWU1112)

Panel Chassis (43) Assy (AWU1112)

• Parts List

Mark	No.	Description	Part No.
NSP		1..43 ADDRESS Assy	AWV2076
NSP		2..43 ADDRESS Assy	AWZ6862
NSP		1..43 SCAN FUKUGO Assy	AWV2079
NSP		2..43 SCAN A Assy	AWZ6873
NSP		2..43 SCAN B Assy	AWZ6874
NSP		2..X CONNECTOR A Assy	AWZ6875
NSP		2..X CONNECTOR B Assy	AWZ6876
NSP		Address Module (IC1-IC32)	AXF1126
NSP		Plasma Panel Assy (43")	AAV1248
NSP		FPC (43XGA-X)	ADY1079
NSP		FPC (43XGA-Y)	ADY1080
NSP		Chassis Assy (435)	ANA1802
		Edge Card Spacer	AEC1998
		PCB Spacer	AEC1944
		PCB Support	AEC1958
		Rivet	AMR1066
		FC Spacer	AMR3370
NSP		Adhesive	ZBA-KE3424S
NSP		Cleaner	ZLX-AP7
NSP		Tape	ZTA-8101-12
NSP		Double Faced Tape	ZTB-5015-18
NSP		Tape	ZTC-POLYCA-11
NSP		Tape	ZTC-POLYCA-20
NSP		Tape	ZTB-5015-9
NSP		Tape	ZTC-900UL-15
NSP		Silicon Rubber	ZTX-HC20-15
NSP		Wiping Cloth	ZTX-MX100-13
NSP		Film	ZTX-2102Y35-2R5
NSP		Film	ZTX-2102Y45-2R5
NSP		Film	ZTX-2102Y45-5
NSP		Silicon Rubber	ZTX-HC50-15
NSP		Silicon Rubber	ZTC-EM7KBOR85T-15W

2.3.7 PDP SERVICE ASSY (AWU1115)

PDP SERVICE Assy (AWU1115)

• Parts List

Mark	No.	Description	Part No.
NSP		P. Chassis (43) Assy	AWU1112
		Front Chassis H (43)	ANA1714
		F. Chassis VL (43M)	ANA1755
		F. Chassis VR (43M)	ANA1756
		Sub Frame L Assy (43M)	ANG2623
		Sub Frame R Assy (43M)	ANG2625
		Rear Frame (43M)	ANG2613
NSP		SVC.Terminal P434CMX	ANG2701
		Wire Saddle	AEC1745
		PCB Support	AEC1938
		PCB Spacer	AEC1941
		PCB Spacer	AEC1947
		Wire Clip	AEC1948
		Wire Clip	AEC1992
		Panel Cushion H (43M)	AED1253
		Panel Cushion V (43M)	AED1254
		Front Spacer (CMX)	AMR3384
		Y Drive Protect Sheet	AMR3346
		Enclosure Sheet 1	AMR3405
		Enclosure Sheet 2 (V)	AMR3411
NSP		Front Case Spacer	AMR3430
		Cable Gard	AMR3439
		Caution Label	AAX3031
NSP		Drive Voltage Label	ARW1097
		Screw	ABZ30P060FTC
		Screw	AMZ30P060FTB
		Screw	AMZ30P080FTC
		Screw	BPZ30P080FTB
		Screw	APZ30P120FTB
		Screw	TBZ40P080FTB
		Screw	VBB30P080FNI
		Screw	PMB30P060FNI
NSP		Front Case (434CMX SVC)	AMB2840
		Rear Case (43M)	ANE1624
		Pad	AHA2282
		Pad	AHA2283
		Carton	AHD3100
NSP		Upper Carton 434CMX S	AHD3257
		Protect Sheet	AHG1331
		Sel Plate	ANG2712
		HL18	AEC1980
NSP		Card Spacer	AEC2013
		Gasket FC-T	ANK1757

2.4 MULTI BASE SECTION for PDP-5004, PDP-5014, PDP-4304 and PDP-4314

2.4.1 MULTI BASE SECTION

Note : This illustration is PDP-5004.

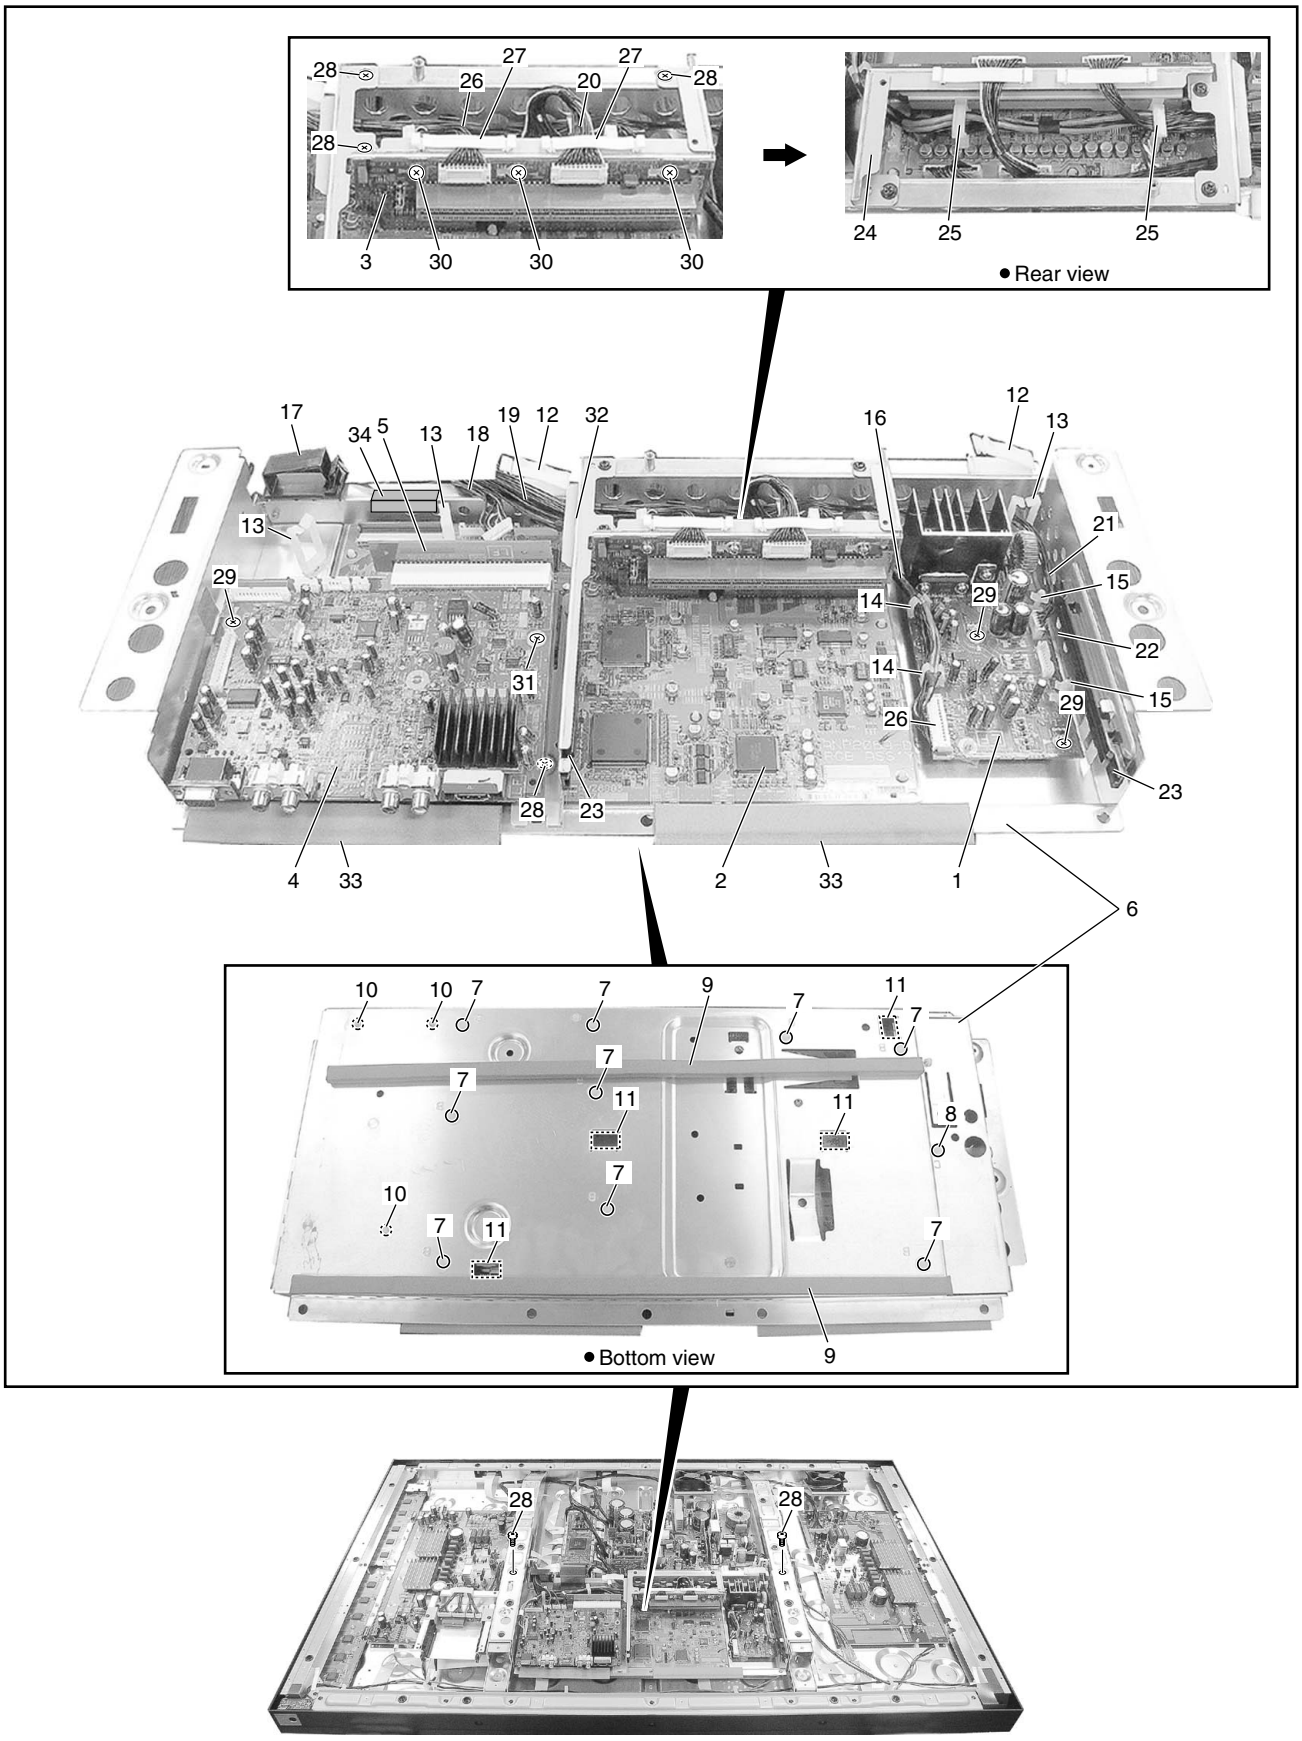

MULTI BASE SECTION parts List

Mark	No.	Description	Part No.
	1	AUDIO AMP Assy	AWZ6848
	2	RGB Assy	AWZ6993
	3	VIDEO SLOT I/F Assy	AWZ6851
	4	AV I/O Assy	See Contrast table (2)
	5	AV I/O I/F Assy	AWZ6859
	6	Multi Base (CMX)	ANA1757
	7	PCB Holder	AEC1088
	8	PCB Spacer	AEC1991
	9	Gasket C-M	ANK1752
	10	Locking Card Spacer	AEC1429
	11	Ground Finger	ANG2468
	12	Clamp	AEC1884
	13	Wire Saddle	AEC1989
	14	Mini Clamp	AEC1971
	15	Double Locking Spacer	AEC1988
	16	15P/16P Housing Wire (J106)	ADX3028
	17	Cable Clamp	AEC1707
	18	10/11P Housing Wire (J110)	See Contrast table (2)
	19	10P Housing Wire (J113)	ADX3060
	20	12P Housing Wire (J112)	ADX3056
	21	13P/6P Housing Wire (J104)	ADX3061
	22	COVER Assy	AWZ6858
	23	Guide Rail EX	AEC1994
	24	Slot Stay	ANG2608
	25	Wire Saddle	AEC1745
	26	11P Housing Wire (J111)	See Contrast table (2)
	27	Flat Clamp	AEC1879
	28	Screw	AMZ30P060FZK
	29	Screw	PMB30P060FNI
	30	Screw	VBB30P080FNI
	31	Pin Grommet	AEC1015
	32	Video Stay	ANG2607
	33	Gasket M-T 150	See Contrast table (2)
	34	Shield Sheet	AEC2004

(2) CONTRAST TABLE

PDP-5004/KUCXC, PDP-5014/KUCXC, PDP-4304/KUCXC and PDP-4314/KUCXC are constructed the same except for the following:

Mark	No.	Symbol and Description	PDP-5004/ KUCXC	PDP-5014/ KUCXC	PDP-4304/ KUCXC	PDP-4314/ KUCXC
	4	AV I/O Assy	AWZ6967	AWZ6971	AWZ6967	AWZ6971
	18	10/11P Housing Wire (J110)	ADX3054	ADX3054	ADX2912	ADX2912
	26	11P Housing Wire (J111)	ADX3055	ADX3055	ADX2913	ADX2913
	33	Gasket M-T 150	ANK1753	ANK1753	ANK1755	ANK1755

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

3.1.1 OVERALL BLOCK DIAGRAM (1/2) for PDP-5004 and PDP-5014 models

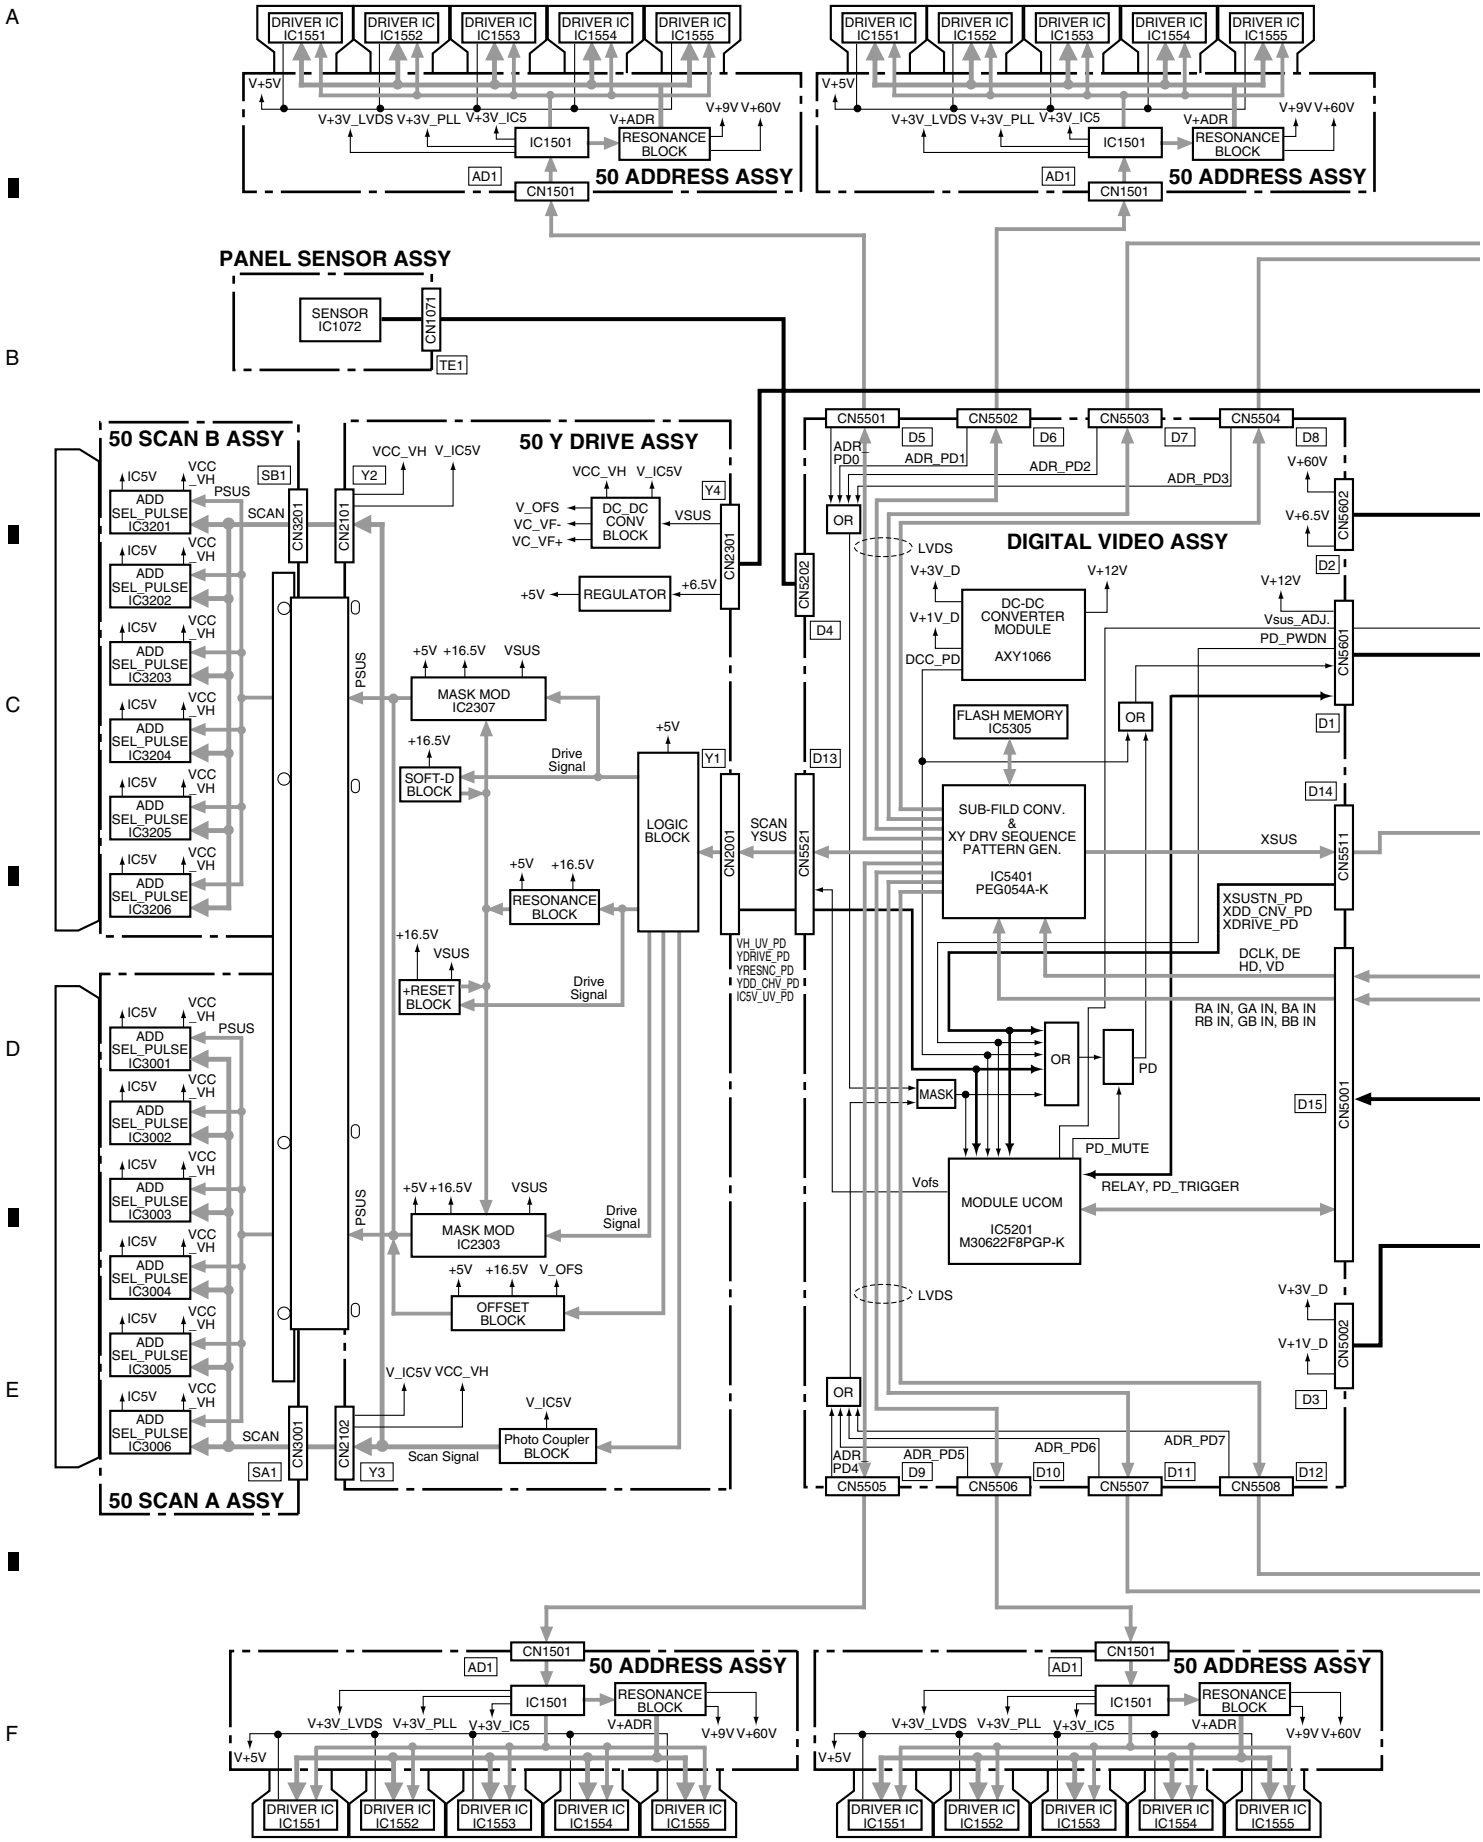

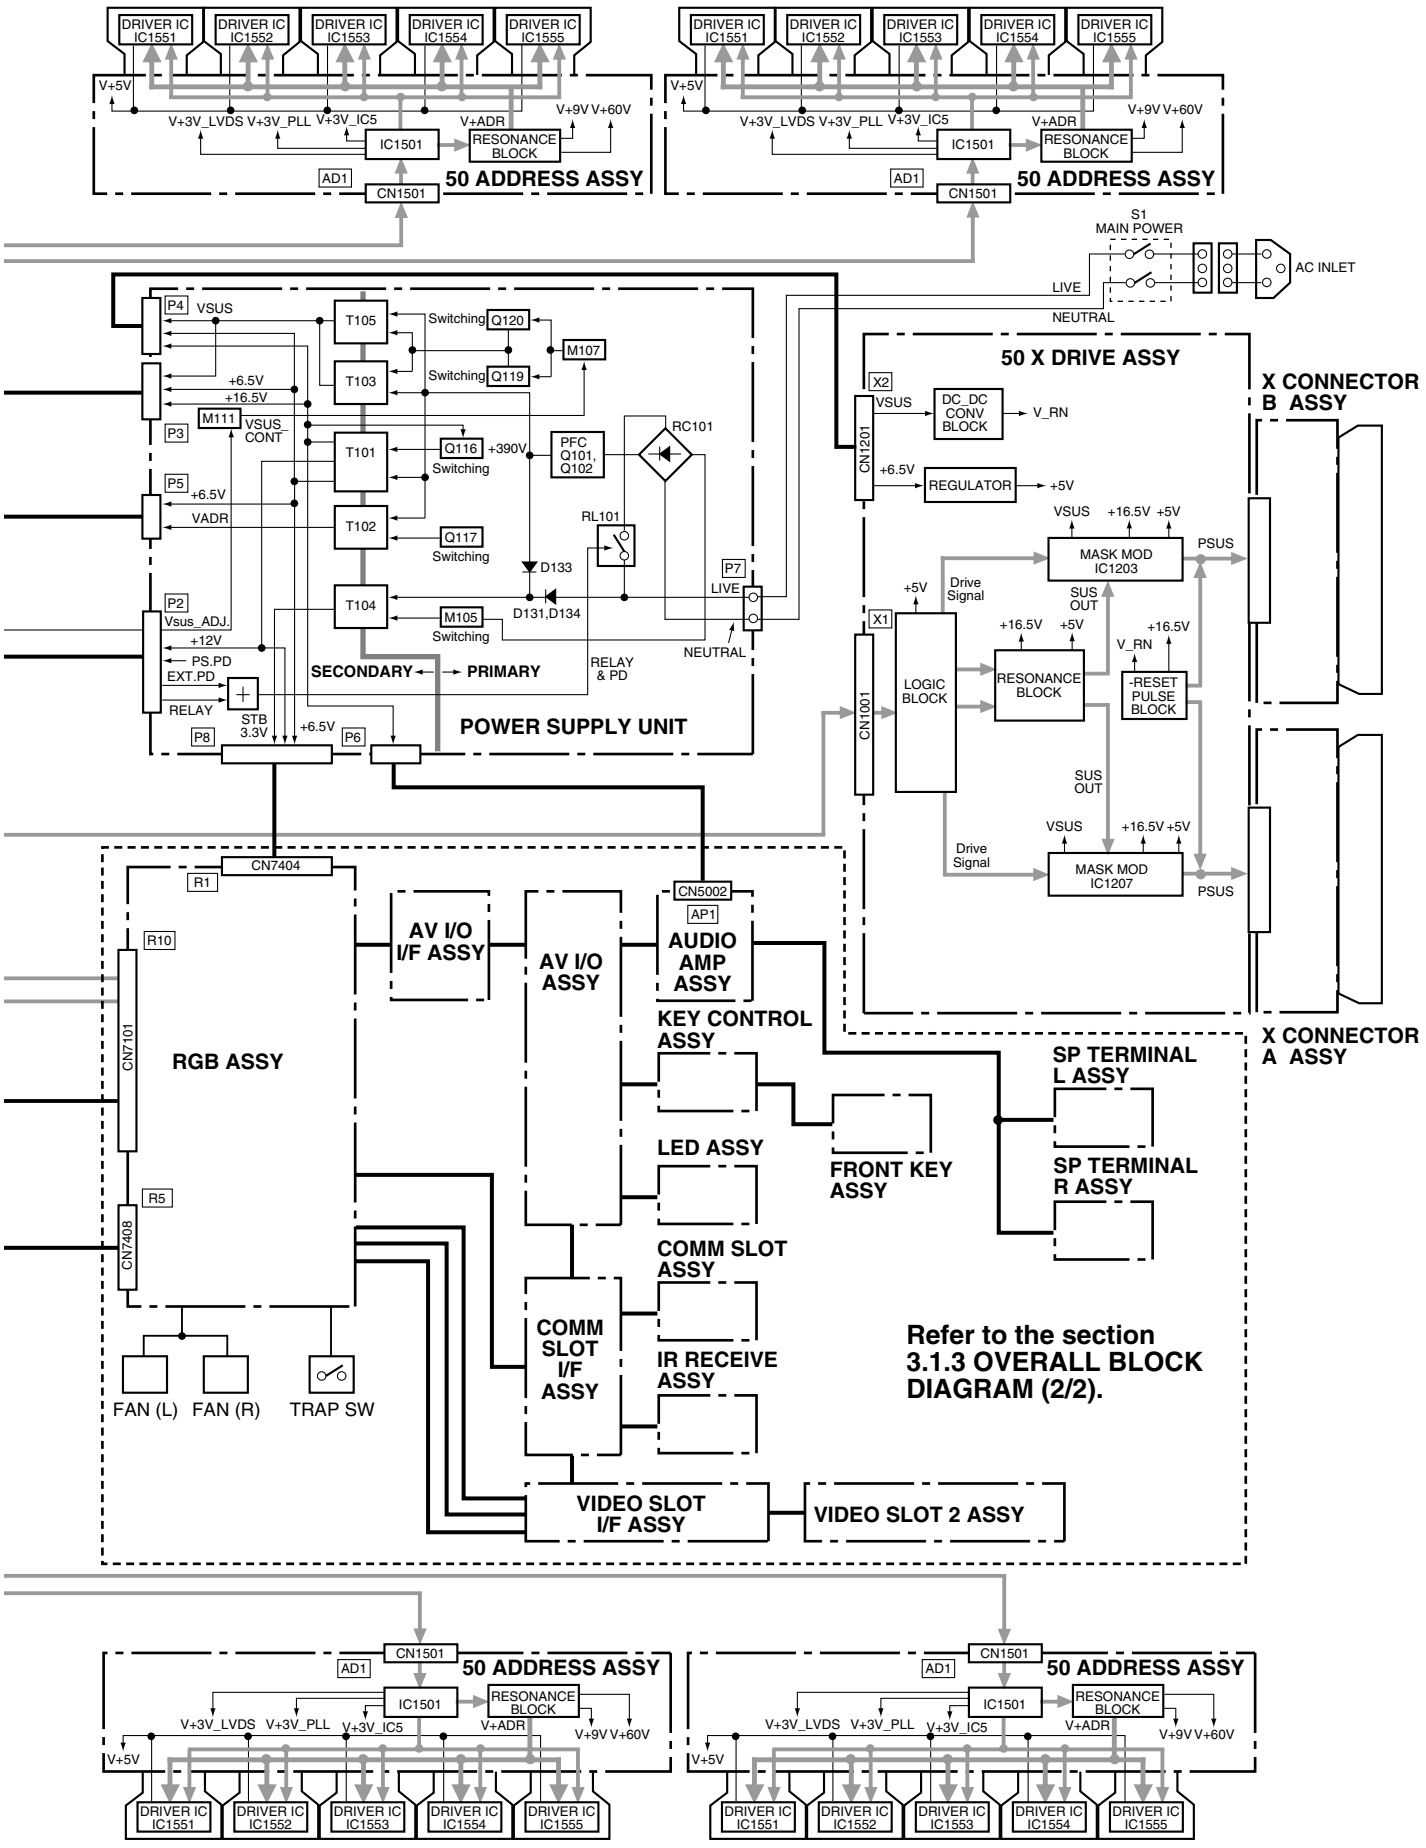
DRIVER IC IC1551
DRIVER IC IC1552
DRIVER IC IC1553
DRIVER IC IC1554
DRIVER IC IC1555
V+5V
V+3V_LVDS V+3V_PLL V+3V_IC5
V+ADR
V+9V V+60V
IC1501
RESONANCE BLOCK
AD1
CN1501
50 ADDRESS ASSY
S1
MAIN POWER
LIVE
NEUTRAL
AC INLET
P4 VSUS
T105
Switching Q120
M107
T103
Switching Q119
+6.5V
+16.5V
M111 VSUS CONT
P3
T101
Q116 +390V Switching
PFC Q101, Q102
RC101
P5 +6.5V
VADR
T102
Q117 Switching
RL101
D133
P7
LIVE
P2 Vsus_ADJ.
+12V
PS.PD
EXT.PD
RELAY
T104
M105 Switching
D131,D134
NEUTRAL
SECONDARY
PRIMARY
RELAY & PD
STB 3.3V
+6.5V
P8
P6
POWER SUPPLY UNIT
50 X DRIVE ASSY
X2
VSUS
DC_DC CONV BLOCK
V_RN
CN1201
+6.5V
REGULATOR
+5V
VSUS +16.5V +5V
MASK MOD IC1203
PSUS
+5V
Drive Signal
SUS OUT
X1
+16.5V +5V
RESONANCE BLOCK
+16.5V
V_RN
-RESET PULSE BLOCK
CN1001
LOGIC BLOCK
SUS OUT
VSUS +16.5V +5V
Drive Signal
MASK MOD IC1207
PSUS
X CONNECTOR B ASSY
X CONNECTOR A ASSY
CN7404
R1
R10
CN7101
RGB ASSY
R5
CN7408
AV I/O I/F ASSY
AV I/O ASSY
CN5002
AP1
AUDIO AMP ASSY
KEY CONTROL ASSY
LED ASSY
FRONT KEY ASSY
SP TERMINAL L ASSY
SP TERMINAL R ASSY
COMM SLOT ASSY
COMM SLOT I/F ASSY
IR RECEIVE ASSY
FAN (L)
FAN (R)
TRAP SW
VIDEO SLOT I/F ASSY
VIDEO SLOT 2 ASSY
Refer to the section 3.1.3 OVERALL BLOCK DIAGRAM (2/2).

3.1.2 OVERALL BLOCK DIAGRAM (1/2) for PDP-4304 and PDP-4314 models

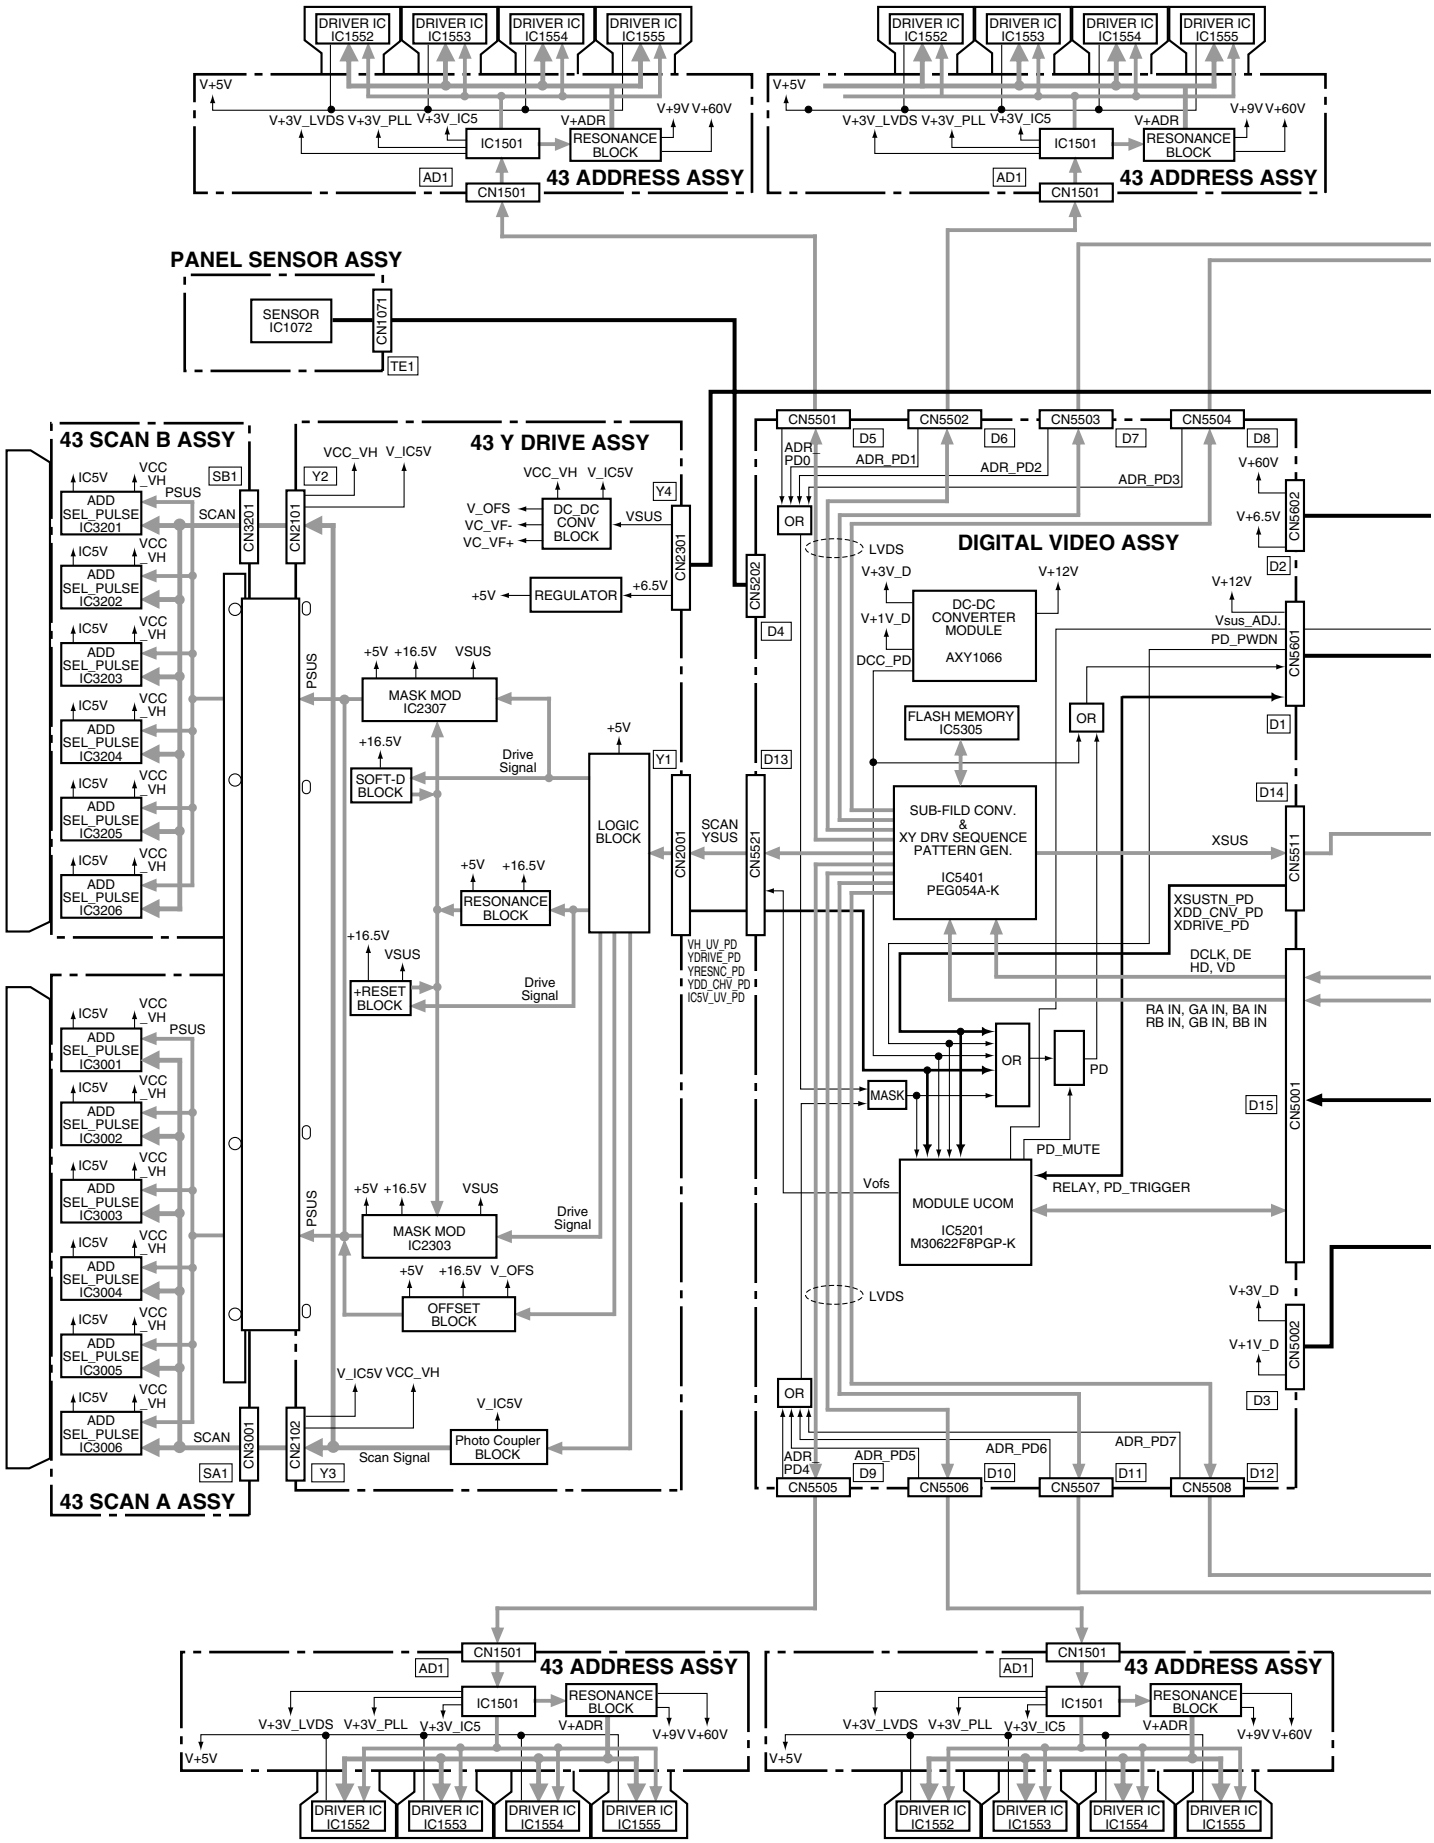

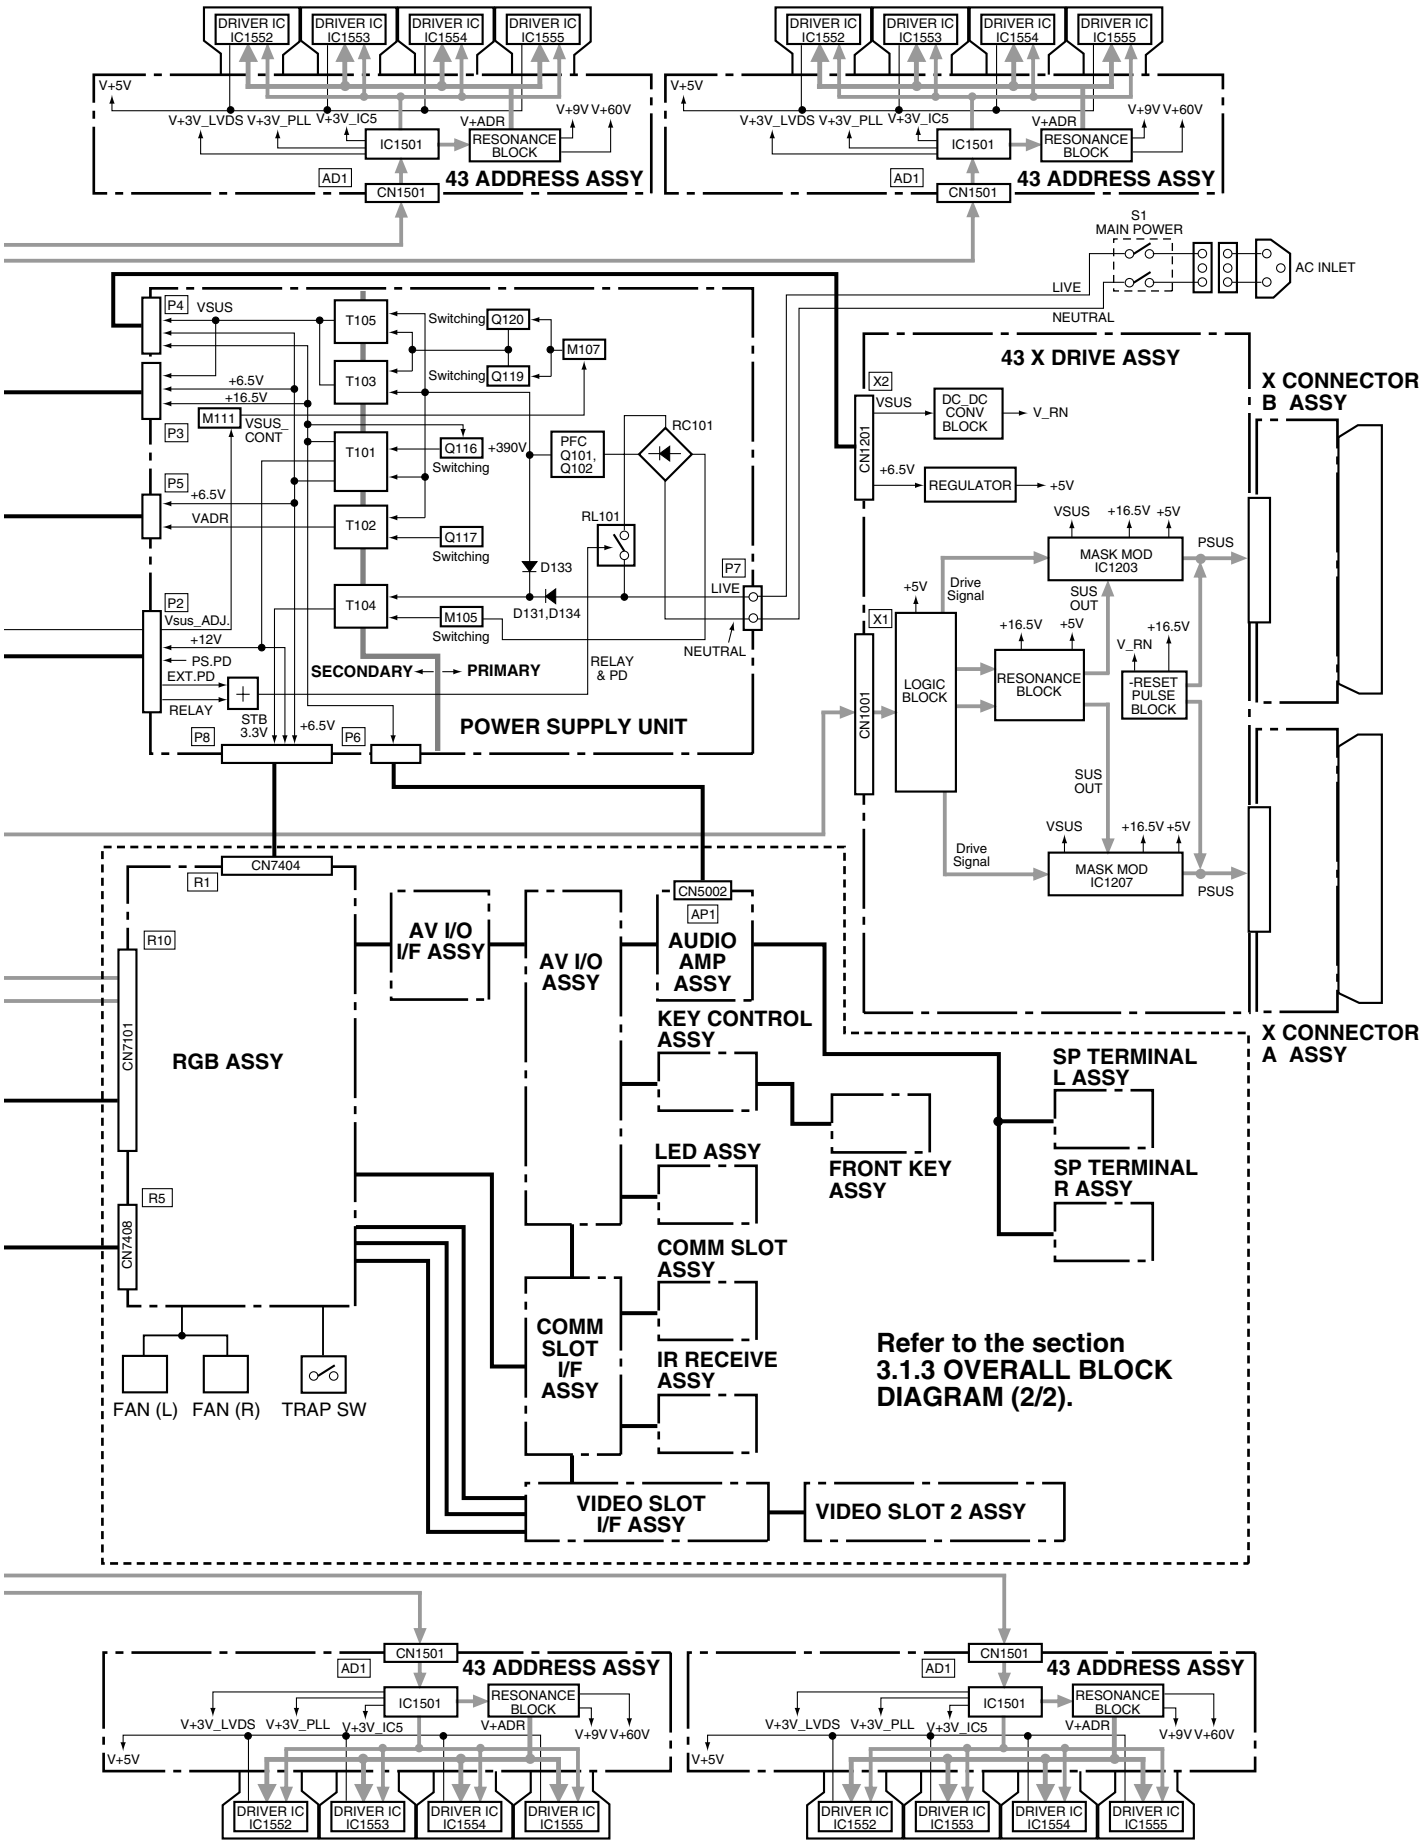
DRIVER IC IC1552
DRIVER IC IC1553
DRIVER IC IC1554
DRIVER IC IC1555
V+5V
V+3V_LVDS V+3V_PLL V+3V_IC5
V+ADR
V+9V V+60V
IC1501
RESONANCE BLOCK
AD1
CN1501
43 ADDRESS ASSY
S1
MAIN POWER
AC INLET
LIVE
NEUTRAL
P4 VSUS
T105
Switching Q120
M107
T103
Switching Q119
+6.5V
+16.5V
P3
M111 VSUS CONT
T101
Q116 +390V
Switching
PFC Q101, Q102
RC101
P5
+6.5V
VADR
T102
Q117
Switching
RL101
D133
P7
LIVE
P2
Vsus_ADJ.
+12V
PS.PD
EXT.PD
RELAY
T104
M105
Switching
D131,D134
NEUTRAL
SECONDARY
PRIMARY
RELAY & PD
STB 3.3V
+6.5V
P8
P6
POWER SUPPLY UNIT
43 X DRIVE ASSY
X2
VSUS
DC_DC CONV BLOCK
V_RN
CN1201
+6.5V
REGULATOR
+5V
VSUS
+16.5V
+5V
MASK MOD IC1203
PSUS
Drive Signal
SUS OUT
X1
LOGIC BLOCK
RESONANCE BLOCK
-RESET PULSE BLOCK
CN1001
MASK MOD IC1207
X CONNECTOR B ASSY
X CONNECTOR A ASSY
CN7404
R1
R10
CN7101
RGB ASSY
R5
CN7408
AV I/O I/F ASSY
AV I/O ASSY
CN5002
AP1
AUDIO AMP ASSY
KEY CONTROL ASSY
FRONT KEY ASSY
LED ASSY
SP TERMINAL L ASSY
SP TERMINAL R ASSY
COMM SLOT ASSY
COMM SLOT I/F ASSY
IR RECEIVE ASSY
FAN (L)
FAN (R)
TRAP SW
VIDEO SLOT I/F ASSY
VIDEO SLOT 2 ASSY
Refer to the section 3.1.3 OVERALL BLOCK DIAGRAM (2/2).

3.1.3 OVERALL BLOCK DIAGRAM (2/2) for PDP-5004, PDP-5014, PDP-4304 and PDP-4314 models

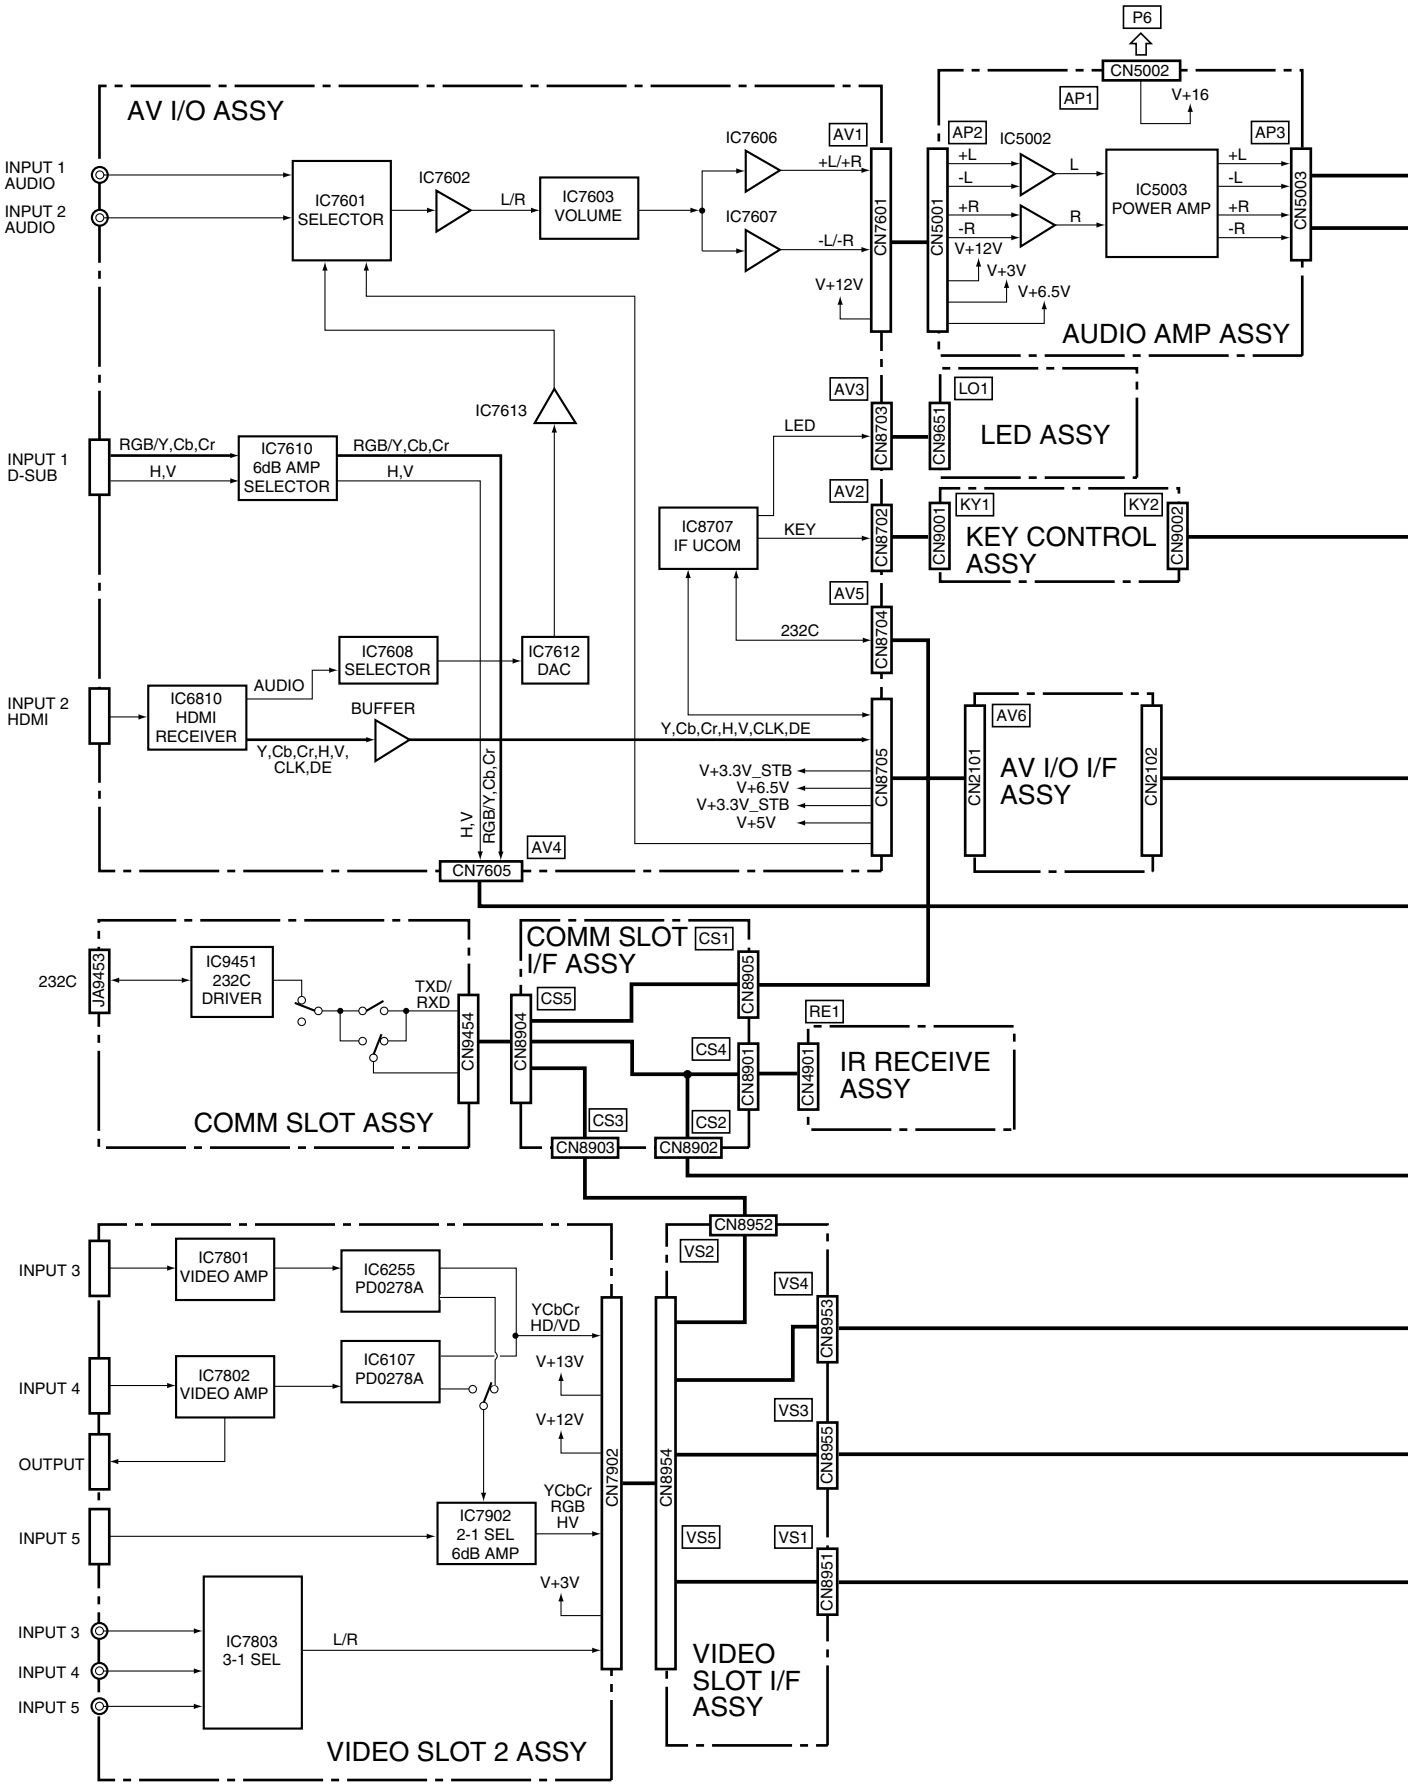

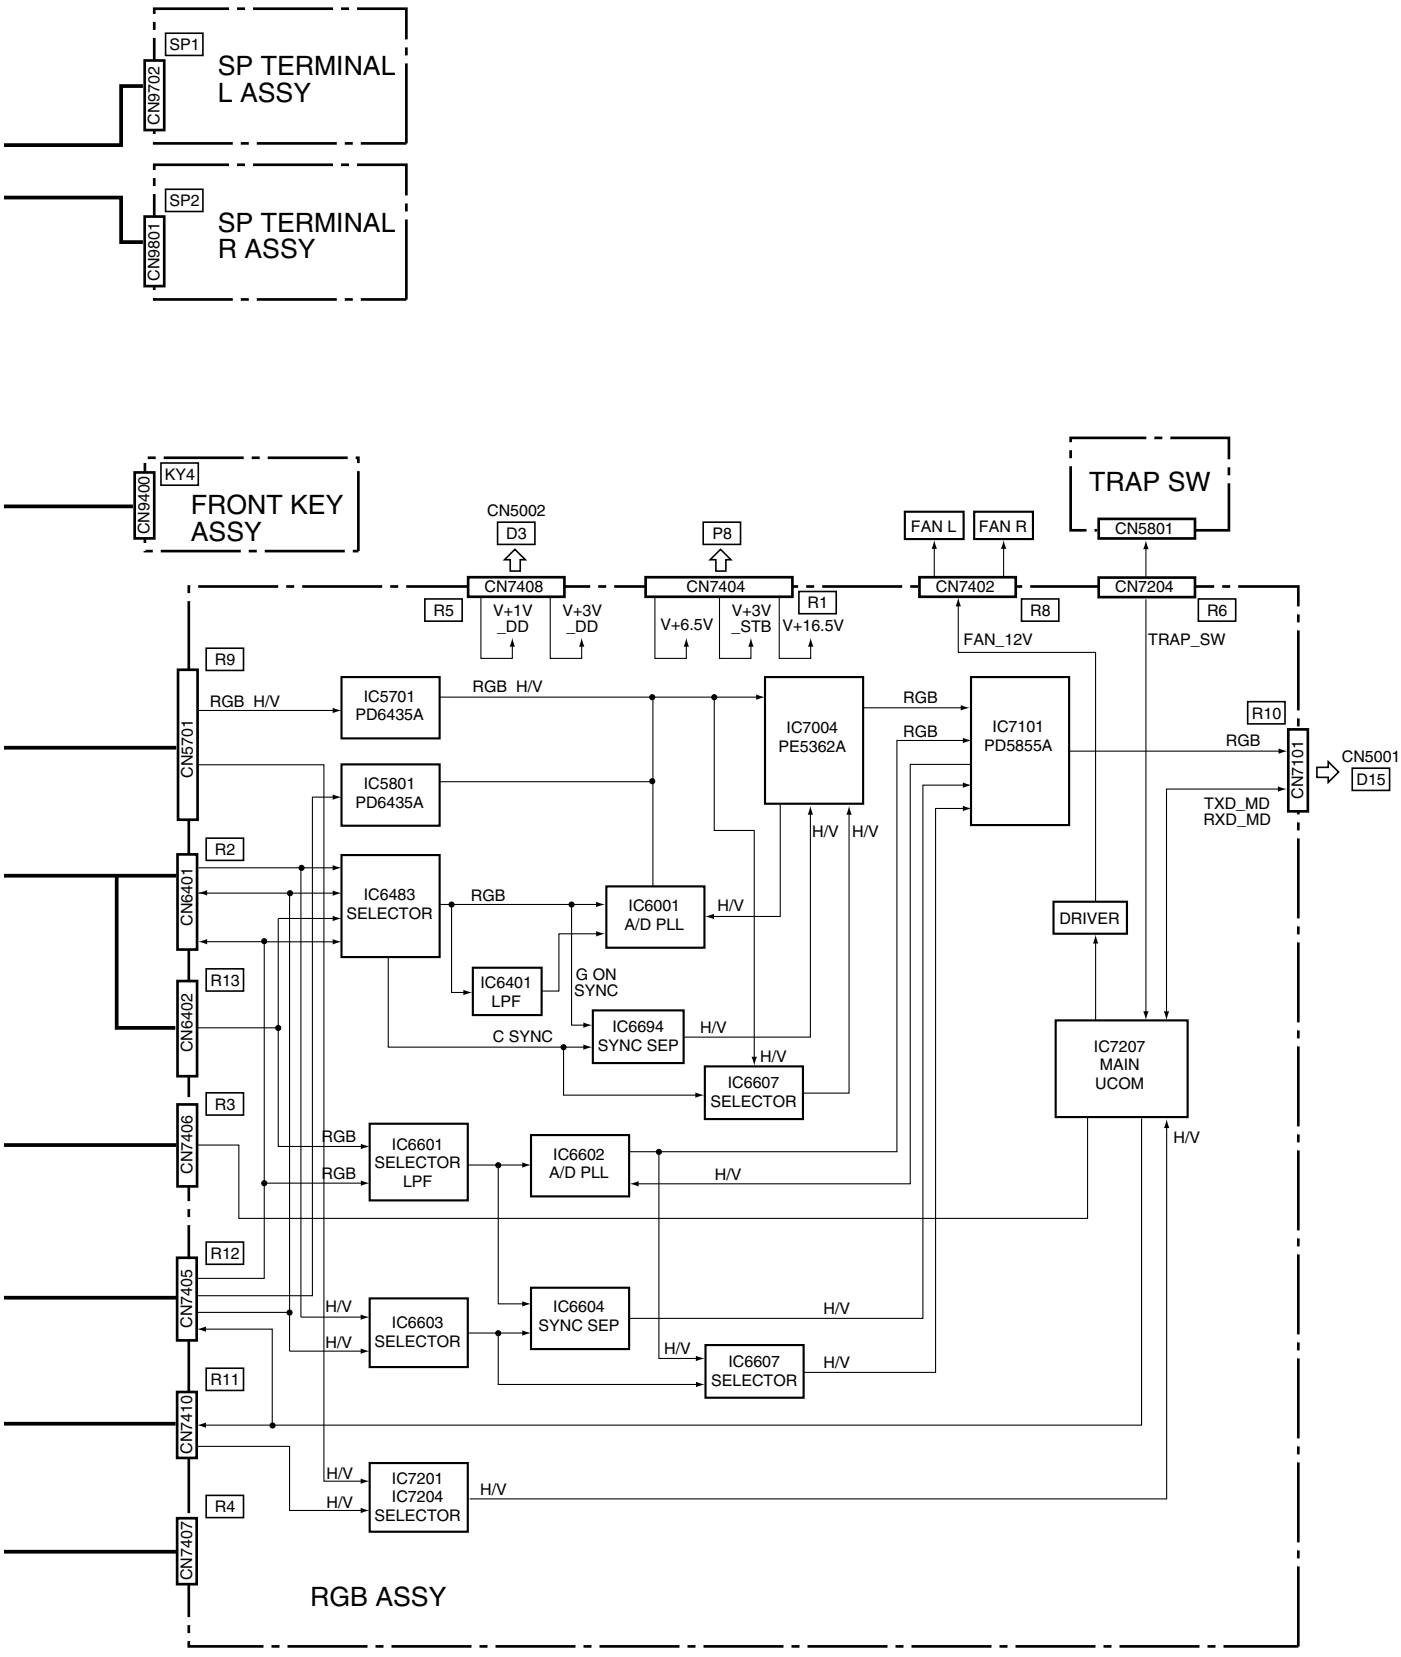
SP1
CN9702
SP TERMINAL L ASSY
SP2
CN9801
SP TERMINAL R ASSY
KY4
CN9400
FRONT KEY ASSY
CN5002
D3
P8
CN7408
CN7404
CN7402
CN7204
FAN L
FAN R
TRAP SW
CN5801
R5
R1
R8
R6
V+1V _DD
V+3V _DD
V+6.5V
V+3V _STB
V+16.5V
FAN_12V
TRAP_SW
R9
CN5701
RGB H/V
IC5701 PD6435A
IC5801 PD6435A
IC7004 PE5362A
IC7101 PD5855A
R10
CN7101
CN5001
D15
TXD_MD
RXD_MD
R2
CN6401
IC6483 SELECTOR
IC6001 A/D PLL
IC6401 LPF
G ON SYNC
R13
CN6402
C SYNC
IC6694 SYNC SEP
IC6607 SELECTOR
DRIVER
IC7207 MAIN UCOM
R3
CN7406
IC6601 SELECTOR LPF
IC6602 A/D PLL
R12
CN7405
IC6603 SELECTOR
IC6604 SYNC SEP
R11
CN7410
R4
CN7407
IC7201 IC7204 SELECTOR
RGB ASSY

3.1.4 SIGNAL ROUTE

• **Block Diagram**

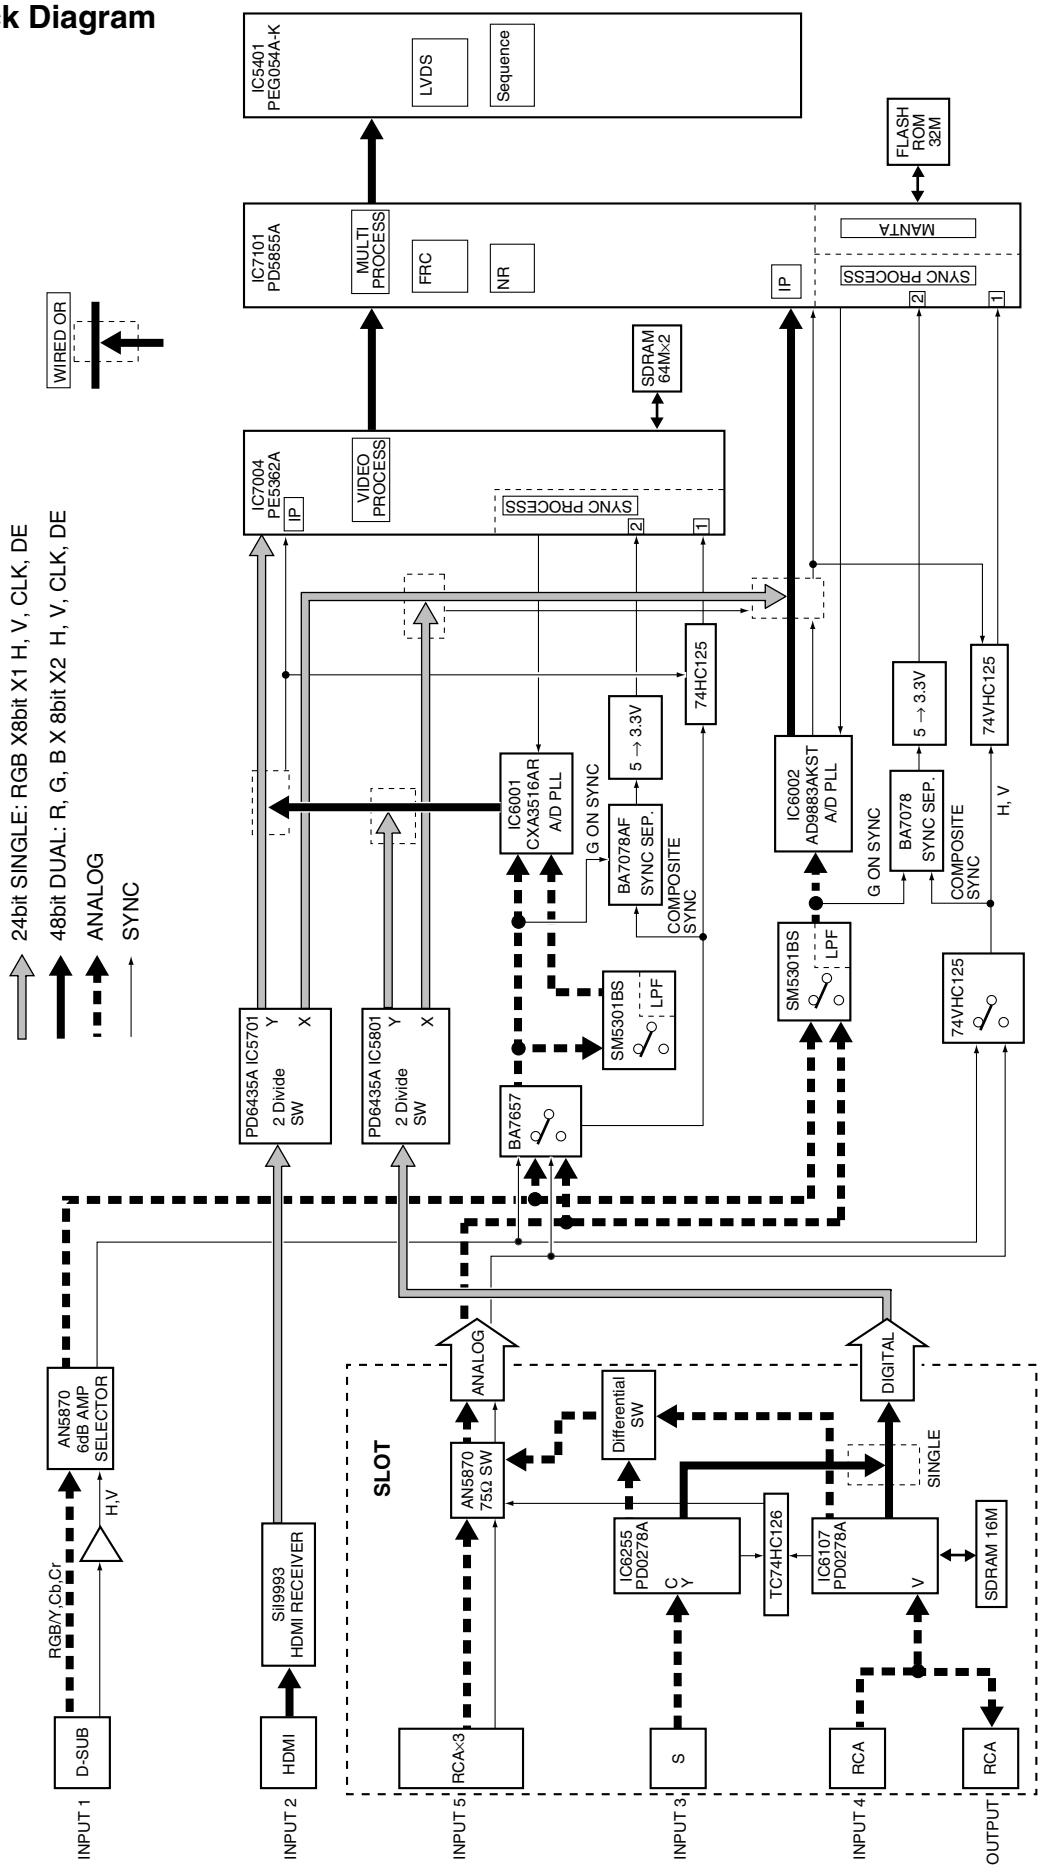

3.1.5 50 Y DRIVE ASSY

• Block Diagram

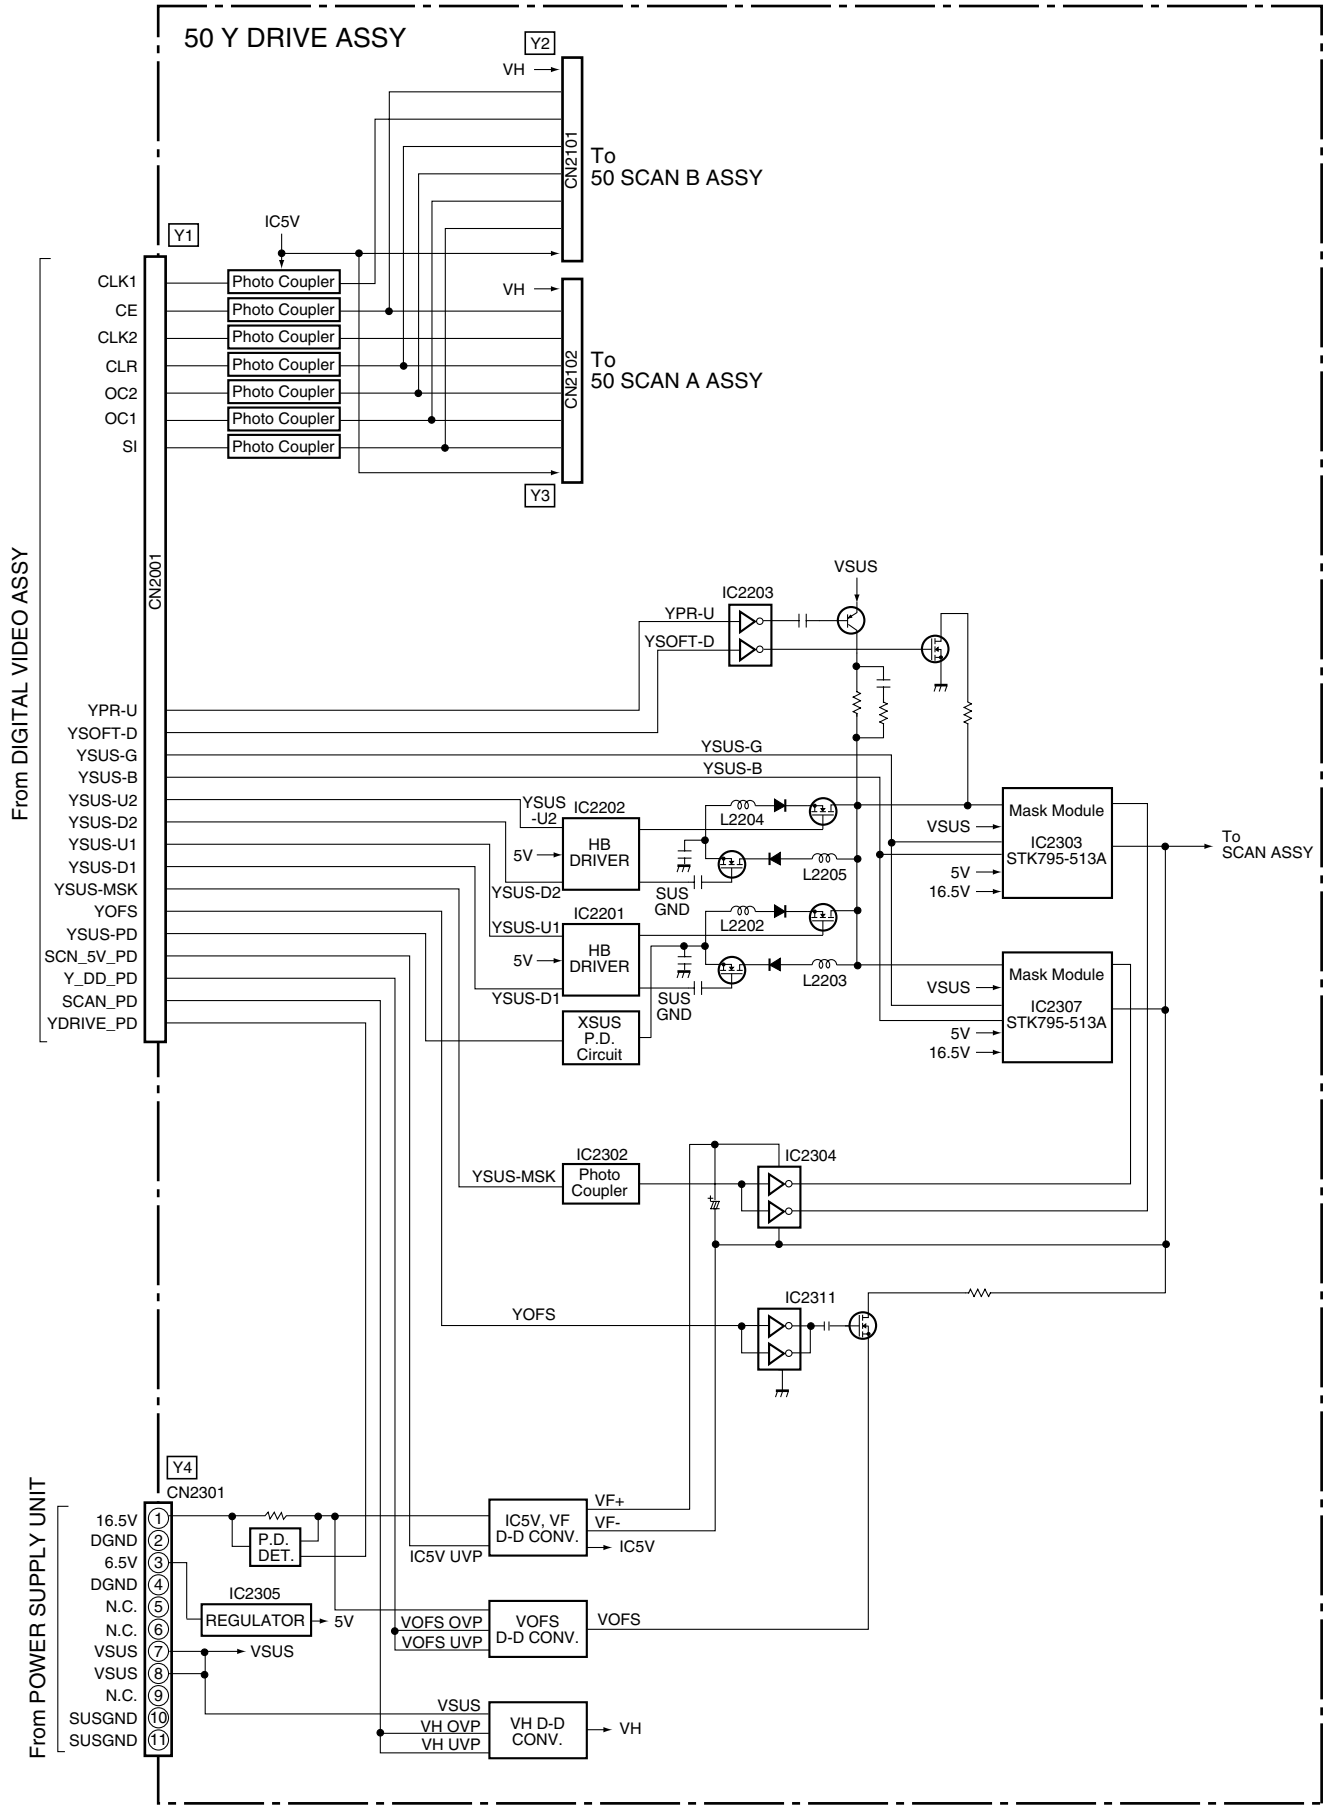

3.1.6 43 Y DRIVE ASSY

• Block Diagram

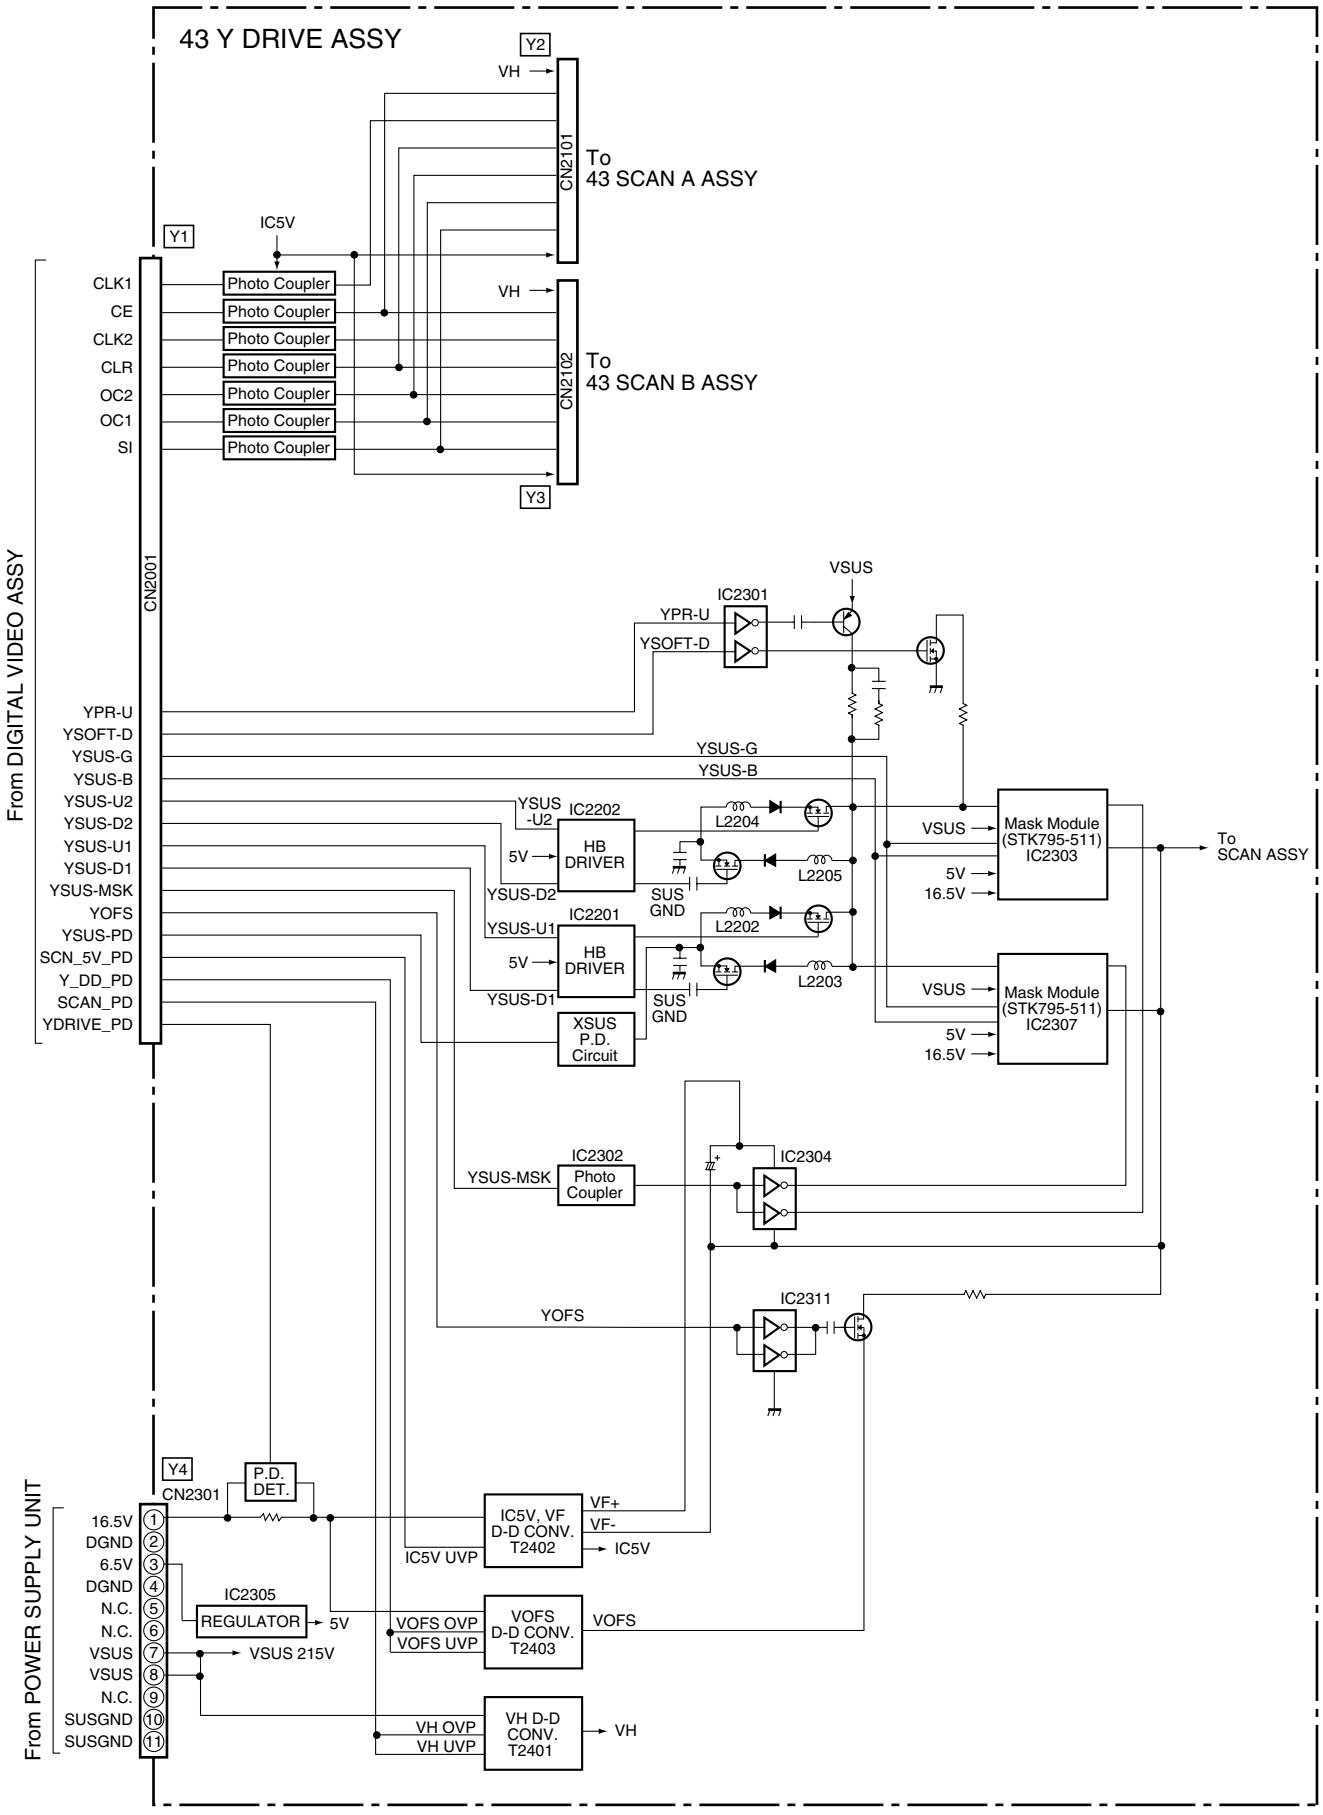

3.1.7 50 X DRIVE ASSY

• Block Diagram

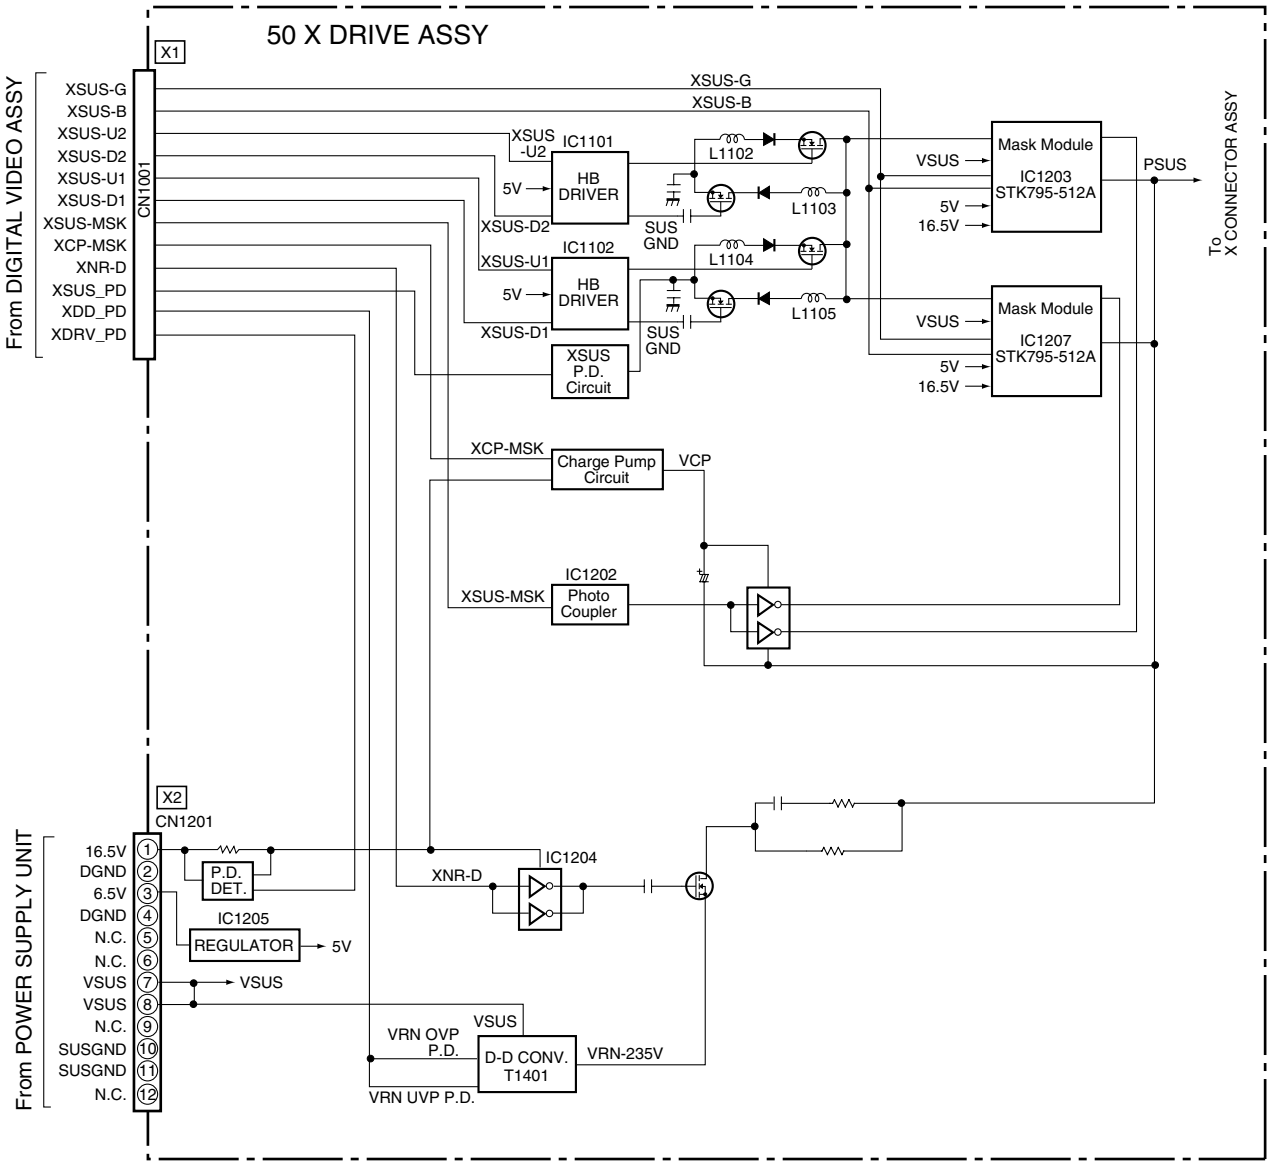

3.1.8 43 X DRIVE ASSY

• Block Diagram

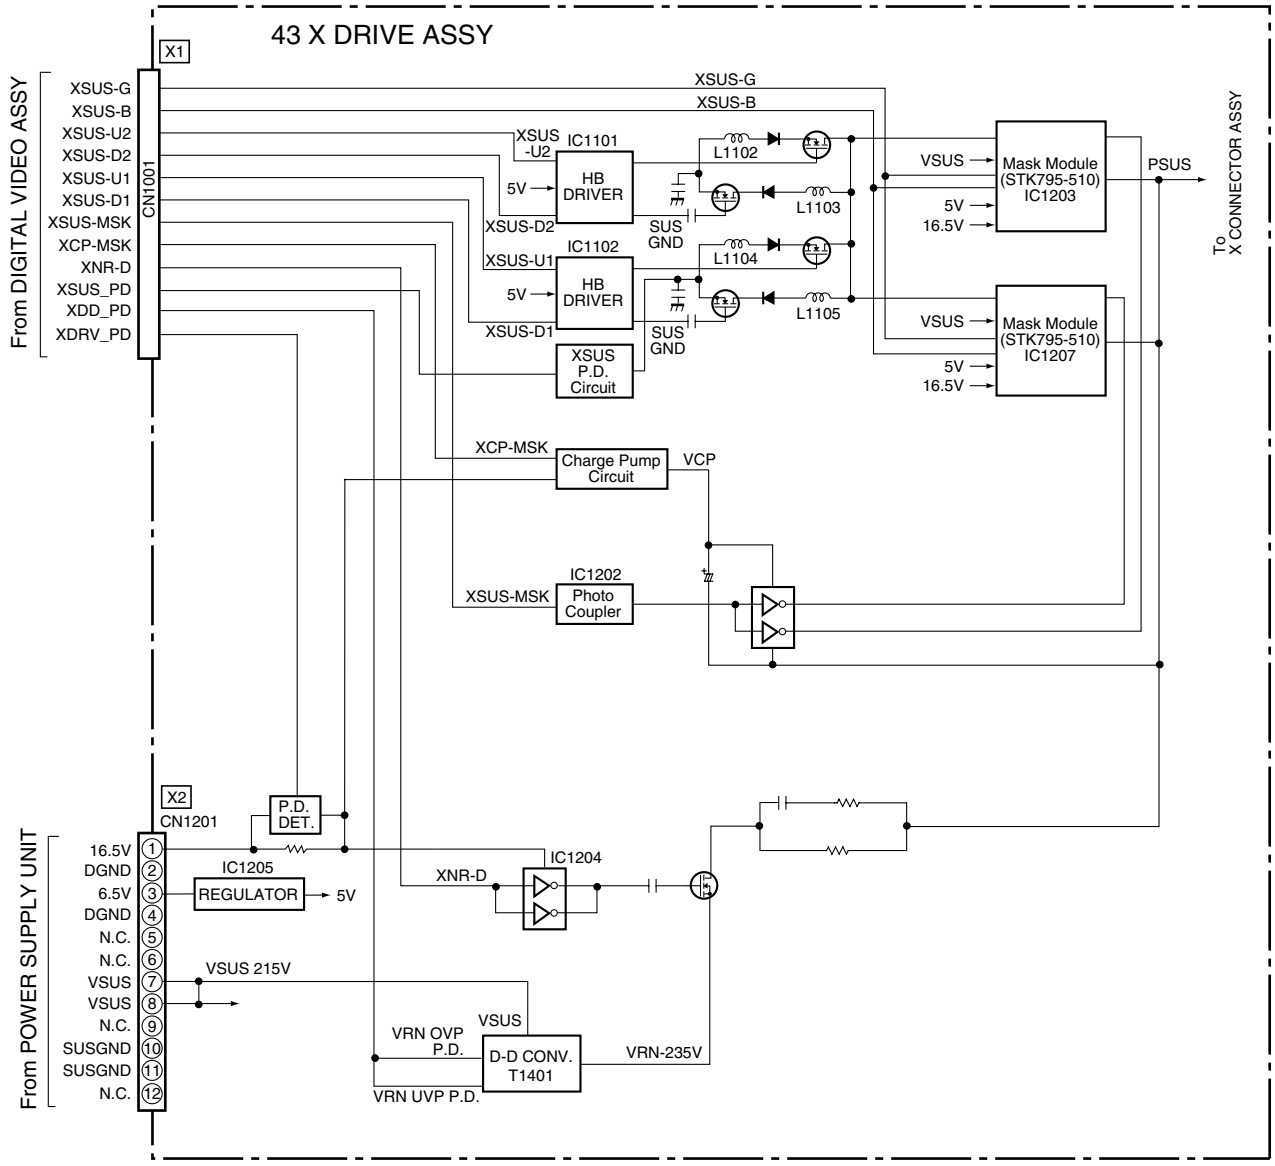

3.1.9 DIGITAL VIDEO ASSY

• Block Diagram

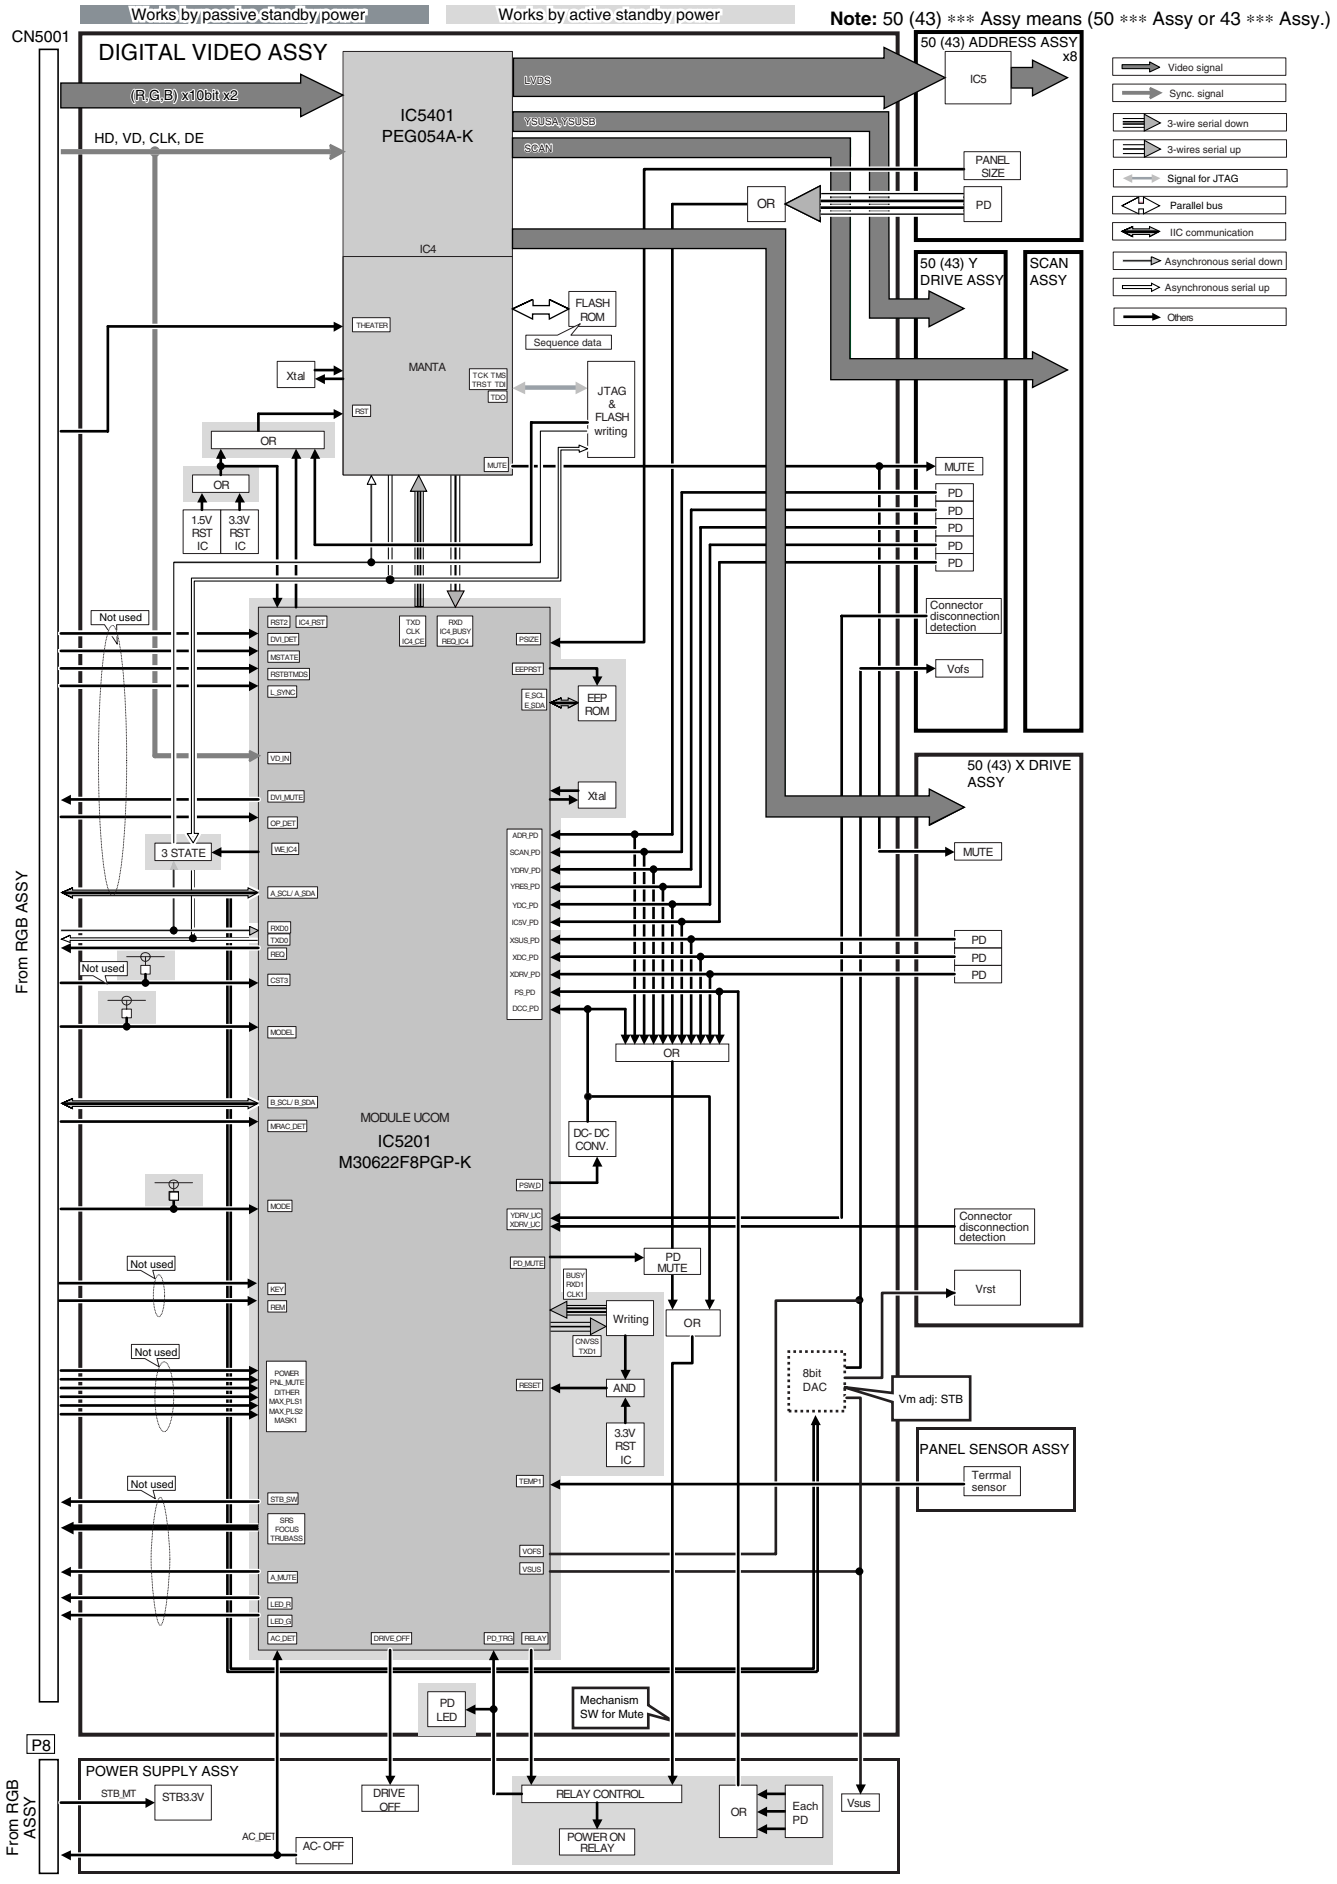

3.1.10 AV I/O ASSY

• Block Diagram

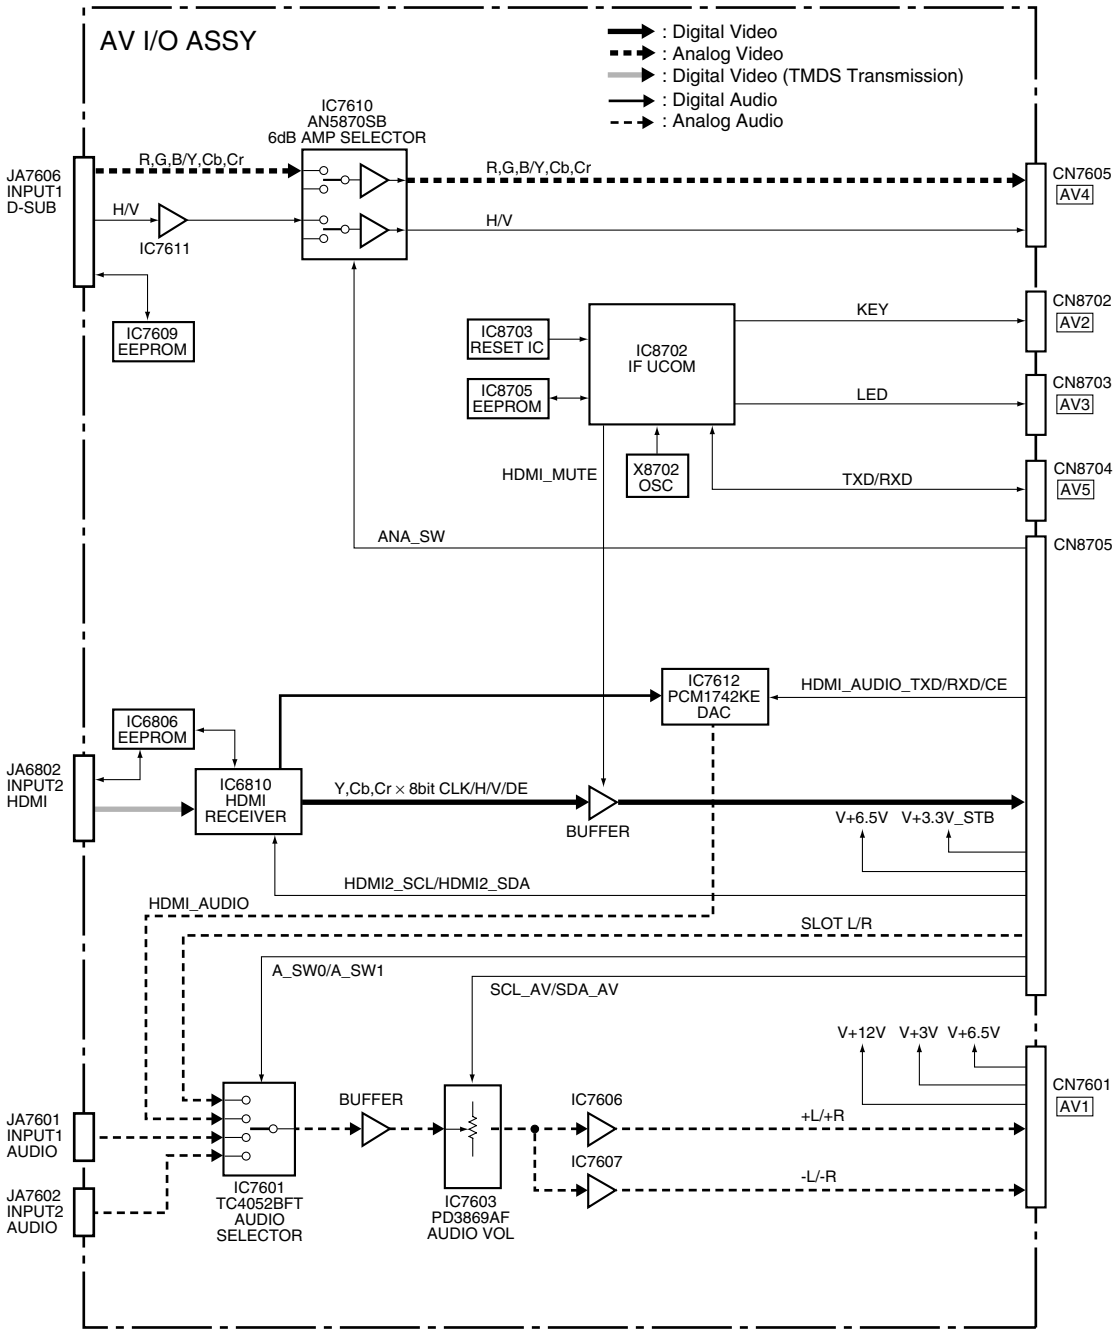

3.1.11 RGB ASSY

• **Block Diagram**

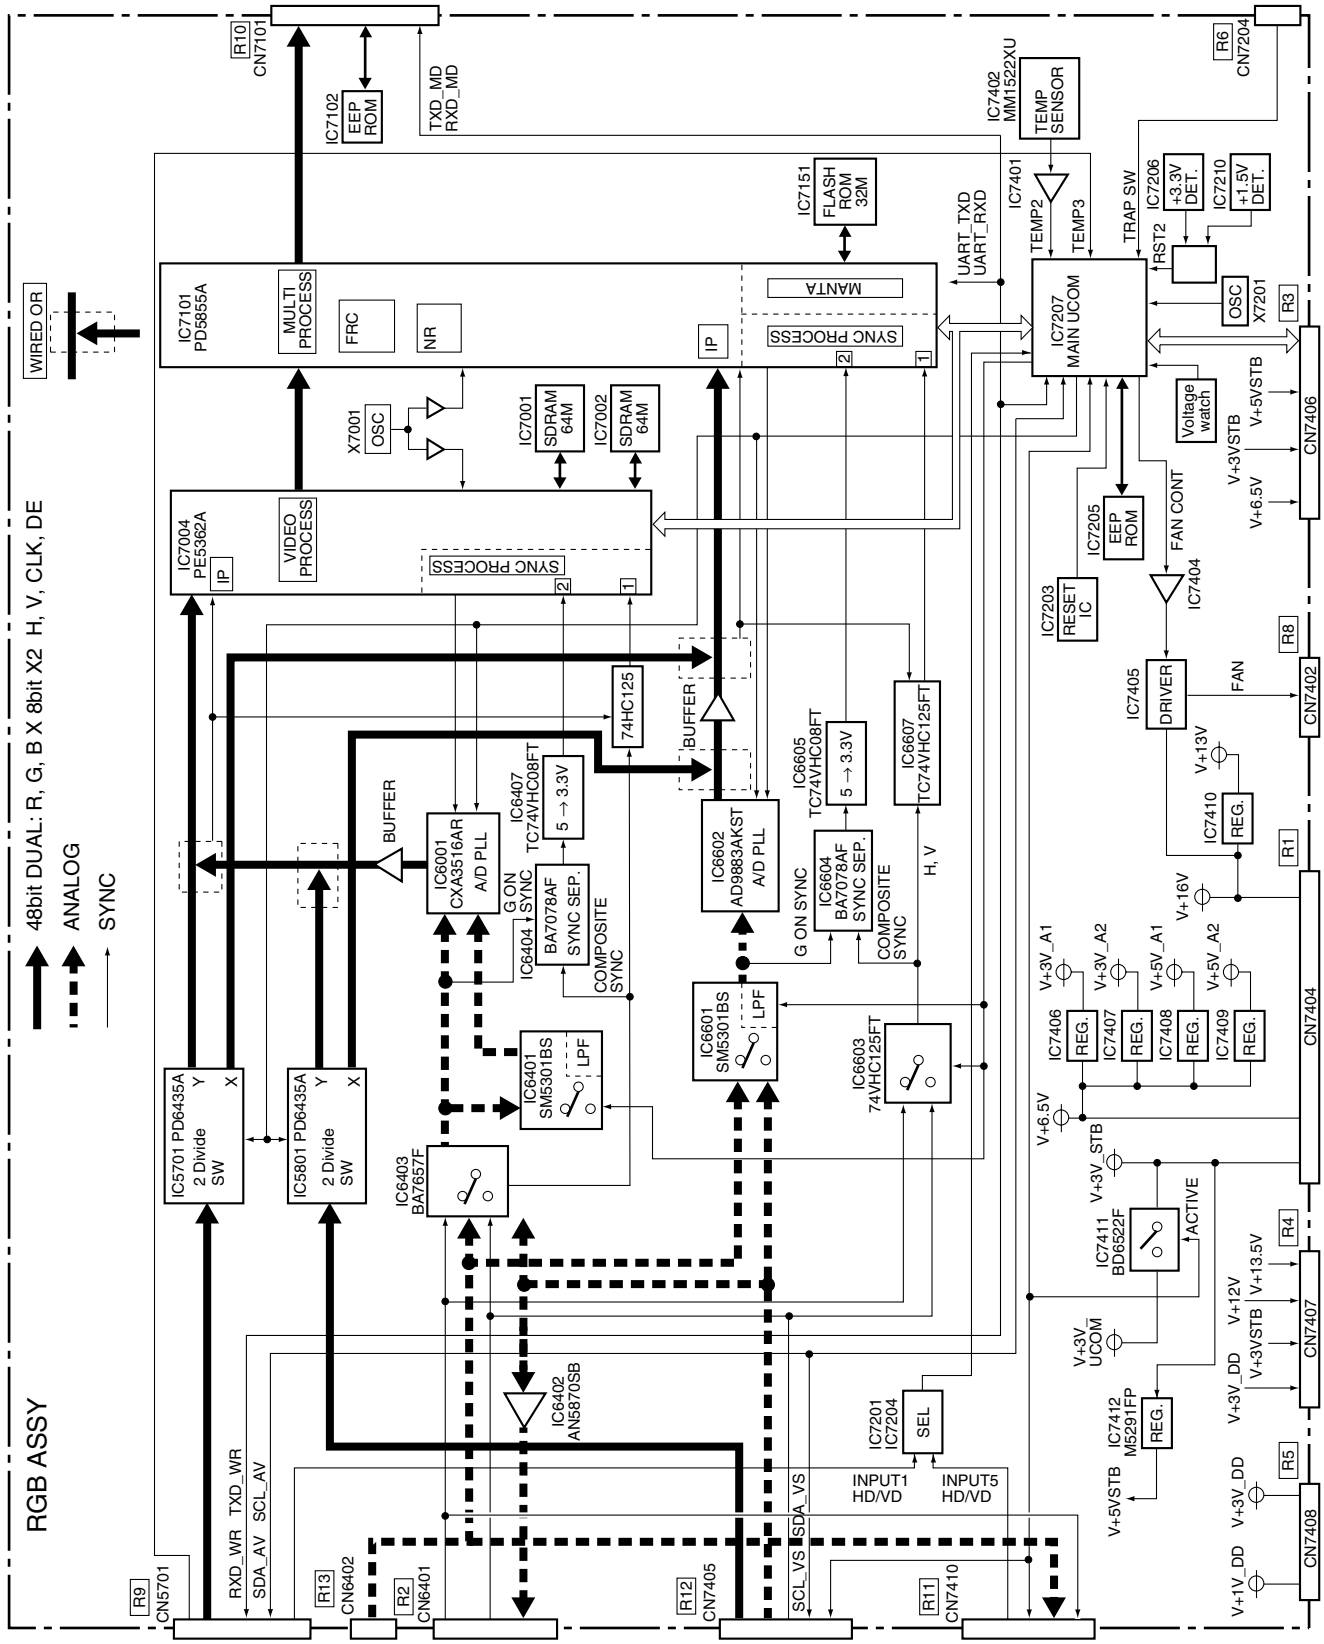

3.1.12 AUDIO AMP and COMM SLOT ASSYS

• Block Diagram

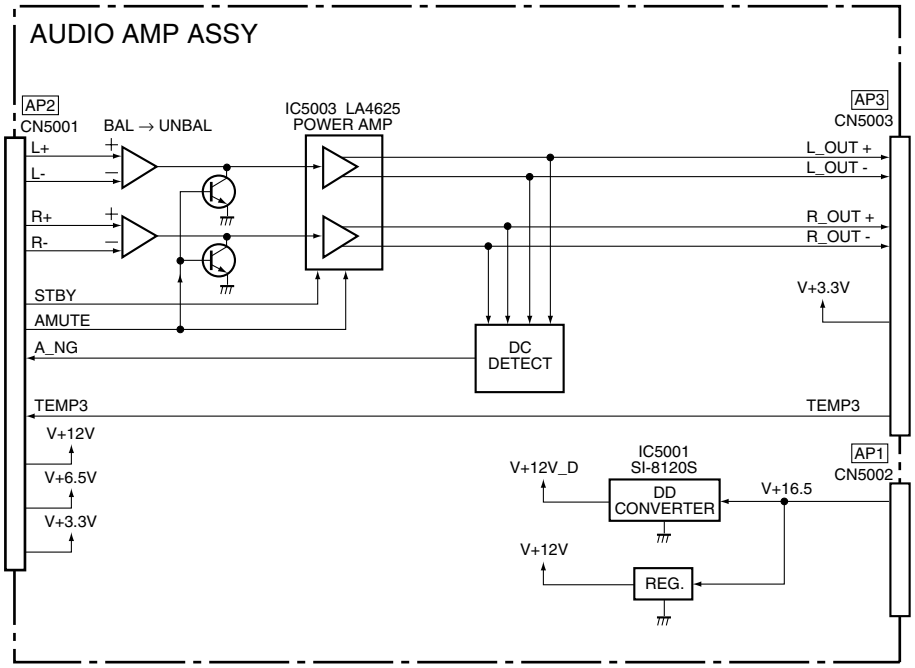

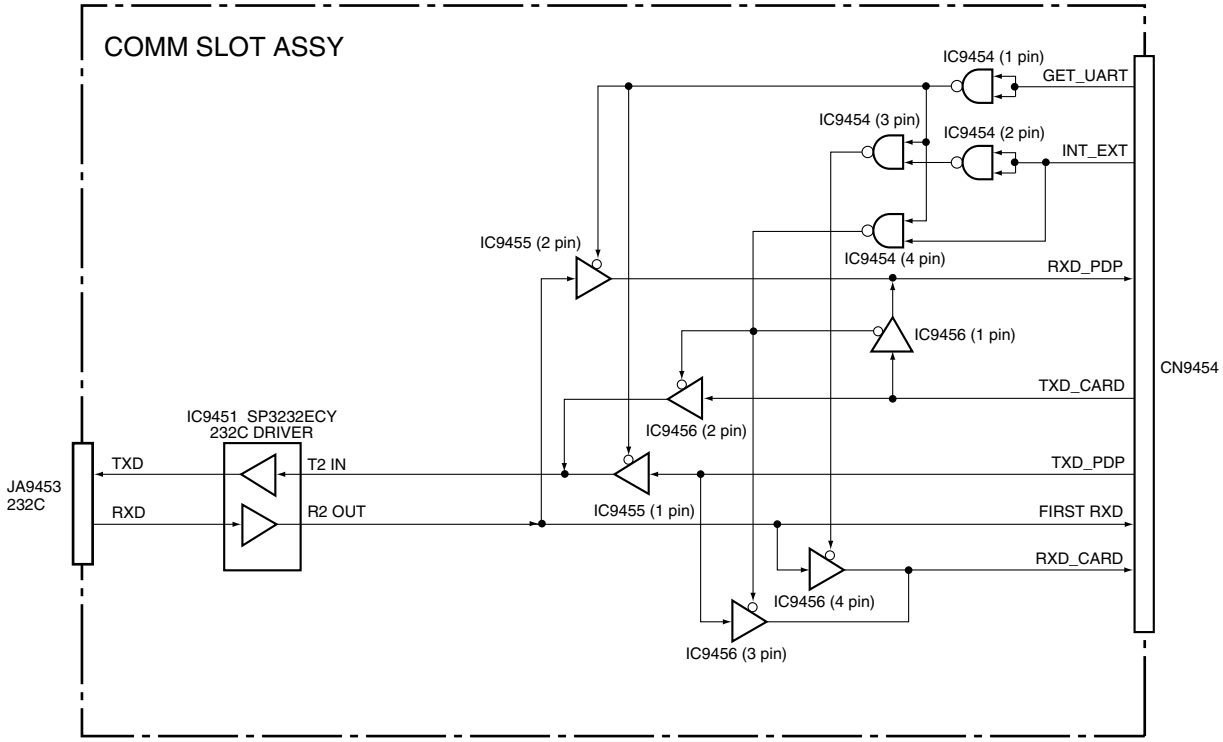

3.1.13 VIDEO SLOT 2 ASSY

• Block Diagram

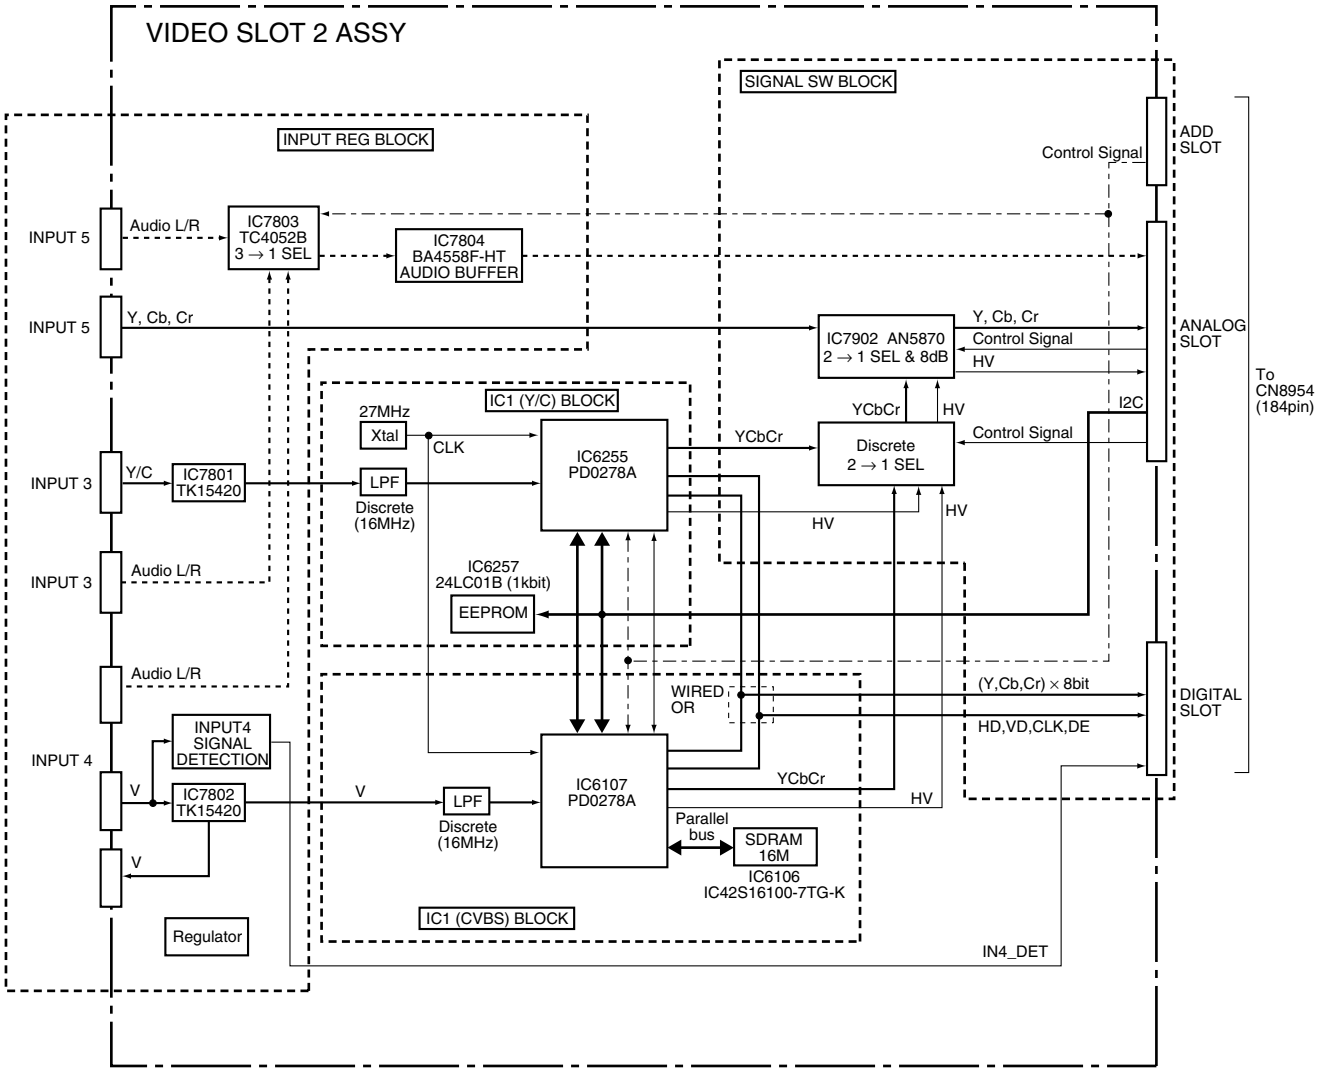

3.2 WAVEFORMS

DIGITAL VIDEO ASSY (4/6)

• DIGITAL I/F BLOCK

① CH1: TP5102 (VD)
CH2: TP5101 (HD)
V: 2V/div. H: 2msec/div.

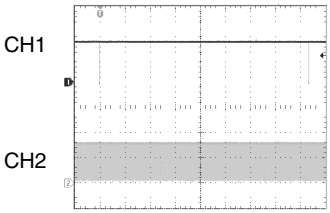

① CH1: TP5102 (VD)
CH2: TP5101 (HD)
V: 2V/div. H: 4µsec/div.

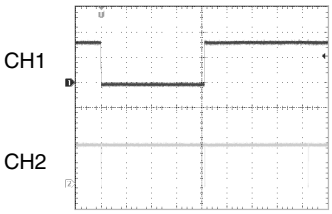

② CH1: TP5102 (VD)
CH2: TP5103 (DE)
V: 2V/div. H: 2msec/div.

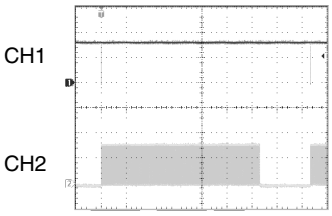

② CH1: TP5102 (VD)
CH2: TP5103 (DE)
V: 2V/div. H: 4µsec/div.

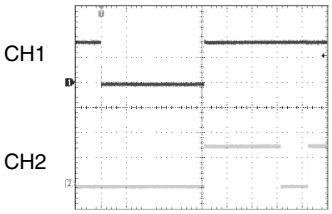

③ CH1: TP5101 (HD)
CH2: TP5103 (DE)
V: 2V/div. H: 2µsec/div.

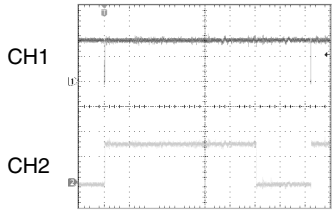

③ CH1: TP5101 (HD)
CH2: TP5103 (DE)
V: 2V/div. H: 40nsec/div.

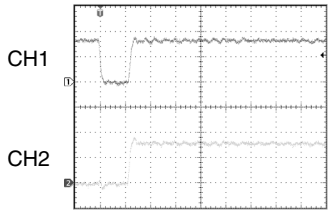

④ CH1: TP5101 (HD)
CH2: CN5001-pin 77 (DCLK)
V: 2V/div. H: 40nsec/div.

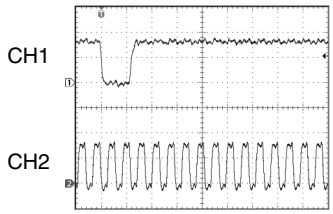

⑤ CH1: TP5102 (VD)
CH2: CN5001-pin 88 (RA_IN2)
V: 2V/div. H: 2msec/div.

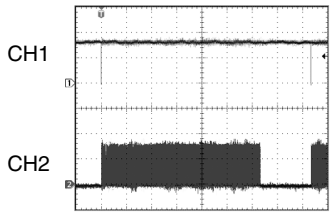

RGB ASSY (2/10, 3/10, 4/10)
MAUN AD BLOCK, MAIN LPF BLOCK, SUS LPF&AD BLOCK

Input: INPUT 1
Signal: RGB, XGA 60 Hz, Color-bar
⑫ to ㉑, ㉔ : With two screens, a SUB screen chooses INPUT1 and observes it.

④ K6404 (HD1_MAIN)
V: 1V/div. H: 4µsec/div.

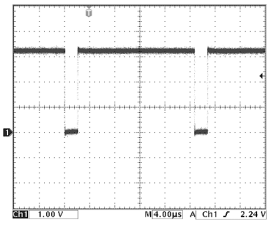

⑪ CH1: K6012 (PLLHD_MAIN)
V: 2V/div. H: 4µsec/div.
⑨ CH2: K6013 (CLAMP_MAIN)
V: 2V/div. H: 4µsec/div.

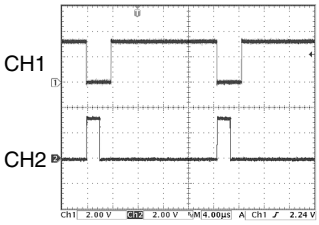

㉔ CH1: K6601(PLLHD_SUB)
V: 2V/div. H: 4µsec/div.
⑮ CH2: Foot of C6614 (GAIN)
V: 200mV/div. H: 4µsec/div.

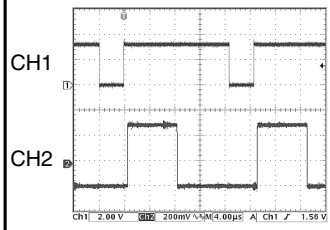

⑲ CH1: Foot of R6628 (DATACK)
V: 2V/div. H:10nsec/div.
㉑ CH2: Foot of R6644 (RED0)
V: 2V/div. H: 10nsec/div.

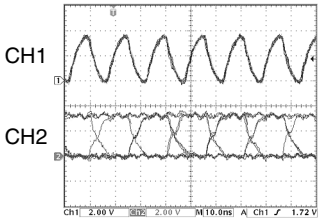

⑤ K6403 (VD1_MAIN)
V: 1V/div. H: 4msec/div.

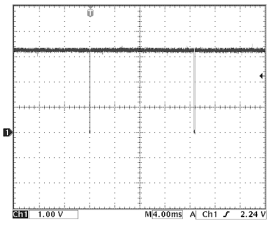

⑩ K6011 (PLLHOLD_MAIN)
V: 1V/div. H: 4msec/div.

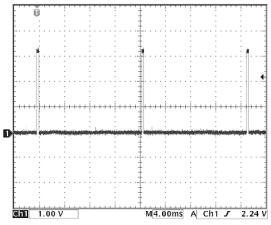

㉔ CH1: K6601(PLLHD_SUB)
V: 2V/div. H: 4µsec/div.
⑯ CH2: Foot of C6623 (RAIN)
V: 200mV/div. H: 4µsec/div.

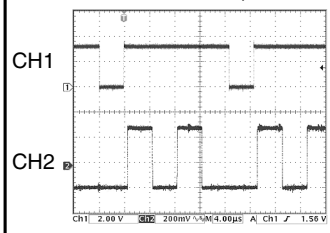

⑳ Foot of R6637 (HSOUT)
V: 1V/div. H: 4µsec/div.

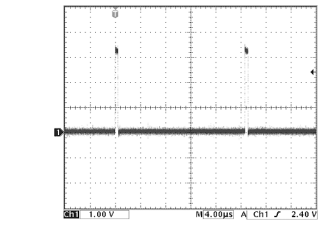

⑪ CH1: K6012 (PLLHD_MAIN)
V: 2V/div. H: 4µsec/div.
⑥ CH2: K6001 (G)
V: 200mV/div. H: 4µsec/div.

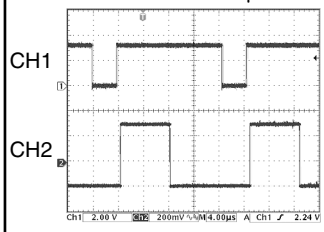

⑫ K6605 (HD1_SUB)
V: 1V/div. H: 4µsec/div.

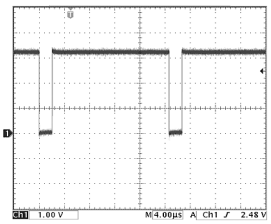

⑰ K6602 (PLL HOLD_SUB)
V: 1V/div. H: 4msec/div.

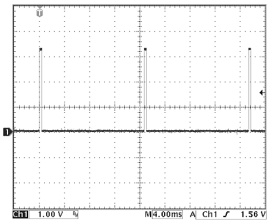

㉒ CH1: IC6008-pin2 (CLK)
V: 2V/div. H:20nsec/div.
㉓ CH2: IC6006-pin 9 (RB0)
V: 2V/div. H: 20nsec/div.

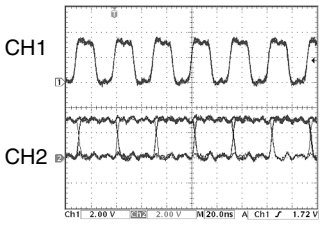

⑪ CH1: K6012 (PLLHD_MAIN)
V: 2V/div. H: 4µsec/div.
⑦ CH2: K6002 (B)
V: 200mV/div. H: 4µsec/div.

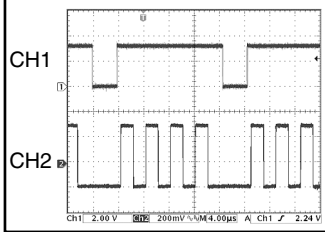

⑬ K6604 (VD1_SUB)
V: 1V/div. H: 4msec/div.

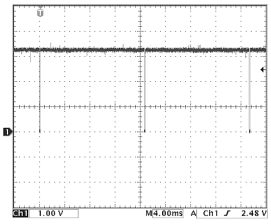

㉔ CH1: K6601(PLLHD_SUB)
V: 2V/div. H: 4µsec/div.
⑱ CH2: K6603 (CLAMP)
V: 2V/div. H: 4µsec/div.

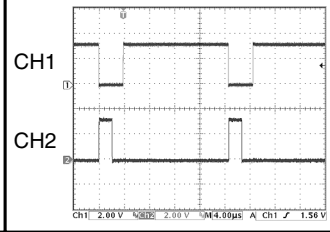

⑪ CH1: K6012 (PLLHD_MAIN)
V: 2V/div. H: 4µsec/div.
⑧ CH2: K6003 (R)
V: 200mV/div. H: 4µsec/div.

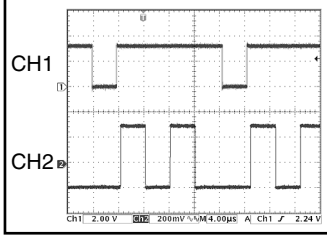

㉔ CH1: K6601(PLLHD_SUB)
V: 2V/div. H: 4µsec/div.
⑭ CH2: Foot of C6609 (BAIN)
V: 200mV/div. H: 4µsec/div.

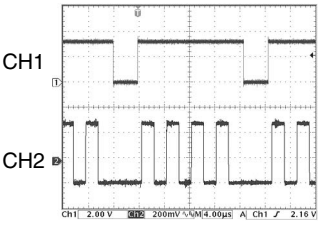

⑲ Foot of R6628 (DATACK)
V: 1V/div. H: 10nsec/div.

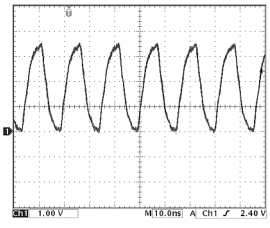

VIDEO SLOT 2 ASSY (1/4)

• IC1(CVBS) BLOCK

Input: INPUT 4
Signal: NTSC 525i, Color-bar

① IC6107-pin 51 (CVBS IN)
V: 200mV/div. H: 20µsec/div.

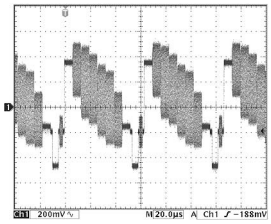

② IC6107-pin 65 (Cr)
V: 200mV/div. H: 20µsec/div.

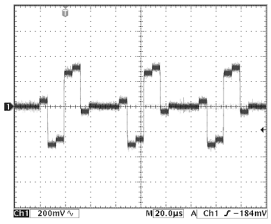

③ IC6107-pin 72 (Cb)
V: 200mV/div. H: 20µsec/div.

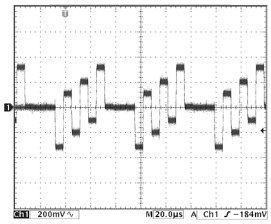

④ IC6107-pin 67 (Y)
V: 200mV/div. H: 20µsec/div.

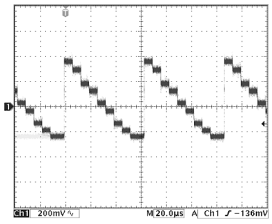

⑤ IC6107-pin 107 (VD_IC1V)
V: 1V/div. H: 4msec/div.

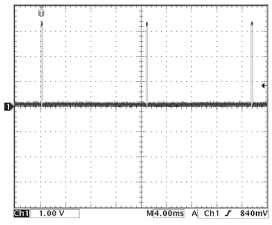

⑥ IC6107-pin 108 (HD_IC1V)
V: 1V/div. H: 20µsec/div.

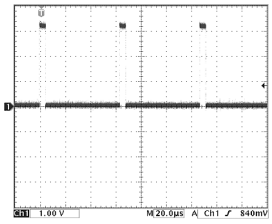

⑦ IC6107-pin 87 (PLSINI1)
V: 1V/div. H: 100msec/div.

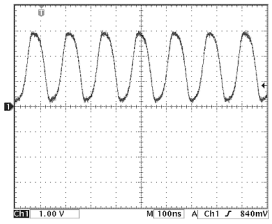

⑧ IC6107-pin 90 (PLSINI2)
V: 1V/div. H: 100msec/div.

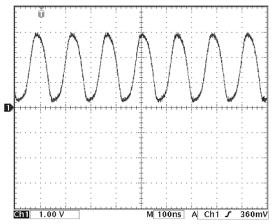

⑨ Q6257 (2/2)-Emitter (YIN)
V: 200mV/div. H: 20µsec/div.

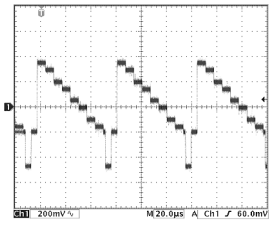

⑩ Q6256 (2/2)-Emitter (CIN)
V: 200mV/div. H: 20µsec/div.

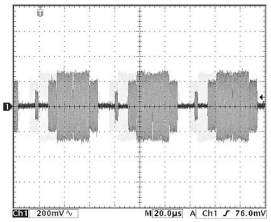

⑪ IC6255-pin 65 (Cr)
V: 200mV/div. H: 20µsec/div.

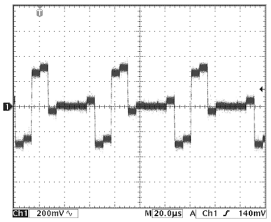

⑫ IC6255-pin 67 (Y)
V: 200mV/div. H: 20µsec/div.

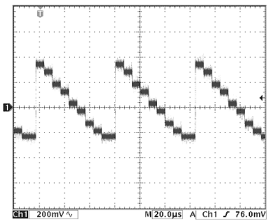

⑬ IC6255-pin 72 (Cb)
V: 200mV/div. H: 20µsec/div.

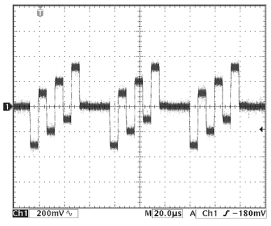

⑭ IC6255-pin 108 (HD_IC1S)
V: 1V/div. H: 20µsec/div.

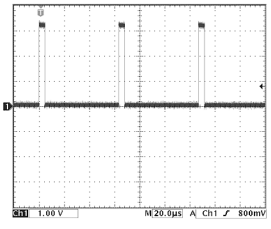

⑮ IC6255-pin 107 (VD_IC1S)
V: 1V/div. H: 4msec/div.

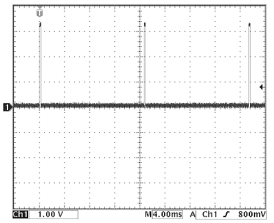

⑯ IC6255-pin 90 (PLSINI2)
V: 1V/div. H: 100nsec/div.

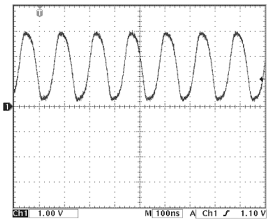

⑰ IC6255-pin 87 (PLSINI1)
V: 1V/div. H: 100nsec/div.

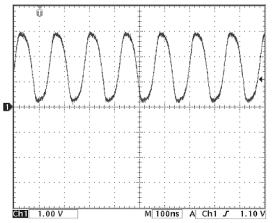

⑱ Foot of R6294 (SYSCLK)
V: 1V/div. H: 20nsec/div.

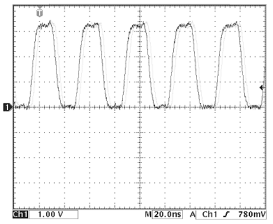

VIDEO SLOT2 ASSY(2/4)

• IC1(Y/C) BLOCK

Input: INPUT 3
Signal: Y/C NTSC 525i, Color-bar

VIDEO SLOT2 ASSY (4/4)
• SIGNAL SW BLOCK

⑲ (-) side of C7908 (G/Y)
V: 200mV/div. H: 20µsec/div.

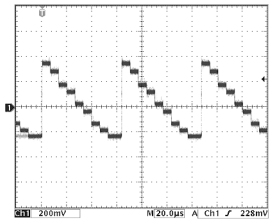

⑳ (-) side of C7912 (B/Cb)
V: 200mV/div. H: 20µsec/div.

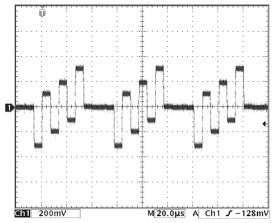

㉑ (-) side of C7917 (R/Cr)
V: 200mV/div. H: 20µsec/div.

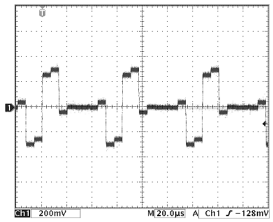

AV I/O ASSY (1/3)
• AV I/O BLOCK
• VIDEO
Input: INPUT 1
Signal: RGB, XGA 60 Hz, Color-bar

① CH1: CN7605-pin 10(HD_IO)
V: 2V/div. H: 5µsec/div.
② CH2: CN7605-pin 16 (R_IO)
V: 500mV/div. H: 5µsec/div.

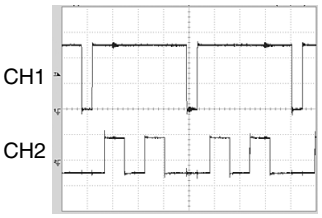

⑥ CH1: JA7606-pin 13 (HD)
V: 2V/div. H: 5µsec/div.
⑧ CH2: JA7606-pin 2 (G)
V: 500mV/div. H: 5µsec/div.

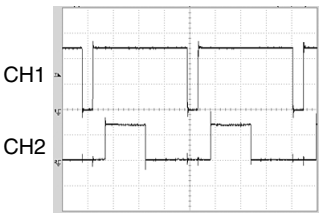

① CH1: CN7605-pin 10(HD_IO)
V: 2V/div. H: 5µsec/div.
③ CH2: CN7605-pin 14 (G_IO)
V: 500mV/div. H: 5µsec/div.

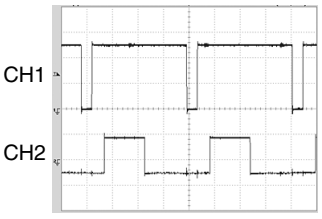

⑥ CH1: JA7606-pin 13 (HD)
V: 2V/div. H: 5µsec/div.
⑨ CH2: JA7606-pin 3 (B)
V: 500mV/div. H: 5µsec/div.

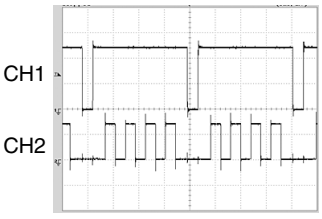

① CH1: CN7605-pin 10(HD_IO)
V: 2V/div. H: 5µsec/div.
④ CH2: CN7605-pin 12 (B_IO)
V: 500mV/div. H: 5µsec/div.

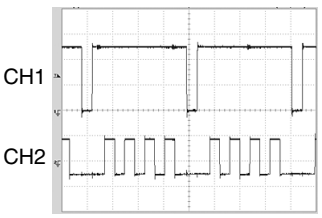

⑩ JA7606-pin 14 (VD)
V: 2V/div. H: 5msec/div.

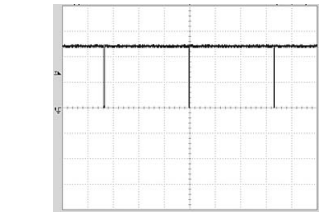

⑤ CN7605-pin 9 (VD_IO)
V: 2V/div. H: 5msec/div.

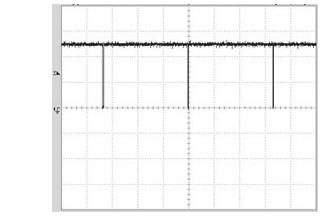

⑥ CH1: JA7606-pin 13 (HD)
V: 2V/div. H: 5µsec/div.
⑦ CH2: JA7606-pin 1 (R)
V: 500mV/div. H: 5µsec/div.

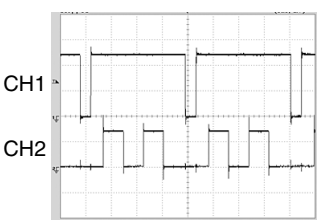

AV I/O ASSY (1/3)
• AV I/O BLOCK
• AUDIO
Input: INPUT 1
Signal: 200mVrms, 1 kHz input, VOL MAX

⑪ IC7601-pin 12 (L-AUDIO)
V: 200mV/div. H: 500µsec/div.

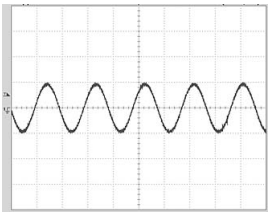

⑫ IC7603-pin 14 (L-AUDIO)
V: 200mV/div. H: 500µsec/div.

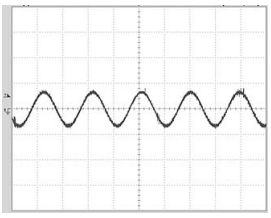

⑬ CH1: CN7601-pin 14 (+L_OUT)
V: 200mV/div. H: 500µsec/div.
⑭ CH2: CN7601-pin 13 (-L_OUT)
V: 200mV/div. H: 500µsec/div.

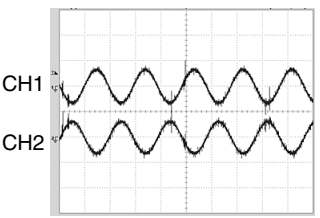

AUDIO AMP ASSY
• AUDIO
Input: INPUT 1
Signal: 200mVrms, 1 kHz input, VOL MAX

① IC5003-pin 1 (L-AUDIO)
V: 50mV/div. H: 500µsec/div.

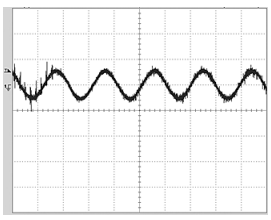

② CH1: CN5003-pin 9 (L-)
V: 2V/div. H: 500µsec/div.
③ CH2: CN5003-pin 8 (L+)
V: 2V/div. H: 500µsec/div.

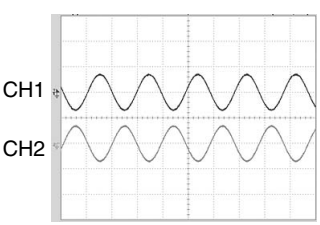

50 (43) X DRIVE ASSY, 50 (43) Y DRIVE ASSY and 50 (43) SCAN A ASSY

• 50 (43) X SUS BLOCK, 50 (43) Y LOGIC BLOCK, 50 (43) Y SUS BLOCK

Note:
50 (43) *** Assy means (50 *** Assy or 43 *** Assy.)

① Drive Output Waveform (1 field,color-bar)

CH1: R1226 (XPSUS) - K1201 (SUSGND)
(50 X DRIVE ASSY)
CH2: R2348 (YPSUS) - K2301 (SUSGND)
(50 Y DRIVE ASSY)
CH3: K3001 (Scan OUT) - K2301 (SUSGND)
(50 SCAN A ASSY)
V: 100V/div. H: 2msec/div.

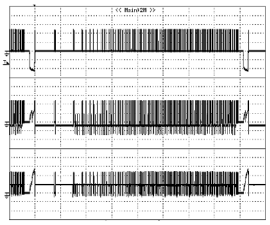

① Reset Pulse

CH1: R1226 (XPSUS) - K1201 (SUSGND)
(50 X DRIVE ASSY)
CH2: R2348 (YPSUS) - K2301 (SUSGND)
(50 Y DRIVE ASSY)
CH3: K3001 (Scan OUT) - K2301 (SUSGND)
(50 SCAN A ASSY)
V: 100V/div. H: 100µsec/div.

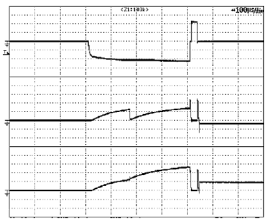

① Sustain Pulse (1 sub-sub-field)

CH1: R1226 (XPSUS) - K1201 (SUSGND)
(50 X DRIVE ASSY)
CH2: R2348 (YPSUS) - K2301 (SUSGND)
(50 Y DRIVE ASSY)
CH3: K3001 (Scan OUT) - K2301 (SUSGND)
(50 SCAN A ASSY)
V: 50V/div. H: 5µsec/div.

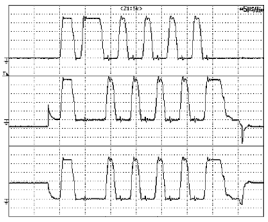

② Sustain Waveform

CH1: R2348 (YPSUS) - K2301 (SUSGND)
(50 Y DRIVE ASSY)
V: 50V/div. H: 500nsec/div.

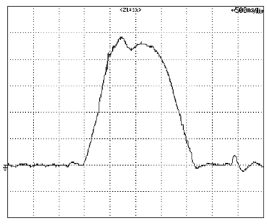

③ Control Signal (Sustain Waveform Gen.)

CH2: K2016 (YSUS-G) - K2010 (DGND)
CH3: K2025 (YSUS-U1) - K2010 (DGND)
CH4: K2022 (YSUS-U2) - K2010 (DGND)
CH5: K2026 (YSUS-B) - K2010 (DGND)
CH6: K2024 (YSUS-D2) - K2010 (DGND)
CH7: K2027 (YSUS-D1) - K2010 (DGND)
(50 Y DRIVE ASSY)
V: 1V/div. H: 500nsec/div.

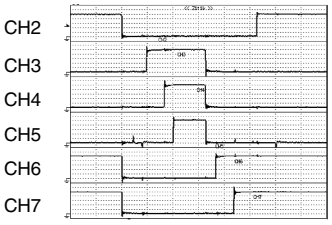

④ Scan Control Signal (1 field, color-bar)

CH2: K2006 (SI) - K2029 (DGND)
CH3: K2009 (OC1) - K2029 (DGND)
CH4: K2004 (OC2) - K2029 (DGND)
CH5: K2007 (CLR) - K2029 (DGND)
CH6: K2003 (CLK2) - K2029 (DGND)
CH7: K2008 (LE) - K2029 (DGND)
(50 Y DRIVE ASSY)
V: 1V/div. H: 2msec/div.

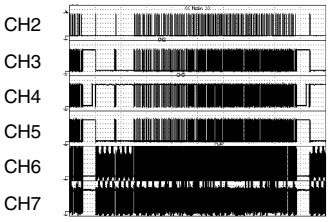

⑤ X Drive Pulse Control Signal (color-bar)

CH1: R1226 (XPSUS) - K2301 (SUSGND)
V: 100V/div. H: 2msec/div.
CH2: K1016 (XCP-MSK) - K1020 (DGND)
CH3: K1015 (XSUS-MSK) - K1020 (DGND)
CH4: K1014 (XNR-D) - K1020 (DGND)
V: 1V/div. H: 2msec/div.
(50 X DRIVE ASSY)

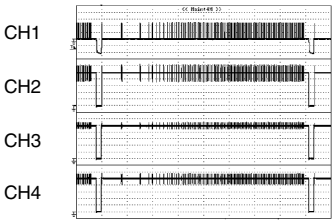

⑥ Y Drive Pulse Control Signal (color-bar)

CH1: R2348 (YPSUS) - K2301 (SUSGND)
V: 50V/div. H: 2msec/div.
CH2: K2015 (YSUS-MSK) - K2010 (DGND)
CH3: K2017 (YSOFT-D) - K2010 (DGND)
CH4: K2023 (YPR-U) - K2010 (DGND)
V: 1V/div. H: 2msec/div.
(50 Y DRIVE ASSY)

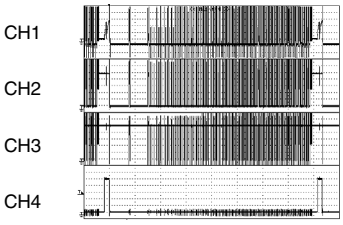

50 (43) ADDRESS ASSY

• ADR RESONANCE BLOCK (VIDEO and PC)

Note:
50 (43) *** Assy means
50 *** Assy or 43 *** Assy.

① CH1: IC1601-pin 2 (ADR_B2)
CH2: IC1603-pin 4 (ADR_U1)
CH3: IC1603-pin 2 (ADR_D1)
V: 1V/div.
(Input: VIDEO, Signal: Color-bar)

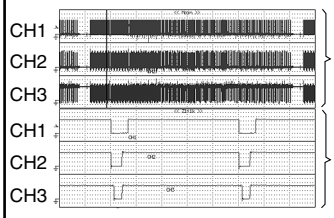

② CH1: IC1601-pin 2 (ADR_B2)
CH2: IC1602-pin 4 (ADR_U2)
CH3: IC1602-pin 2 (ADR_D2)
V: 1V/div.
(Input: VIDEO, Signal: Color-bar)

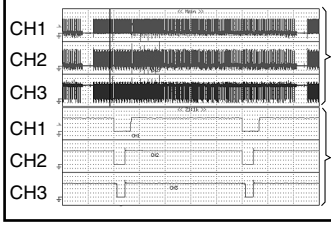

③ CH2: Q1601-pin 4 (ADR_B2)
CH3: Q1603-pin 4 (ADR_U1)
CH4: Q1603-pin 2 (ADR_D1)
V: 10V/div.
(Input: VIDEO, Signal: Color-bar)

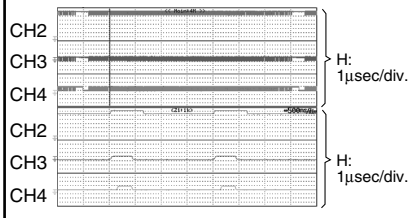

④ CH2: Q1601-pin 4 (ADR_B2)
CH3: Q1602-pin 4 (ADR_U2)
CH4: Q1602-pin 2 (ADR_D2)
V: 10V/div.
(Input: VIDEO, Signal: Color-bar)

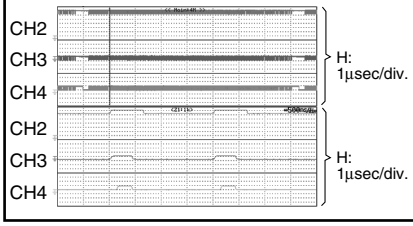

⑤ CH1: Q1601 Drain (V+ADR)
CH2: Q1603 Source
CH3: Q1602 Source
V: 10V/div.
(Input: VIDEO, Signal: Color-bar)

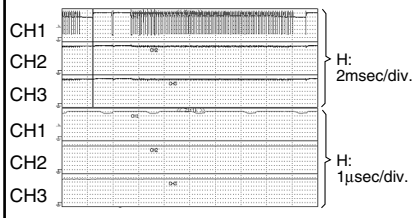

⑥ CH1: Q1601 Drain (V+ADR)
CH2: Q1603 Source
CH3: Q1602 Source
V: 10V/div.
(Input: VIDEO, Signal: B/W(1×8))

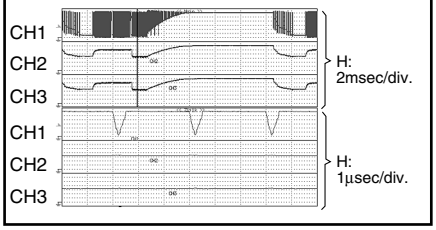

50 ADDRESS ASSY

• ADR LOGIC BLOCK

① CH1: IC1553-pin 18 (CLK input)
CH2: IC1553-pin 16 (LE input)
CH3: IC1553-pin 9 (DATA input)
V: 1V/div.
(Input: VIDEO, Signal: Color-bar)

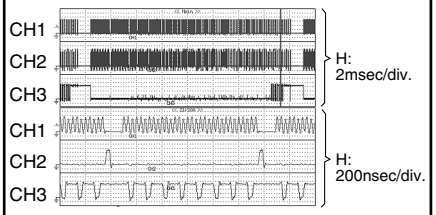

② CH1: IC1553-pin 23 (HBLK input)
CH2: IC1553-pin 19 (LBLK input)
CH3: IC1553-pin 25 (HZ input)
V: 1V/div.
(Input: VIDEO, Signal: Color-bar)

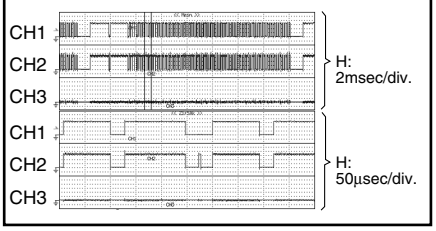

43 ADDRESS ASSY

• ADR LOGIC BLOCK

① CH1: IC1552-pin 18 (CLK input)
CH2: IC1552-pin 16 (LE input)
CH3: IC1552-pin 9 (DATA input)
V: 1V/div.
(Input: VIDEO, Signal: Color-bar)

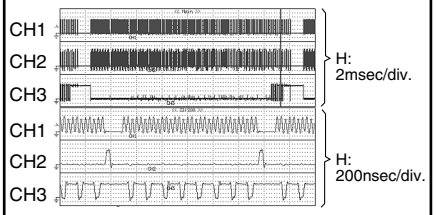

② CH1: IC1552-pin 23 (HBLK input)
CH2: IC1552-pin 19 (LBLK input)
CH3: IC1552-pin 25 (HZ input)
V: 1V/div.
(Input: VIDEO, Signal: Color-bar)

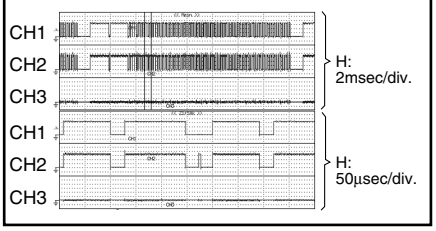

3.3 VOLTAGES

• Voltages

CN5601 (D1)

No.	Signal Name	I/O	Signal Description	Voltages at NTSC Signal Input
1	+12V	I	+12V power input	+12VDC
2	+12V	I	+12V power input	+12VDC
3	GND_D	–	GND	
4	GND_D	–	GND	
5	PD	O	Power down signal	0VDC
6	VSUS_ADJ	O	VSUS adjustment signal	
7	PS_PD	I	Power-down detecting signal of POWER SUPPLY block	0VDC
8	RELAY	O	Relay control signal	+3.3VDC
9	DRF	O	Drive control signal	0VDC
10	AC_DET	I	Primary side power (AC) state output at panel side	+3.0VDC
11	PD_TRIGGER	I	Power down trigger	+3.3VDC

CN5602 (D2)

No.	Signal Name	I/O	Signal Description	Voltages at NTSC Signal Input
1	VADR	I	Address drive power (+61V) input	+61VDC
2	VADR	I	Address drive power (+61V) input	+61VDC
3	N.C		Not connected	
4	GND_ADR	–	GND	
5	GND_ADR	–	GND	
6	+6.5V	I	+6.5V power input	+6.8VDC
7	GND_D	–	GND	

RGB ASSY — POWER SUPPLY ASSY

R1 (CN7404)		Voltage (V)	P8	
No.	Name		Name	No.
1	V+16.5V	16.7	V+16.5V	1
2	GND	0	GND	2
3	V+12V	12.9	V+12V	3
4	V+12V	12.9	V+12V	4
5	GND	0	GND	5
6	GND	0	GND	6
7	V+6.5V	6.8	V+6.5V	7
8	V+6.5V	6.8	V+6.5V	8
9	GND	0	GND	9
10	GND	0	GND	10
11	V+3V_STB	3.3	V+3V_STB	11
12	GND	0	GND	12
13	AC_DET	2.7	AC_DET	13

RGB ASSY — AV I/O ASSY

R2 (CN6401)		Voltage (V)	AV4 (CN8705)	
No.	Name		Name	No.
1	VD_SLOT	0	VD_SLOT	1
2	HD_SLOT	0	HD_SLOT	2
3	GNDD	0	GNDD	3
4	B_SLOT	0	B_SLOT	4
5	GNDD	0	GNDD	5
6	G_SLOT	0	G_SLOT	6
7	GNDD	0	GNDD	7
8	R_ SLOT	0	R_ SLOT	8
9	VD_ IO	0	VD_ IO	9
10	HD_ IO	5	HD_ IO	10
	R13 (CN6402)			
1	GNDD	0	GNDD	11
2	B_ IO	0	B_ IO	12
3	GNDD	0	GNDD	13
4	G_ IO	0	G_ IO	14
5	GNDD	0	GNDD	15
6	R_ IO	0	R_ IO	16

RGB ASSY — COMM SLOT I/F ASSY

R3 (CN7406)		Voltage (V)	CS2 (CN8902)	
No.	Name		Name	No.
1	V+5V_STB	5.1	V+5V_STB	1
2	GND	0	GND	2
3	V+3V_STB	3.3	V+3V_STB	3
4	CYOBI1	3.3	CYOBI1	4
5	CYOBI2	0	CYOBI2	5
6	CYOBI3	0	CYOBI3	6
7	GND	0	GND	7
8	SR_OUT	4.9	SR_OUT	8
9	SLOT_ST_COM	3.3	SLOT_ST_COM	9
10	V+6V	6.8	V+6V	10
11	NC			

RGB ASSY — VIDEO SLOT I/F ASSY

R4 (CN7407)		Voltage (V)	VS1 (CN8951)	
No.	Name		Name	No.
1	GND	0	GND	1
2	GND	0	GND	2
3	V+13V	13.6	V+13V	3
4	V+13V	13.6	V+13V	4
5	V+12V	12.9	V+12V	5
6	V+12V	12.9	V+12V	6
7	GND	0	GND	7
8	V+3V_STB	3.3	V+3V_STB	8
9	GND	0	GND	9
10	V+3V_DD	3.3	V+3V_DD	10
11	V+3V_DD	3.3	V+3V_DD	11
12	GND	0	GND	12

RGB ASSY — DIGITAL VIDEO ASSY

R5 (CN7408)		Voltage (V)	D3 (CN5002)	
No.	Name		Name	No.
1	V+1V_DD	1.4	V+1V_DD	1
2	V+1V_DD	1.4	V+1V_DD	2
3	V+1V_DD	1.4	V+1V_DD	3
4	GND	0	GND	4
5	GND	0	GND	5
6	GND	0	GND	6
7	V+3V_DD	3.3	V+3V_DD	7
8	V+3V_DD	3.3	V+3V_DD	8
9	GND	0	GND	9
10	GND	0	GND	10
11	NC			
12	NC			

RGB ASSY — FAN (L), (R)

R8 (CN7402)		Voltage (V)	FAN (L)	
No.	Name		Name	No.
1	FAN_12V	0	FAN_12V	1
2	FAN_NG	3.2	FAN_NG	2
3	GND	0	GND	3
			FAN (R)	
4	FAN_12V	0	FAN_12V	1
5	FAN_NG	3.2	FAN_NG	2
6	GND	0	GND	3
7	NC			

RGB ASSY — TRAP SW (ASG1089)

R6 (CN7204)		Voltage (V)	TRAP SW (CN5801)	
No.	Name		Name	No.
1	TRAP_SW	3.3	TRAP_SW	1
2	NC	0	NC	2
3	3.3V	3.3	3.3V	3

RGB ASSY

R9 (CN5701)				
No.	Name			
AV I/O IF ASSY			AV I/O ASSY	
CN2102, AV6 (CN2101)		Voltage (V)	CN8705	
No.	Name		Name	No.
1	N.C.	0	N.C.	101
2	N.C.	0	N.C.	102
3	A_R_SLOT	6	A_R_SLOT	103
4	GND	0	GND	104
5	A_L_SLOT	6	A_L_SLOT	105
6	GND	0	GND	106
7	V+12V	12.9	V+12V	107
8	GND	0	GND	108
9	1N1_HD	4.4	1N1_HD	109
10	1N1_VD	0	1N1_VD	110
11	WE_ROM_B	0	WE_ROM_B	111
12	KEY	3.3	KEY	112
13	IO_YOBI2	3.2	IO_YOBI2	113
14	SR_OUT	5	SR_OUT	114
15	RXD_IF	3.3	RXD_IF	115
16	CLK_IF	3.3	CLK_IF	116
17	RXD_WR	3.3	RXD_WR	117
18	REQ_IF	0	REQ_IF	118
19	RST_IF	0	RST_IF	119
20	IF_CE	3.2	IF_CE	120
21	HOT_P1	0	HOT_P1	121
22	HDMI2_SDA	0	HDMI2_SDA	122
23	HDMI_INT1	3.2	HDMI_INT1	123
24	SCL_AV	3.3	SCL_AV	124
25	HDMI_AUDIO_CLK	3.2	HDMI_AUDIO_CLK	125
26	D_AUDIO_SEL	3.3	D_AUDIO_SEL	126
27	CEC2	0	CEC2	127
28	GND	0	GND	128
29	HD_DVI	0	HD_DVI	129
30	DE_DVI	0	DE_DVI	130
31	GND	0	GND	131
32	RB_DVI7	0/3.3	RB_DVI7	132
33	RB_DVI6	0/3.3	RB_DVI6	133
34	RB_DVI4	0/3.3	RB_DVI4	134
35	RB_DVI2	0/3.3	RB_DVI2	135
36	RB_DVI0	0/3.3	RB_DVI0	136
37	GB_DVI6	0/3.3	GB_DVI6	137
38	GB_DVI4	0/3.3	GB_DVI4	138
39	GB_DVI2	0/3.3	GB_DVI2	139
40	GB_DVI0	0/3.3	GB_DVI0	140
41	BB_DVI6	0/3.3	BB_DVI6	141
42	BB_DVI4	0/3.3	BB_DVI4	142
43	BB_DVI2	0/3.3	BB_DVI2	143
44	BB_DVI0	0/3.3	BB_DVI0	144
45	RA_DVI7	0/3.3	RA_DVI7	145
46	RA_DVI5	0/3.3	RA_DVI5	146
47	RA_DVI3	0/3.3	RA_DVI3	147
48	RA_DVI1	0/3.3	RA_DVI1	148
49	GND	0	GND	149
52	GA_DVI7	0/3.3	GA_DVI7	152
53	GA_DVI5	0/3.3	GA_DVI5	153
54	GA_DVI3	0/3.3	GA_DVI3	154
55	GA_DVI1	0/3.3	GA_DVI1	155
56	BA_DVI7	0/3.3	BA_DVI7	156

RGB ASSY

R9 (CN5701)				
No.	Name			
AV I/O IF ASSY			AV I/O ASSY	
CN2102, AV6 (CN2101)		Voltage (V)	CN8705	
No.	Name		Name	No.
57	BA_DVI5	0/3.3	BA_DVI5	157
58	BA_DVI3	0/3.3	BA_DVI3	158
59	GND	0	GND	159
60	V+5V_A2	5	V+5V_A2	160
61	N.C.	0	N.C.	161
62	N.C.	0	N.C.	162
101	N.C.	0	N.C.	1
102	N.C.	0	N.C.	2
103	A_MUTE	0	A_MUTE	3
104	TEMP3	0 - 3.3	TEMP3	4
105	V+6V	6.8	V+6V	5
106	GND	0	GND	6
107	V+3V_A1	3.3	V+3V_A1	7
108	GND	0	GND	8
109	V+3V_UCOM	3.3	V+3V_UCOM	9
110	GND	0	GND	10
111	V+3VSTB	3.3	V+3VSTB	11
112	IO_YOBI1	0	IO_YOBI1	12
113	PN2	0	PN2	13
114	ACTIVE	3.2	ACTIVE	14
115	TXD_IF	3.3	TXD_IF	15
116	TXD_WR	3.3	TXD_WR	16
117	AC_DET	2.6	AC_DET	17
118	IF_BUSY	0	IF_BUSY	18
119	RESET	3.3	RESET	19
120	HDMI_AUDIO_CE	3.3	HDMI_AUDIO_CE	20
121	HOT_P2	3.3	HOT_P2	21
122	HDMI2_SCL	3.3	HDMI2_SCL	22
123	SDA_AV	3.2	SDA_AV	23
124	HDMI_INT2	3.2	HDMI_INT2	24
125	HDMI_AUDIO_TXD	3.3	HDMI_AUDIO_TXD	25
126	CEC1	0	CEC1	26
127	RESETX1	3.3	RESETX1	27
128	VD_DVI	0	VD_DVI	28
129	GND	0	GND	29
130	CLK_DVI	0	CLK_DVI	30
131	GND	0	GND	31
132	GND	0	GND	32
133	RB_DVI5	0/3.3	RB_DVI5	33
134	RB_DVI3	0/3.3	RB_DVI3	34
135	RB_DVI1	0/3.3	RB_DVI1	35
136	GB_DVI7	0/3.3	GB_DVI7	36
137	GB_DVI5	0/3.3	GB_DVI5	37
138	GB_DVI3	0/3.3	GB_DVI3	38
139	GB_DVI1	0/3.3	GB_DVI1	39
140	GND	0	GND	40
141	BB_DVI6	0/3.3	BB_DVI6	41
142	BB_DVI4	0/3.3	BB_DVI4	42
143	BB_DVI2	0/3.3	BB_DVI2	43
144	BB_DVI0	0/3.3	BB_DVI0	44
145	RA_DVI6	0/3.3	RA_DVI6	45
146	RA_DVI4	0/3.3	RA_DVI4	46
147	RA_DVI2	0/3.3	RA_DVI2	47
148	RA_DVI0	0/3.3	RA_DVI0	48

RGB ASSY

R9 (CN5701)			
No.	Name		
AV I/O IF ASSY			AV I/O ASSY
CN2102, AV6 (CN2101)		Voltage (V)	CN8705
No.	Name		Name / No.
149	GND	0	GND 49
152	GA_DVI6	0/3.3	GA_DVI6 52
153	GA_DVI4	0/3.3	GA_DVI4 53
154	GA_DVI2	0/3.3	GA_DVI2 54
155	GA_DVI0	0/3.3	GA_DVI0 55
156	BA_DVI6	0/3.3	BA_DVI6 56
157	BA_DVI4	0/3.3	BA_DVI4 57
158	BA_DVI2	0/3.3	BA_DVI2 58
159	BA_DVI1	0/3.3	BA_DVI1 59
160	BA_DVI0	0/3.3	BA_DVI0 60
161	NC	0	NC 61
162	NC	0	NC 62

RGB ASSY VIDEO SLOT I/F ASSY

R11 (CN7410)		Voltage (V)	VS3 (CN8955)
No.	Name		Name / No.
1	GND	0	GND 1
2	KEY	3.3	KEY 2
3	EMGREQ1_V	0	EMGREQ1_V 3
4	EMGREQ2_V	0	EMGREQ2_V 4
5	IC1V_OE	3.3	IC1V_OE 5
6	RESETX1	3.3	RESETX1 6
7	GND	0	GND 7
8	SD_SEL	3.3	SD_SEL 8
9	FNC2	0	FNC2 9
10	FNC3	0	FNC3 10
11	SOUND1	3.3	SOUND1 11
12	GND	0	GND 12
13	DSUBR	3.8	DSUBR 13
14	GND	0	GND 14
15	DSUBG	3.8	DSUBG 15
16	GND	0	GND 16
17	DSUBB	3.8	DSUBB 17
18	GND	0	GND 18
19	GND	0	GND 19
20	IN5_HD	0	IN5_HD 20
21	GND	0	GND 21
22	SOUSA_X	3.3	SOUSA_X 22
23	VYOBI1	0	VYOBI1 23
24	VYOBI2	0	VYOBI2 24
25	DSUBSW_DET	3.3	DSUBSW_DET 25
26	GND	0	GND 26
27	GND	0	GND 27
28	GND	0	GND 28
29	EMGREQ1_S	0	EMGREQ1_S 29
30	EMGREQ2_S	0	EMGREQ2_S 30
31	IC1S_OE	0	IC1S_OE 31
32	SLOT_ST3	0.4	SLOT_ST3 32
33	M_CHOICE	0	M_CHOICE 33
34	SOUND2	0	SOUND2 34
35	GND	0	GND 35
36	GND	0	GND 36
37	DSUBH	5	DSUBH 37

RGB ASSY VIDEO SLOT I/F ASSY

R11 (CN7410)		Voltage (V)	VS3 (CN8955)
No.	Name		Name / No.
38	GND	0	GND 38
39	GND	0	GND 39
40	DSUBV	0	DSUBV 40
41	GND	0	GND 41
42	GND	0	GND 42
43	IN5_VD	3.3	IN5_VD 43
44	GND	0	GND 44
45	GND	0	GND 45
46	HYOUJI_X	0	HYOUJI_X 46
47	VYOBI4	0	VYOBI4 47
48	VYOBI5	0	VYOBI5 48
49	VYOBI6	0	VYOBI6 49
50	WE_ROM_B	0	WE_ROM_B 50

RGB ASSY VIDEO SLOT I/F ASSY

R12 (CN7405)		Voltage (V)	VS4 (CN8953)
No.	Name		Name / No.
1	GND	0	GND 1
2	GND	0	GND 2
3	G_SLOT	0	G_SLOT 3
4	GND	0	GND 4
5	B_SLOT	0	B_SLOT 5
6	GND	0	GND 6
7	R_SLOT	0	R_SLOT 7
8	GND	0	GND 8
9	HD_SLOT	0	HD_SLOT 9
10	GND	0	GND 10
11	VD_SLOT	0	VD_SLOT 11
12	GND	0	GND 12
13	AUDIO_L_SLOT	6	AUDIO_L_SLOT 13
14	GND	0	GND 14
15	AUDIO_R_SLOT	6	AUDIO_R_SLOT 15
16	GND	0	GND 16
17	SLOT_ST1	0	SLOT_ST1 17
18	S_DIN_SEL	0	S_DIN_SEL 18
19	FNC_1	0	FNC_1 19
20	FNC_0	5	FNC_0 20
21	NC	0	NC 21
22	NC	0	NC 22
23	VD_DET	0	VD_DET 23
24	GND	0	GND 24
25	HD_DET	0	HD_DET 25
26	GND	0	GND 26
27	VD_IC1	3.2	VD_IC1 27
28	GND	0	GND 28
29	HD_IC1	3	HD_IC1 29
30	GND	0	GND 30
31	GND	0	GND 31
32	RB0_IC1	0/3.3	RB0_IC1 32
33	RB1_IC1	0/3.3	RB1_IC1 33
34	RB2_IC1	0/3.3	RB2_IC1 34
35	RB3_IC1	0/3.3	RB3_IC1 35
36	RB4_IC1	0/3.3	RB4_IC1 36
37	RB5_IC1	0/3.3	RB5_IC1 37

RGB ASSY — VIDEO SLOT I/F ASSY

R12 (CN7405)		Voltage (V)	VS4 (CN8953)	
No.	Name		Name	No.
38	RB6_IC1	0/3.3	RB6_IC1	38
39	RB7_IC1	0/3.3	RB7_IC1	39
40	GND	0	GND	40
41	GND	0	GND	41
42	GB0_IC1	0/3.3	GB0_IC1	42
43	GB1_IC1	0/3.3	GB1_IC1	43
44	GB2_IC1	0/3.3	GB2_IC1	44
45	GB3_IC1	0/3.3	GB3_IC1	45
46	GB4_IC1	0/3.3	GB4_IC1	46
47	GB5_IC1	0/3.3	GB5_IC1	47
48	GB6_IC1	0/3.3	GB6_IC1	48
49	GB7_IC1	0/3.3	GB7_IC1	49
50	GND	0	GND	50
51	GND	0	GND	51
52	BB0_IC1	0/3.3	BB0_IC1	52
53	BB1_IC1	0/3.3	BB1_IC1	53
54	BB2_IC1	0/3.3	BB2_IC1	54
55	BB3_IC1	0/3.3	BB3_IC1	55
56	BB4_IC1	0/3.3	BB4_IC1	56
57	BB5_IC1	0/3.3	BB5_IC1	57
58	BB6_IC1	0/3.3	BB6_IC1	58
59	BB7_IC1	0/3.3	BB7_IC1	59
60	GND	0	GND	60
61	GND	0	GND	61
62	GND	0	GND	62
63	SCL_VS	3.1	SCL_VS	63
64	GND	0	GND	64
65	SDA_VS	3.1	SDA_VS	65
66	GND	0	GND	66
67	GND	0	GND	67
68	GND	0	GND	68
69	NC	0	NC	69
70	GND	0	GND	70
71	NC	0	NC	71
72	GND	0	GND	72
73	NC	0	NC	73
74	GND	0	GND	74
75	NC	0	NC	75
76	NC	0	NC	76
77	IN4_DET	5	IN4_DET	77
78	IN3_DET	0	IN3_DET	78
79	SLOT_ST2	3	SLOT_ST2	79
80	SR_VS	5.1	SR_VS	80
81	NC	0	NC	81
82	3G4G	3.3	3G4G	82
83	GND	0	GND	83
84	GND	0	GND	84
85	IN5_DET	0	IN5_DET	85
86	GND	0	GND	86
87	DE_IC1	2.5	DE_IC1	87
88	GND	0	GND	88
89	CK_IC1	1.5	CK_IC1	89
90	GND	0	GND	90
91	GND	0	GND	91
92	BA7_IC1	0/3.3	BA7_IC1	92
93	BA6_IC1	0/3.3	BA6_IC1	93
94	BA5_IC1	0/3.3	BA5_IC1	94

RGB ASSY — VIDEO SLOT I/F ASSY

R12 (CN7405)		Voltage (V)	VS4 (CN8953)	
No.	Name		Name	No.
95	BA4_IC1	0/3.3	BA4_IC1	95
96	BA3_IC1	0/3.3	BA3_IC1	96
97	BA2_IC1	0/3.3	BA2_IC1	97
98	BA1_IC1	0/3.3	BA1_IC1	98
99	BA0_IC1	0/3.3	BA0_IC1	99
100	GND	0	GND	100
101	GND	0	GND	101
102	GA7_IC1	0/3.3	GA7_IC1	102
103	GA6_IC1	0/3.3	GA6_IC1	103
104	GA5_IC1	0/3.3	GA5_IC1	104
105	GA4_IC1	0/3.3	GA4_IC1	105
106	GA3_IC1	0/3.3	GA3_IC1	106
107	GA2_IC1	0/3.3	GA2_IC1	107
108	GA1_IC1	0/3.3	GA1_IC1	108
109	GA0_IC1	0/3.3	GA0_IC1	109
110	GND	0	GND	110
111	GND	0	GND	111
112	RA7_IC1	0/3.3	RA7_IC1	112
113	RA6_IC1	0/3.3	RA6_IC1	113
114	RA5_IC1	0/3.3	RA5_IC1	114
115	RA4_IC1	0/3.3	RA4_IC1	115
116	RA3_IC1	0/3.3	RA3_IC1	116
117	RA2_IC1	0/3.3	RA2_IC1	117
118	RA1_IC1	0/3.3	RA1_IC1	118
119	RA0_IC1	0/3.3	RA0_IC1	119
120	GND	0	GND	120
121	GND	0	GND	121
122	GND	0	GND	122

AV I/O ASSY — AUDIO AMP ASSY

AV1 (CN7601)		Voltage (V)	AP2 (CN5001)	
No.	Name		Name	No.
1	A_NG	3.2	A_NG	15
2	TEMP3	0-3.3	TEMP3	14
3	A_MUTE	0	A_MUTE	13
4	ST_BY	2.5	ST_BY	12
5	GND	0	GND	11
6	V+6V	6.8	V+6V	10
7	V+3V	3.3	V+3V	9
8	V+12A	12	V+12A	8
9	GND	0	GND	7
10	-R_OUT	6	-R_OUT	6
11	+R_OUT	6	+R_OUT	5
12	GND	0	GND	4
13	-L_OUT	6	-L_OUT	3
14	+L_OUT	6	+L_OUT	2
15	GND	0	GND	1

AV I/O ASSY — KEY CONTROL ASSY

AV2 (CN8702)		Voltage (V)	KY1 (CN9001)	
No.	Name		Name	No.
1	GND	0	GND	1
2	KEY	3.3	KEY	2
3	V+3VSTB	3.3	V+3VSTB	3

AV I/O ASSY — LED ASSY

AV3 (CN8703)		Voltage (V)	KY1 (CN9651)	
No.	Name		Name	No.
1	V+3STB	3.3	V+3STB	1
2	LED_ G	0	LED_ G	2
3	LED_ R	3.3	LED_ R	3
4	GND	0	GND	4
5	AC_ DET	2.6	AC_ DET	5

AV I/O ASSY — COMM SLOT I/F ASSY

AV5 (CN8704)		Voltage (V)	KY1 (CN8905)	
No.	Name		Name	No.
1	GND	0	GND	1
2	UART_SW	3.3	UART_SW	2
3	KEY	3.3	KEY	3
4	RXD	3.3	RXD	4
5	TXD	3.3	TXD	5
6	GND	0	GND	6

AUDIO AMP ASSY — POWER SUPPLY ASSY

AP1 (CN5002)		Voltage (V)	P6	
No.	Name		Name	No.
1	V+16R5	16.7	V+16R5	1
2	V+16R5	16.7	V+16R5	2
3	GNDP	0	GNDP	3
4	GNDP	0	GNDP	4
5	GNDP	0	GNDP	5
6	GNDP	0	GNDP	6

AUDIO AMP ASSY — SP TERMINAL R ASSY

AP3 (CN5003)		Voltage (V)	SP2 (CN9801)	
No.	Name		Name	No.
1	GND	0	GND	1
2	R+	5.3	R+	2
3	R-	5.2	R-	3
			SP TERMINAL L ASSY	
			SP1 (CN9702)	
4	STBGND	0	STBGND	1
5	TEMP3	0-3.3	TEMP3	2
6	V+3VDD	3.3	V+3VDD	3
7	GND	0	GND	4
8	L+	5.3	L+	5
9	L-	5.2	L-	6

COMM SLOT I/F ASSY — IR ASSY

CS4 (CN8901)		Voltage (V)	RE1 (CN4901)	
No.	Name		Name	No.
1	V+3STB	3.3	V+3STB	1
2	GND	0	GND	2
3	SR	0	SR	3
4	GND	0	GND	4

COMM SLOT I/F ASSY — COMM SLOT ASSY

CS5 (CN8904)		Voltage (V)	CN9454	
No.	Name		Name	No.
1	NC	0	NC	1
2	IRSW	0	IRSW	2
3	IR_COMM_OUT	4.9	IR_COMM_OUT	3
4	IR_COMM_IN	4.9	IR_COMM_IN	4
5	GND	0	GND	5
6	GND	0	GND	6
7	GND	0	GND	7
8	CYOBI3	0	CYOBI3	8
9	CYOBI2	0	CYOBI2	9
10	CSL_ST2	3.3	CSL_ST2	10
11	CSL_ST1	3.3	CSL_ST1	11
12				12
13				13
14	GND	0	GND	14
15	GND	0	GND	15
16	FIRST_RXD	3.3	FIRST_RXD	16
17	GET_UART	3.3	GET_UART	17
18	INT_EXT	3.3	INT_EXT	18
19	RXD_CARD	0	RXD_CARD	19
20	TXD_CARD	0	TXD_CARD	20
21	GPC5	0	GPC5	21
22	GPC4	0	GPC4	22
23	GPC3	0	GPC3	23
24	GPC2	0	GPC2	24
25	GPC1	0	GPC1	25
101	NC	0	NC	101
102	GND	0	GND	102
103	GND	0	GND	103
104	GND	0	GND	104
105	TXD_PDP	3.3	TXD_PDP	105
106	RXD_PDP	3.3	RXD_PDP	106
107	KEY_COMM_IN	3.3	KEY_COMM_IN	107
108	UART_SW	3.3	UART_SW	108
109	GND	0	GND	109
110	GND	0	GND	110
111	GND	0	GND	111
114	V+6.5V	6.8	V+6.5V	114
115	V+6.5V	6.8	V+6.5V	115
116	GND	0	GND	116
117	GND	0	GND	117
118	V+3VSTB	3.3	V+3VSTB	118
119	V+3VSTB	3.3	V+3VSTB	119
120	NC	0	NC	120
121	NC	0	NC	121
122	NC	0	NC	122
123	NC	0	NC	123
124	V+5VSTB	5	V+5VSTB	124
125	V+5VSTB	5	V+5VSTB	125

COMM SLOT I/F ASSY

CS3 (CN8903)		Voltage (V)	VS2 (CN8952)	
No.	Name		Name	No.
1	GND	0	GND	1
2	FIRST_RXD	3.3	FIRST_RXD	2
3	GET_UART	3.3	GET_UART	3
4	INT_EXT	3.3	INT_EXT	4
5	RXD_GU	0	RXD_GU	5
6	TXD_GU	0	TXD_GU	6
7	GPC5	0	GPC5	7
8	GPC4	0	GPC4	8
9	GPC3	0	GPC3	9
10	GPC2	0	GPC2	10
11	GPC1	0	GPC1	11

VIDEO SLOT I/F ASSY

VS5 (CN8954)		Voltage (V)	CN7902	
No.	Name		Name	No.
1	GND	0	GND	1
2	GND	0	GND	2
3	G_SLOT	0	G_SLOT	3
4	GND	0	GND	4
5	B_SLOT	0	B_SLOT	5
6	GND	0	GND	6
7	R_SLOT	0	R_SLOT	7
8	GND	0	GND	8
9	HD_SLOT	0	HD_SLOT	9
10	GND	0	GND	10
11	VD_SLOT	0	VD_SLOT	11
12	GND	0	GND	12
13	AUDIO_L_SLOT	6	AUDIO_L_SLOT	13
14	GND	0	GND	14
15	AUDIO_R_SLOT	6	AUDIO_R_SLOT	15
16	GND	0	GND	16
17	SLOT_ST1	0	SLOT_ST1	17
18	S_DIN_SEL	0	S_DIN_SEL	18
19	FNC_1	0	FNC_1	19
20	FNC_0	5	FNC_0	20
21	V+3.3V	3.2	V+3.3V	21
22	V+3.3V	3.2	V+3.3V	22
23	VD_DET	0	VD_DET	23
24	GND	0	GND	24
25	HD_DET	0	HD_DET	25
26	GND	0	GND	26
27	VD	0	VD	27
28	GND	0	GND	28
29	HD	0	HD	29
30	GND	0	GND	30
31	GND	0	GND	31
32	RB0_IC1	0/3.3	RB0_IC1	32
33	RB1_IC1	0/3.3	RB1_IC1	33
34	RB2_IC1	0/3.3	RB2_IC1	34
35	RB3_IC1	0/3.3	RB3_IC1	35
36	RB4_IC1	0/3.3	RB4_IC1	36
37	RB5_IC1	0/3.3	RB5_IC1	37
38	RB6_IC1	0/3.3	RB6_IC1	38
39	RB7_IC1	0/3.3	RB7_IC1	39
40	GND	0	GND	40
41	GND	0	GND	41
42	GB0_IC1	0/3.3	GB0_IC1	42

VIDEO SLOT I/F ASSY

VS5 (CN8954)		Voltage (V)	CN7902	
No.	Name		Name	No.
43	GB1_IC1	0/3.3	GB1_IC1	43
44	GB2_IC1	0/3.3	GB2_IC1	44
45	GB3_IC1	0/3.3	GB3_IC1	45
46	GB4_IC1	0/3.3	GB4_IC1	46
47	GB5_IC1	0/3.3	GB5_IC1	47
48	GB6_IC1	0/3.3	GB6_IC1	48
49	GB7_IC1	0/3.3	GB7_IC1	49
50		–		50
51		–		51
52	GND	0	GND	52
53	GND	0	GND	53
54	BB0_IC1	0/3.3	BB0_IC1	54
55	BB1_IC1	0/3.3	BB1_IC1	55
56	BB2_IC1	0/3.3	BB2_IC1	56
57	BB3_IC1	0/3.3	BB3_IC1	57
58	BB4_IC1	0/3.3	BB4_IC1	58
59	BB5_IC1	0/3.3	BB5_IC1	59
60	BB6_IC1	0/3.3	BB6_IC1	60
61	BB7_IC1	0/3.3	BB7_IC1	61
62	GND	0	GND	62
63				63
64				64
65	GND	0	GND	65
66	GND	0	GND	66
67	KEY	3.3	KEY	67
68	NC	0	NC	68
69	TXD_CARD	0	TXD_CARD	69
70	RXD_CARD	0	RXD_CARD	70
71	INT_EXT	3.3	INT_EXT	71
72	NC	0	NC	72
73	EMGREQ1_V	0	EMGREQ1_V	73
74	EMGREQ2_V	0	EMGREQ2_V	74
75	IC1V_OE	3.3	IC1V_OE	75
76	RESETX1	3.3	RESETX1	76
77	NC	0	NC	77
78	SD_SEL	3.3	SD_SEL	78
79	FNC2	0	FNC2	79
80	FNC3	0	FNC3	80
81	SOUND1	3.3	SOUND1	81
82	GND	0	GND	82
83	DSUBR	3.8	DSUBR	83
84	GND	0	GND	84
85	DSUBG	3.8	DSUBG	85
86	GND	0	GND	86
87	DSUBB	3.8	DSUBB	87
88	GND	0	GND	88
89	IN5_HD	0	IN5_HD	89
90	SOUSA_X	3.3	SOUSA_X	90
91	GPC1	0	GPC1	91
92	GPC2	0	GPC2	92
93	GPC5	0	GPC5	93
94	VYOBI1	0	VYOBI1	94
95	VYOBI2	0	VYOBI2	95
96	DSUBSW_DET	3.3	DSUBSW_DET	96
101	GND	0	GND	101
102	GND	0	GND	102
103	GND	0	GND	103

VIDEO SLOT 2 ASSY

VIDEO SLOT 2 ASSY

VIDEO SLOT I/F ASSY VIDEO SLOT 2 ASSY

VS5 (CN8954)		Voltage (V)	CN7902	
No.	Name		Name	No.
104	SCL_VS	3.1	SCL_VS	104
105	GND	0	GND	105
106	SDA_VS	3.1	SDA_VS	106
107	GND	0	GND	107
108	GND	0	GND	108
109	GND	0	GND	109
110	V+12V	12.9	V+12V	110
111	GND	0	GND	111
112	NC	0	NC	112
113	GND	0	GND	113
114	V+3.3STB	3.3	V+3.3STB	114
115	V+13.5	13.6	V+13.5	115
116	V+13.5	13.6	V+13.5	116
117	IN4_DET	5	IN4_DET	117
118	IN3_DET	0	IN3_DET	118
119	SLOT_ST2	3	SLOT_ST2	119
120	IR	5.1	IR	120
121	NC	0	NC	121
122	NC	0	NC	122
123	GND	0	GND	123
124	GND	0	GND	124
125	3G4G	3.3	3G4G	125
126	IN5_DET	0	IN5_DET	126
127	GND	0	GND	127
128	DE	2.5	DE	128
129	GND	0	GND	129
130	CLK	1.5	CLK	130
131	GND	0	GND	131
132	BA7_IC1	0/3.3	BA7_IC1	132
133	BA6_IC1	0/3.3	BA6_IC1	133
134	BA5_IC1	0/3.3	BA5_IC1	134
135	BA4_IC1	0/3.3	BA4_IC1	135
136	BA3_IC1	0/3.3	BA3_IC1	136
137	BA2_IC1	0/3.3	BA2_IC1	137
138	BA1_IC1	0/3.3	BA1_IC1	138
139	BA0_IC1	0/3.3	BA0_IC1	139
140	GND	0	GND	140
141	GND	0	GND	141
142	GA7_IC1	0/3.3	GA7_IC1	142
143	GA6_IC1	0/3.3	GA6_IC1	143
144	GA5_IC1	0/3.3	GA5_IC1	144
145	GA4_IC1	0/3.3	GA4_IC1	145
146	GA3_IC1	0/3.3	GA3_IC1	146
147	GA2_IC1	0/3.3	GA2_IC1	147
148	GA1_IC1	0/3.3	GA1_IC1	148
149	GA0_IC1	0/3.3	GA0_IC1	149
150				150
151				151
152	GND	0	GND	152
153	GND	0	GND	153
154	RA7_IC1	0/3.3	RA7_IC1	154
155	RA6_IC1	0/3.3	RA6_IC1	155
156	RA5_IC1	0/3.3	RA5_IC1	156
157	RA4_IC1	0/3.3	RA4_IC1	157
158	RA3_IC1	0/3.3	RA3_IC1	158
159	RA2_IC1	0/3.3	RA2_IC1	159
160	RA1_IC1	0/3.3	RA1_IC1	160

VIDEO SLOT I/F ASSY VIDEO SLOT 2 ASSY

VS5 (CN8954)		Voltage (V)	CN7902	
No.	Name		Name	No.
161	RA0_IC1	0/3.3	RA0_IC1	161
162	GND	0	GND	162
163				163
164				164
165	GND	0	GND	165
166	GND	0	GND	166
167	VSEPSCL	3.3	VSEPSCL	167
168	VSEPSDA	3.3	VSEPSDA	168
169	NC	0	NC	169
170	GET_UART	3.3	GET_UART	170
171	FIRST_RXD	3.3	FIRST_RXD	171
172	NC	0	NC	172
173	EMGREQ1_S	0	EMGREQ1_S	173
174	EMGREQ2_S	0	EMGREQ2_S	174
175	IC1S_OE	0	IC1S_OE	175
176	NC	0	NC	176
177	NC	0	NC	177
178	NC	0	NC	178
179	SLOT_ST3	0.4	SLOT_ST3	179
180	M_CHOICE	0	M_CHOICE	180
181	SOUND2	0	SOUND2	181
182	GND	0	GND	182
183	GND	0	GND	183
184	DSUBH	5	DSUBH	184
185	GND	0	GND	185
186	DSUBV	0	DSUBV	186
187	GND	0	GND	187
188	GND	0	GND	188
189	IN5_VD	3.3	IN5_VD	189
190	HYOUJI_X	0	HYOUJI_X	190
191	GPC3	0	GPC3	191
192	GPC4	0	GPC4	192
193	NC	0	NC	193
194	VYOBI4	0	VYOBI4	194
195	VYOBI5	0	VYOBI5	195
196	VYOBI6	0	VYOBI6	196

KEY CONTROL ASSY FRONT KEY ASSY

KY2 (CN9002)		Voltage (V)	KY4 (CN9400)	
No.	Name		Name	No.
1	D7	0/3.3	D7	1
2	D6	0/3.3	D6	2
3	D5	0/3.3	D5	3
4	G0	0/3.3	G0	4
5	G1	0/3.3	G1	5
6	G2	0/3.3	G2	6

5. PCB PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*

● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω → 56 x 10^1 → 561 ..... RD1/4PU 5 6 1 J

47k Ω → 47 x 10^3 → 473 ..... RD1/4PU 4 7 3 J

0.5 Ω → R50 ..... RN2H R 5 0 K

1 Ω → 1R0 ..... RS1P 1 R 0 K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω → 562 x 10^1 → 5621 ..... RN1/4PC 5 6 2 1 F

LIST OF ASSEMBLIES for PDP-5004, PDP-5014 models

Mark	No.	Description	Part No.
NSP	1	50 ADDRESS ASSY	AWV2080
NSP	2	50 ADDRESS ASSY	AWZ6870
NSP	1	50 SCAN FUKUGO ASSY	AWV2083
NSP	2	50 SCAN A ASSY	AWZ6878
NSP	2	50 SCAN B ASSY	AWZ6879
NSP	2	X CONNECTOR A ASSY	AWZ6880
NSP	2	X CONNECTOR B ASSY	AWZ6881
NSP	1	50 X DRIVE ASSY	AWV2175
	2	PANEL SENSOR ASSY	AWZ6872
	2	50 X DRIVE ASSY	AWZ6877
	1	50 Y DRIVE ASSY	AWV2082
NSP	1	CM RGB ASSY	AWV2187
	2	RGB ASSY	AWZ6993
NSP	1	CMS FUKUGO ASSY(PDP-5004)	AWV2151
NSP	1	CMB FUKUGO ASSY(PDP-5014)	AWV2152
	2	AUDIO AMP ASSY	AWZ6848
	2	VIDEO SLOT I/F ASSY	AWZ6851
	2	IR RECEIVE ASSY	AWZ6855
	2	SP TERMINAL L ASSY	AWZ6856
	2	SP TERMINAL R ASSY	AWZ6857
	2	COVER ASSY	AWZ6858
	2	AV I/O I/F ASSY	AWZ6859
	2	COMM SLOT I/F ASSY	AWZ6964
	2	LED ASSY	AWZ6966
	2	AV I/O ASSY (PDP-5004)	AWZ6967
	2	AV I/O ASSY (PDP-5014)	AWZ6971
	2	COMM SLOT ASSY	AWZ6968
	2	KEY CONTROL ASSY	AWZ6969
	2	FRONT KEY ASSY	AWZ6970
	1	DIGITAL VIDEO ASSY	AWV2169
	1	VIDEO SLOT2 ASSY	AWV2159
⚠	1	POWER SUPPLY UNIT	AXY1083

LIST OF ASSEMBLIES for PDP-4304, PDP-4314 models

Mark	No.	Description	Part No.
NSP	1	43 ADDRESS ASSY	AWV2076
NSP	2	43 ADDRESS ASSY	AWZ6862
NSP	1	43 SCAN FUKUGO ASSY	AWV2079
NSP	2	43 SCAN A ASSY	AWZ6873
NSP	2	43 SCAN B ASSY	AWZ6874
NSP	2	X CONNECTOR A ASSY	AWZ6875
NSP	2	X CONNECTOR B ASSY	AWZ6876
NSP	1	43 X DRIVE ASSY	AWV2174
	2	PANEL SENSOR ASSY	AWZ6872
	2	43 X DRIVE ASSY	AWZ6865
	1	43 Y DRIVE ASSY	AWV2078
NSP	1	CM RGB ASSY	AWV2187
	2	RGB ASSY	AWZ6993
NSP	1	CMS FUKUGO ASSY(PDP-4304)	AWV2151
NSP	1	CMB FUKUGO ASSY(PDP-4314)	AWV2152
	2	AUDIO AMP ASSY	AWZ6848
	2	VIDEO SLOT I/F ASSY	AWZ6851
	2	IR RECEIVE ASSY	AWZ6855
	2	SP TERMINAL L ASSY	AWZ6856
	2	SP TERMINAL R ASSY	AWZ6857
	2	COVER ASSY	AWZ6858
	2	AV I/O I/F ASSY	AWZ6859
	2	COMM SLOT I/F ASSY	AWZ6964
	2	LED ASSY	AWZ6966
	2	AV I/O ASSY (PDP-4304)	AWZ6967
	2	AV I/O ASSY (PDP-4314)	AWZ6971
	2	COMM SLOT ASSY	AWZ6968
	2	KEY CONTROL ASSY	AWZ6969
	2	FRONT KEY ASSY	AWZ6970
	1	DIGITAL VIDEO ASSY	AWV2169
	1	VIDEO SLOT2 ASSY	AWV2159
⚠	1	POWER SUPPLY UNIT	AXY1083

CONTRAST OF PCB ASSEMBLIES

AV I/O ASSY

AWZ6967 and AWZ6971 are constructed the same except for the following :

Mark	No. Description	AWZ6967	AWZ6971
	[IF UCOM BLOCK]		
	R8743	RS1/16S103J	Not used
	R8744	Not used	RS1/16S103J

• PCB Parts for PDP-5004 and PDP-5014

Mark	No.	Description	Part No.

50 ADDRESS ASSY

[50 ADR LOGIC BLOCK]

SEMICONDUCTORS

	IC1501	PEE001B

COILS AND FILTERS

	L1504	QTL1013

CAPACITORS

	C1501, C1502 (47/6.3V)	ACH1357
	C1509, C1510	CKSSYB102K50
	C1503-C1507, C1511, C1512, C1552	CKSSYF104Z16
	C1555, C1558, C1561, C1564	CKSSYF104Z16

RESISTORS

	R1510, R1519, R1522, R1526	RAB4C470J
	R1505-R1509, R1530, R1531	RS1/16SS1000F
	R1511-R1518, R1520, R1521	RS1/16SS470J
	R1523, R1524, R1527, R1528	RS1/16SS470J
	R1532-R1535	RS1/16SS470J
	Other Resistors	RS1/16S###J

OTHERS

	CN1501 40P FFC CONNECTER	AKM1215

[50 ADR RESONANCE BLOCK]

SEMICONDUCTORS

	IC1601-IC1603	TND307TD
	Q1604	2SA1163
	Q1601	HAT1110R
	Q1602, Q1603	HAT3021R
	D1601	1SS302
	D1605, D1606, D1616, D1617	D1FL20U(S)
	D1610, D1619	RF051UA1D
	D1602, D1607, D1615	UDZS15(B)

COILS

	L1601, L1602	ATH1164

CAPACITORS

	C1605 (0.01/100V)	ACG1101
	C1619, C1620 (330P/100V)	ACG1105
	C1609, C1615 (0.1/100V)	ACG1119
	C1618	ACH1357
	C1603 (47/16V)	ACH1391
	C1601, C1602 (56/80V)	ACH1405
	C1608, C1614	CKSRYB104K25
	C1604, C1606, C1612	CKSSYF104Z16

RESISTORS

	R1631	ACN1174
	R1602, R1614, R1615, R1622, R1623	RS1/16SS220J
	Other Resistors	RS1/16S###J

50 Y DRIVE ASSY

[50 Y LOGIC BLOCK]

SEMICONDUCTORS

	IC2002	TC74ACT540FT
	IC2001, IC2003	TC74ACT541FT
	IC2005, IC2006	TC74VHC08FT
	IC2004	TC74VHC541FT

CAPACITORS

	C2001	CEHAT470M16
	C2007	CKSRYB471K50
	C2002-C2006, C2008	CKSSYB104K10

RESISTORS

	R2045	RAB4C0R0J
	R2055	RAB4C100J
	R2025	RAB4C101J
	R2018, R2019	RAB4C102J
	R2002, R2004, R2013-R2015	RAB4C470J
	R2005, R2006, R2012, R2016, R2017	RAB4C472J
	Other Resistors	RS1/16S###J

OTHERS

	CN2001 50P CONNECTER	AKM1201

[50 Y SCAN BLOCK]

SEMICONDUCTORS

	IC2101, IC2103-IC2106, IC2108, IC2109	HCPL-M611
	IC2111, IC2112	PST3638UR
	IC2102, IC2107	TC74ACT540FT

COILS AND FILTERS

	L2101-L2103	LFEA100J

CAPACITORS

	C2104, C2111	ACH1413
	C2101, C2107, C2113	CEHAT221M16
	C2118, C2119	CKSRYB102K50
	C2116, C2117	CKSRYB471K50
	C2102, C2103, C2105, C2106	CKSSYB104K10
	C2108-C2110, C2112, C2114	CKSSYB104K10

RESISTORS

	R2138, R2141	RAB4C0R0J
	R2121, R2128	RAB4C472J
	Other Resistors	RS1/16S###J

OTHERS

	CN2101, CN2102 15P CONNECTER	AKM1200

[50 Y RESONANCE BLOCK]

SEMICONDUCTORS

	IC2211	BA10393F
	IC2201, IC2202	TND506MD
	Q2213	2SC4081
	Q2205, Q2206, Q2208, Q2209	2SK3555-01MR
	Q2202, Q2203, Q2212	2SK3592-01S
	Q2201, Q2204, Q2207, Q2210	QSZ2
	D2209, D2223	1SS302
	D2228, D2229, D2232, D2233	1SS355
	D2202-D2205, D2207, D2208	D1FL40
	D2212-D2214, D2216-D2219	D1FL40
	D2221, D2222	D1FL40
	D2201, D2206, D2211, D2220, D2225	RF2001T3D
	D2230	RF2001T3D
	D2210, D2224	UDZS16(B)

Mark No.	Description	Part No.
	COILS	
	L2203, L2205	ATH1119
	L2202	ATH1155
A	L2204	ATH1156
	L2201	LFEA470J
	CAPACITORS	
	C2212-C2214, C2226, C2227	ACE1175
	C2211, C2224 (100P/630V)	ACG1104
	C2210, C2223 (0.22/250V)	ACG1112
	C2238, C2240 (150P/630V)	ACG1120
	C2202, C2205, C2216, C2217	CCSRCH331J50
	C2236	CEHAT2R2M50
	C2203, C2218	CKSRYB105K6R3
	C2230, C2232, C2233, C2235	CKSSYB104K10
B	C2201, C2208, C2215, C2219	CKSYB105K25
	RESISTORS	
	R2240, R2241	RS1/10S1003F
	R2244-R2247	RS1/10S100J
	R2260, R2261	RS1/10S220J
	R2205, R2211, R2213, R2220, R2221	RS1/10S2R2J
	R2253, R2265	RS1/10S2R2J
	R2234	RS1/16S1202F
	R2235	RS1/16S3301F
	R2233	RS1/16S5601F
	R2242	RS1/16S8201F
C	R2215, R2230	RS1MMF101J
	R2256, R2259	RS2MMF220J
	VR2201-VR2204	CCP1390
	Other Resistors	RS1/16S###J
	OTHERS	
	2201 DRIVE HEATSINK	ANH1628
	2201 SCREW	PMH30P080FTC
	[50 Y SUS BLOCK]	
D	**SEMICONDUCTORS**	
	IC2302	HCPL-M611
	IC2305	NJM2872F05
	IC2303, IC2307	STK795-513A
	IC2310	TC7SH04FU
	IC2301, IC2304	TND301S
	IC2311	TND307TD
	Q2313	2SA1727
	Q2310	2SC4081
	Q2303	2SD1898
	Q2302	2SK3325-Z
E	Q2312	2SK3403
	Q2309	HN1B04FU
	D2322	1SS302
	D2312, D2325	1SS355
	D2324	D1FL40
	D2319	EC10QS04
	D2320	RF051UA1D
	D2323	UDZS16(B)
	D2306	UDZS5R6(B)
	COILS AND FILTERS	
F	L2306, L2307	ATH1112
	L2304, L2309	LFEA100J
	L2308	LFEA101J
	L2301, L2302, L2305	LFEA470J

Mark No.	Description	Part No.
	CAPACITORS	
	C2309-C2311, C2327, C2329, C2330	ACE1163
	C2314	ACE1165
	C2346 (0.33/100V)	ACG1118
	C2336	ACH1393
	C2316, C2331	ACH1415
	C2303, C2342	ACH1416
	C2343	CCSRCH102J50
	C2306	CEHAT221M25
	C2308, C2324, C2339, C2340, C2349	CEHAT470M16
	C2304, C2320, C2338, C2348	CEHAT470M25
	C2305, C2322, C2323, C2325, C2341	CKSRYB104K16
	C2347	CKSRYB105K6R3
	C2301, C2307, C2344	CKSRYF104Z50
	RESISTORS	
	R2332	ACN1166
	R2364, R2365	ACN1174
	R2367	RS1/10S0R0J
	R2368	RS1/10S151J
	R2309	RS1MMF132J
	R2310, R2311	RS1MMF472J
	R2312, R2313, R2322, R2325	RS3LMF100J
	R2348, R2352, R2358, R2359	RS3LMF1R8J
	Other Resistors	RS1/16S###J
	OTHERS	
	KN2301-KN2305, KN2310, KN2312	ANK-142
	KN2314, KN2316 GROUND PLATE	ANK-142
	CN2301 CONNECTOR	B11B-EH
	[50 Y D-D CON BLOCK]	
	SEMICONDUCTORS	
	IC2406	BA10358F
	IC2401	MIP2E3DMC
	IC2402-IC2405, IC2407, IC2409	PS2701A-1(L)
	IC2410-IC2412	TA76431FR
	Q2402, Q2407	2SA1037K
	Q2410	2SA1163
	Q2417	2SA2005
	Q2405	2SC2713
	Q2411-Q2413, Q2416, Q2419	2SC4081
	Q2403	2SD1664
	Q2401, Q2404	2SD1898
	Q2415	HN1C01FU
	D2430	1SS301
	D2410, D2419, D2436	1SS302
	D2409, D2418	1SS355
	D2402	D1FK70
	D2404-D2407	D1FL20U(S)
	D2414	D1FL40
	D2403	EC8FS6
	D2401	U1ZB330
	D2412, D2413, D2422	UDZS15(B)
	D2437, D2438	UDZS33(B)
	D2432	UDZS4R3(B)
	D2423, D2431	UDZS5R6(B)
	COILS AND FILTERS	
	T2402	ATK1156
	T2403	ATK1157
	T2401	ATK1158

Mark No.	Description	Part No.
L2402		LFEA100J
L2401		LFEA101J
L2403		LFEA470J
CAPACITORS		
C2406		ACH1360
C2401		ACH1361
C2427		CEHAT100M50
C2403		CEHAT101M16
C2405, C2407, C2417		CEHAT101M25
C2414		CEHAT221M16
C2410		CEHAT221M25
C2411		CEHAT331M25
C2420		CEHAT470M2A
C2409, C2419		CKSRYB103K50
C2402, C2412, C2413, C2423, C2425		CKSRYB104K16
C2434-C2436, C2441-C2444		CKSRYB104K16
C2415, C2421, C2428		CKSRYB105K6R3
C2404, C2408, C2416, C2418, C2426		CKSRYF104Z50
C2429		CKSRYF104Z50
RESISTORS		
R2429		ACN1225
R2435, R2439		RS1/10S2202F
R2402-R2404		RS1/10S3902F
R2442		RS1/16S1201F
R2468		RS1/16S1202F
R2424		RS1/16S2001F
R2420, R2427, R2438		RS1/16S2201F
R2451		RS1/16S2202F
R2467		RS1/16S3301F
R2452, R2453		RS1/16S3302F
R2457-R2460		RS1/16S4701F
R2506		RS3LMF151J
VR2401, VR2402		CCP1390
Other Resistors		RS1/16S###J
OTHERS		
2401	HEATSINK	ANH1614
2401	SCREW	BBZ30P080FTC
RESISTORS		
Other Resistors		RS1/16S###J

50 SCAN A ASSY

Mark No.	Description	Part No.
SEMICONDUCTORS		
IC3001-IC3006		AN16021AA-K
D3003-D3006		1SS355
CAPACITORS		
C3001, C3002, C3012 (0.1/250V)		ACG1088
C3013, C3023, C3024 (0.1/250V)		ACG1088
C3034, C3035, C3045 (0.1/250V)		ACG1088
C3046, C3056, C3057 (0.1/250V)		ACG1088
C3005, C3008, C3016, C3019, C3026		CCSRCH101J50
C3029, C3037, C3040, C3048, C3051		CCSRCH101J50
C3060, C3063		CCSRCH101J50
C3007, C3018, C3033, C3044, C3050		CCSRCH181J50
C3062		CCSRCH181J50
C3006, C3011, C3017, C3022		CCSRCH331J50
C3031, C3032, C3042, C3043, C3049		CCSRCH331J50
C3055, C3061, C3066		CCSRCH331J50
C3009, C3010, C3020, C3021, C3028		CCSRCH390J50
C3030, C3039, C3041, C3053, C3054		CCSRCH390J50
C3064, C3065		CCSRCH390J50
C3003, C3014, C3025, C3036, C3047		CKSRYB105K6R3
C3058		CKSRYB105K6R3
RESISTORS		
R3003, R3011, R3017, R3025, R3030		RAB4C221J
R3036		RAB4C221J
Other Resistors		RS1/16S###J
OTHERS		
CN3001	13P CONNECTER NONPB	AKP1261
K3001, K3004, K3009, K3015, K3017		AKX9002
K3019, K3021	TEST PIN	AKX9002

50 SCAN B ASSY

Mark No.	Description	Part No.
SEMICONDUCTORS		
IC3201-IC3206		AN16021AA-K
D3203-D3206		1SS355
CAPACITORS		
C3201, C3211, C3212 (0.1/250V)		ACG1088
C3222, C3223, C3233 (0.1/250V)		ACG1088
C3234, C3244, C3245 (0.1/250V)		ACG1088
C3255, C3256, C3266 (0.1/250V)		ACG1088
C3203, C3204, C3214, C3215, C3226		CCSRCH101J50
C3228, C3237, C3239, C3247, C3251		CCSRCH101J50
C3258, C3259		CCSRCH101J50
C3206, C3217, C3232, C3243, C3249		CCSRCH181J50
C3261		CCSRCH181J50
C3205, C3210, C3216, C3221		CCSRCH331J50
C3230, C3231, C3241, C3242, C3248		CCSRCH331J50
C3254, C3260, C3265		CCSRCH331J50
C3208, C3209, C3219, C3220, C3227		CCSRCH390J50
C3229, C3238, C3240, C3252, C3253		CCSRCH390J50
C3263, C3264		CCSRCH390J50
C3202, C3213, C3224, C3235, C3246		CKSRYB105K6R3
C3257		CKSRYB105K6R3
RESISTORS		
R3202, R3210, R3216, R3224, R3229		RAB4C221J
R3235		RAB4C221J
Other Resistors		RS1/16S###J
OTHERS		
CN3201	13P CONNECTER NONPB	AKP1261
K3203, K3208, K3214, K3216, K3218		AKX9002
K3221	TEST PIN	AKX9002

50 X DRIVE ASSY

Mark No.	Description	Part No.
OTHERS		
1001	DRIVE SIRICON SHEET	AEH1062
1001	PLATE X	ANG2664
1001	DRIVE HEATSINK A	ANH1613
1001	SCREW	BMZ30P080FTC
1002	SCREW	PMB30P060FNI

Mark No.	Description	Part No.
	[50 X LOGIC BLOCK]	
	SEMICONDUCTORS	
	IC1002	TC74ACT540FT
A	IC1001	TC74ACT541FT
	IC1003	TC74VHC08FT
	CAPACITORS	
	C1001	CEHAT470M25
	C1002-C1004	CKSSYB104K10
	RESISTORS	
	R1001, R1002, R1005	RAB4C470J
	R1003, R1004, R1007	RAB4C472J
	Other Resistors	RS1/16S###J
B	**OTHERS**	
	CN1001 30P FFC CONNECTER	AKM1218
	[50 X RESONANCE BLOCK]	
	SEMICONDUCTORS	
	IC1103	BA10393F
	IC1101, IC1102	TND506MD
	Q1113	2SC4116
	Q1102, Q1103, Q1111, Q1112	2SK3555-01MR
	Q1105, Q1108, Q1109	2SK3592-01S
	Q1101, Q1104, Q1107, Q1110	QSZ2
C	D1109, D1122	1SS302
	D1112, D1119, D1135, D1136	1SS355
	D1101, D1102, D1104, D1105	D1FL40
	D1107, D1108, D1111, D1114-D1117	D1FL40
	D1120, D1121, D1127, D1128	D1FL40
	D1103, D1113, D1118, D1125	RF2001T3D
	D1129, D1130	RF2001T3D
	D1110, D1123	UDZS16(B)
	COILS AND FILTERS	
	L1103, L1105	ATH1119
D	L1104	ATH1155
	L1102	ATH1156
	L1101	LFEA470J
	CAPACITORS	
	C1112, C1113, C1125-C1127	ACE1175
	C1111, C1124 (100P/630V)	ACG1104
	C1109, C1119 (0.22/250V)	ACG1112
	C1134, C1135 (150P/630V)	ACG1120
	C1101, C1105, C1116, C1117	CCSRCH331J50
	C1136	CEHAT2R2M50
	C1102, C1118	CKSRYB105K6R3
E	C1128, C1130-C1132	CKSSYB104K10
	C1104, C1108, C1115, C1122	CKSYB105K25
	RESISTORS	
	R1116, R1122	RS1/10S1003F
	R1133, R1143-R1145	RS1/10S100J
	R1155, R1156	RS1/10S220J
	R1103, R1106, R1118, R1119, R1123	RS1/10S2R2J
	R1126, R1153	RS1/10S2R2J
	R1136	RS1/16S1202F
	R1139	RS1/16S3301F
	R1130	RS1/16S5601F
F	R1134	RS1/16S8201F
	R1113, R1128	RS1MMF101J
	R1147, R1148	RS2MMF220J

Mark No.	Description	Part No.
	VR1101-VR1104	CCP1390
	Other Resistors	RS1/16S###J
	OTHERS	
	1101 DRIVE HEATSINK	ANH1628
	1101 SCREW	PMH30P080FTC
	[50 X SUS BLOCK]	
	SEMICONDUCTORS	
	IC1202	HCPL-M611
	IC1205	NJM2872F05
	IC1203, IC1207	STK795-512A
	IC1206	TND301S
	IC1204, IC1209	TND307TD
	Q1209	2SA1727
	Q1203	2SD1898
	Q1205	2SK2865
	Q1208	DTC124EUA
	Q1201	HN1B04FU
	D1212	1SS302
	D1211, D1213	1SS355
	D1204, D1217	D1FL40
	D1201, D1207	EC10QS04
	D1208	UDZS5R6(B)
	COILS AND FILTERS	
	L1204, L1205	ATH1112
	L1202, L1207	LFEA100J
	L1203, L1206	LFEA470J
	CAPACITORS	
	C1214-C1216, C1228-C1230	ACE1163
	C1245	ACE1173
	C1209 (0.1/630V)	ACG1092
	C1219, C1231	ACH1415
	C1246	CEHAT221M25
	C1201, C1203, C1207, C1220	CEHAT470M25
	C1223, C1224, C1238, C1239, C1248	CEHAT470M25
	C1212, C1213, C1225, C1240, C1241	CKSRYB104K16
	C1243	CKSRYB104K16
	C1202, C1205, C1206, C1247	CKSRYF104Z50
	RESISTORS	
	R1230	ACN1166
	R1208, R1260, R1261	ACN1174
	R1255	ACN1178
	R1256	ACN1198
	R1226, R1251	RS1MMF331J
	R1235, R1236	RS2MMF121J
	Other Resistors	RS1/16S###J
	OTHERS	
	KN1201-KN1205, KN1208, KN1210	ANK-142
	KN1211, K1212, KN1214	ANK-142
	GROUND PLATE	
	CN1201 CONNECTOR	B12B-EH
	[50 X D-D CON BLOCK]	
	SEMICONDUCTORS	
	IC1402	MIP2E3DMU
	IC1401, IC1403	PS2701A-1(L)
	IC1404	TA76431FR
	Q1401	2SA1576A

Mark No.	Description	Part No.
Q1402		2SC4116
D1406, D1409, D1410		D1FK70
D1407, D1408		D1FL20U(S)
D1405		U1ZB330
D1401, D1403		UDZS5R6(B)

COILS AND FILTERS

T1401	ATK1153
L1401	LFEA101J

CAPACITORS

C1401, C1402	ACH1361
C1404	CEHAT101M16
C1405	CEHAT101M25
C1409	CEHAT331M16
C1403, C1407, C1408, C1411	CKSRYB104K16
C1406	CKSRYF104Z50

RESISTORS

R1405, R1406, R1408-R1410, R1414	RS1/10S3602F
R1420	RS1/16S1101F
R1403	RS1/16S2702F
R1401, R1404	RS1/16S4701F
R1417	RS1/16S7500F
VR1401	CCP1390
Other Resistors	RS1/16S###J

PANEL SENSOR ASSY

SEMICONDUCTORS

IC1072	MM1522XU
IC1071	MM3012XN

CAPACITORS

C1071, C1074, C1075	CKSRYB103K50
C1072, C1073	CKSRYF105Z10

RESISTORS

R1073, R1074	RS1/16S1001F
R1075	RS1/16SS102J
R1071	RS1/16SS471J
R1072	RS1/16SS473J
Other Resistors	RS1/16S###J

X CONNECTOR A ASSY

This assembly has no service parts.

X CONNECTOR B ASSY

This assembly has no service parts.

• PCB Parts for PDP-4304 and PDP-4314

Mark No.	Description	Part No.

43 ADDRESS ASSY

[43 ADR LOGIC BLOCK]

SEMICONDUCTORS

IC1501	PEE001B

COILS AND FILTERS

L1504	QTL1013

CAPACITORS

C1501, C1502 (47/6.3V)	ACH1357
C1509, C1510	CKSSYB102K50
C1503-C1507, C1555, C1558, C1561	CKSSYF104Z16
C1564	CKSSYF104Z16

RESISTORS

R1510, R1519, R1522	RAB4C470J
R1505-R1509, R1530, R1531	RS1/16SS1000F
R1511-R1518, R1520-R1521	RS1/16SS470J
R1523-R1524	RS1/16SS470J
R1536-R1539	RS1/16SS470J
Other Resistors	RS1/16S###J

OTHERS

CN1501 40P FFC CONNECTER	AKM1215

[43 ADR RESONANCE BLOCK]

SEMICONDUCTORS

IC1601-IC1603	TND307TD
Q1604	2SA1163
Q1601	HAT1110R
Q1602, Q1603	HAT3021R
D1601	1SS302
D1605-D1608	RF051UA1D
D1602-D1604	UDZS15(B)

COILS AND FILTERS

L1601, L1602	ATH1163

CAPACITORS

C1605 (0.1/100V)	ACG1098
C1607, C1615 (0.1/100V)	ACG1121
C1613 (47/6.3V)	ACH1357
C1603 (47/16V)	ACH1391
C1601, C1602 (56/80V)	ACH1405
C1609, C1614	CKSRYB104K25
C1604, C1608, C1612	CKSSYF104Z16

RESISTORS

R1620 (10, 1/2W)	ACN1174
R1602, R1608-R1611	RS1/16SS220J
Other Resistors	RS1/16S###J

43 Y DRIVE ASSY

[43 Y LOGIC BLOCK]

SEMICONDUCTORS

IC2002	TC74ACT540FT
IC2001, IC2003	TC74ACT541FT
IC2005, IC2006	TC74VHC08FT
IC2004	TC74VHC541FT

CAPACITORS

C2001	CEHAT470M16
C2007	CKSRYB471K50
C2002-C2006, C2008	CKSSYB104K10

RESISTORS

R2045	RAB4C0R0J
R2055	RAB4C100J
R2025	RAB4C101J
R2018, R2019	RAB4C102J
R2002, R2004, R2013-R2015	RAB4C470J
R2005, R2006, R2012, R2016, R2017	RAB4C472J
Other Resistors	RS1/16S###J

OTHERS

CN2001 50P CONNECTER	AKM1201

[43 Y SCAN BLOCK]

SEMICONDUCTORS

IC2101, IC2103-IC2106, IC2108, IC2109	HCPL-M611
IC2111, IC2112	PST3638UR
IC2102, IC2107	TC74ACT540FT

COILS AND FILTERS

L2101-L2103	LFEA100J

CAPACITORS

C2104, C2111	ACH1406
C2101, C2107, C2113	CEHAT221M16
C2118, C2119	CKSRYB102K50
C2116, C2117	CKSRYB471K50
C2102, C2103, C2105, C2106	CKSSYB104K10
C2108-C2110, C2112, C2114	CKSSYB104K10

RESISTORS

R2138, R2141	RAB4C0R0J
R2121, R2128	RAB4C472J
Other Resistors	RS1/16S###J

OTHERS

CN2101, CN2102 15P CONNECTER	AKM1200

[43 Y RESONANCE BLOCK]

SEMICONDUCTORS

IC2211	BA10393F
IC2201, IC2202	TND506MD
Q2213	2SC4081
Q2205, Q2206, Q2208, Q2209	2SK3555-01MR
Q2212	2SK3592-01S
Q2202, Q2203	2SK3864
Q2201, Q2204, Q2207, Q2210	QSZ2
D2209, D2223	1SS302
D2228, D2229, D2232, D2233	1SS355
D2202-D2205, D2207, D2208	D1FL40
D2212-D2214, D2216-D2219	D1FL40
D2221, D2222	D1FL40
D2201, D2206, D2211, D2220, D2225	RF2001T3D
D2230	RF2001T3D
D2210, D2224	UDZS16(B)

COILS AND FILTERS

L2202	ATH1119

Mark No.	Description	Part No.
L2204		ATH1133
L2203, L2205		ATH1134
L2201		LFEA470J
CAPACITORS		
C2212-C2214, C2226, C2227		ACE1168
C2211, C2224, C2238 (100P/630V)		ACG1104
C2240 (0.22/250V)		ACG1104
C2210, C2223 (0.22/250V)		ACG1112
C2202, C2205, C2216, C2217		CCSRCH331J50
C2203, C2218		CKSRYB105K6R3
C2230, C2232, C2233, C2235		CKSSYB104K10
C2201, C2208, C2215, C2219		CKSYB105K25
RESISTORS		
R2240, R2241		RS1/10S1003F
R2244-R2247		RS1/10S100J
R2260, R2261		RS1/10S220J
R2205, R2211, R2213, R2220, R2221		RS1/10S2R2J
R2253, R2265		RS1/10S2R2J
R2234		RS1/16S1002F
R2235		RS1/16S4701F
R2233, R2242		RS1/16S8201F
R2215, R2230		RS1MMF101J
R2256, R2259		RS2MMF5R6J
VR2201-VR2204		CCP1390
Other Resistors		RS1/16S###J
OTHERS		
2201 DRIVE HEATSINK		ANH1628
2201 SCREW		PMH30P080FTC

[43 Y SUS BLOCK]

Mark No.	Description	Part No.
SEMICONDUCTORS		
IC2302		HCPL-M611
IC2305		NJM2872F05
IC2303, IC2307		STK795-511
IC2310		TC7SH04FU
IC2301, IC2304		TND301S
IC2311		TND307TD
Q2313		2SA1727
Q2310		2SC4081
Q2303		2SD1898
Q2302		2SK3325-Z
Q2312		2SK3694-01S
Q2309		HN1B04FU
D2322		1SS302
D2301, D2302, D2312, D2325		1SS355
D2324		D1FL40
D2319		EC10QS04
D2320		RF051UA1D
D2323		UDZS16(B)
D2306		UDZS5R6(B)
COILS AND FILTERS		
L2306, L2307		ATH1112
L2304, L2309		LFEA100J
L2308		LFEA101J
L2301, L2302, L2305		LFEA470J
CAPACITORS		
C2309-C2311, C2327, C2329, C2330		ACE1163
C2314		ACE1165
C2346 (0.33/100V)		ACG1118
C2336		ACH1407
C2316, C2331		ACH1414
C2303, C2342		ACH1416
C2343		CCSRCH102J50
C2306		CEHAT221M25
C2308, C2324, C2339, C2340, C2349		CEHAT470M16
C2304, C2320, C2338, C2348		CEHAT470M25
C2305, C2322, C2323, C2325, C2341		CKSRYB104K16
C2347		CKSRYB105K6R3
C2301, C2307, C2344		CKSRYF104Z50
RESISTORS		
R2364, R2365		ACN1162
R2332		ACN1166
R2367, R2379-R2386		RS1/10S0R0J
R2368		RS1/10S151J
R2309		RS1MMF132J
R2310, R2311		RS1MMF472J
R2312, R2313, R2322, R2325		RS3LMF100J
R2348, R2352, R2358, R2359		RS3LMF1R8J
Other Resistors		RS1/16S###J
OTHERS		
KN2301-KN2305, KN2310, KN2312		ANK-142
KN2314, KN2316 GROUND PLATE		ANK-142
CN2301 CONNECTOR		B11B-EH

[43 Y D-D CON BLOCK]

Mark No.	Description	Part No.
SEMICONDUCTORS		
IC2406		BA10358F
IC2401		MIP2E3DMC
IC2402-IC2405, IC2407, IC2409		PS2701A-1(L)
IC2410-IC2412		TA76431FR
Q2402, Q2407		2SA1037K
Q2410		2SA1163
Q2417		2SA2005
Q2405		2SC2713
Q2411-Q2413, Q2416, Q2419		2SC4081
Q2403		2SD1664
Q2401, Q2404		2SD1898
Q2415		HN1C01FU
D2430		1SS301
D2410, D2419, D2436		1SS302
D2409, D2418		1SS355
D2402		D1FK70
D2404-D2407		D1FL20U(S)
D2414		D1FL40
D2403		EC8FS6
D2401		U1ZB330
D2412, D2413, D2422		UDZS15(B)
D2437, D2438		UDZS33(B)
D2432		UDZS4R3(B)
D2423, D2431		UDZS5R6(B)
COILS AND FILTERS		
T2402		ATK1156
T2403		ATK1157
T2401		ATK1158
L2402		LFEA100J
L2401		LFEA101J
L2403		LFEA470J

Mark No.	Description	Part No.
	CAPACITORS	
	C2406	ACH1360
A	C2401	ACH1361
	C2427	CEHAT100M50
	C2403	CEHAT101M16
	C2405, C2407, C2417	CEHAT101M25
	C2414	CEHAT221M16
	C2410	CEHAT221M25
	C2411	CEHAT331M25
	C2420	CEHAT470M2A
	C2409, C2419	CKSRYB103K50
	C2402, C2412, C2413, C2423, C2425	CKSRYB104K16
	C2434-C2436, C2441-C2444	CKSRYB104K16
B	C2415, C2421, C2428	CKSRYB105K6R3
	C2404, C2408, C2416, C2418, C2426	CKSRYF104Z50
	C2429	CKSRYF104Z50
	RESISTORS	
	R2429	ACN1225
	R2435, R2439	RS1/10S2202F
	R2402-R2404	RS1/10S3902F
	R2442	RS1/16S1201F
	R2468	RS1/16S1202F
	R2424, R2427	RS1/16S2001F
	R2420, R2438	RS1/16S2201F
C	R2451	RS1/16S2202F
	R2467	RS1/16S3301F
	R2452, R2453	RS1/16S3302F
	R2457-R2460	RS1/16S4701F
	R2506	RS3LMF151J
	VR2401, VR2402	CCP1390
	Other Resistors	RS1/16S###J
	OTHERS	
	2401 HEATSINK	ANH1614
	2401 SCREW	BBZ30P080FTC

D

43 SCAN A ASSY

	SEMICONDUCTORS	
	IC3001-IC3006	SN755866PZP
	CAPACITORS	
	C3001, C3002, C3012 (0.1/250V)	ACG1088
	C3013, C3023, C3024 (0.1/250V)	ACG1088
	C3034, C3035, C3045 (0.1/250V)	ACG1088
	C3046, C3056, C3057 (0.1/250V)	ACG1088
	C3005, C3008, C3016, C3019, C3026	CCSRCH101J50
E	C3029, C3037, C3040, C3048, C3051	CCSRCH101J50
	C3060, C3063	CCSRCH101J50
	C3007, C3018, C3033, C3044, C3050	CCSRCH181J50
	C3062	CCSRCH181J50
	C3006, C3011, C3017, C3022	CCSRCH331J50
	C3031, C3032, C3042, C3043, C3049	CCSRCH331J50
	C3055, C3061, C3066	CCSRCH331J50
	C3009, C3010, C3020, C3021, C3028	CCSRCH390J50
	C3030, C3039, C3041, C3053, C3054	CCSRCH390J50
	C3064, C3065	CCSRCH390J50
	C3003, C3014, C3025, C3036, C3047	CKSRYB105K6R3
F	C3058	CKSRYB105K6R3
	RESISTORS	
	R3003, R3011, R3017, R3025, R3030	RAB4C221J
	R3036	RAB4C221J
	Other Resistors	RS1/16S###J
	OTHERS	
	CN3001 13P CONNECTER NONPB	AKP1261
	K3001, K3004, K3009, K3015, K3017	AKX9002
	K3019, K3021 TEST PIN	AKX9002

43 SCAN B ASSY

	SEMICONDUCTORS	
	IC3201-IC3206	SN755866PZP
	CAPACITORS	
	C3201, C3211, C3212 (0.1/250V)	ACG1088
	C3222, C3223, C3233 (0.1/250V)	ACG1088
	C3234, C3244, C3245 (0.1/250V)	ACG1088
	C3255, C3256, C3266 (0.1/250V)	ACG1088
	C3203, C3204, C3214, C3215, C3226	CCSRCH101J50
	C3228, C3237, C3239, C3247, C3251	CCSRCH101J50
	C3258, C3259	CCSRCH101J50
	C3206, C3217, C3232, C3243, C3249	CCSRCH181J50
	C3261	CCSRCH181J50
	C3205, C3210, C3216, C3221	CCSRCH331J50
	C3230, C3231, C3241, C3242, C3248	CCSRCH331J50
	C3254, C3260, C3265	CCSRCH331J50
	C3208, C3209, C3219, C3220, C3227	CCSRCH390J50
	C3229, C3238, C3240, C3252, C3253	CCSRCH390J50
	C3263, C3264	CCSRCH390J50
	C3202, C3213, C3224, C3235, C3246	CKSRYB105K6R3
	C3257	CKSRYB105K6R3
	RESISTORS	
	R3202, R3210, R3216, R3224, R3229	RAB4C221J
	R3235	RAB4C221J
	Other Resistors	RS1/16S###J
	OTHERS	
	CN3201 13P CONNECTER NONPB	AKP1261
	K3203, K3208, K3214, K3216, K3218	AKX9002
	K3221 TEST PIN	AKX9002

43 X DRIVE ASSY

	OTHERS	
	1001 DRIVE SIRICON SHEET	AEH1062
	1001 PLATE X	ANG2664
	1001 DRIVE HEATSINK A	ANH1613
	1001 SCREW	BMZ30P080FTC
	1002 SCREW	PMB30P060FNI
	[43 X LOGIC BLOCK]	
	SEMICONDUCTORS	
	IC1002	TC74ACT540FT
	IC1001	TC74ACT541FT
	IC1003	TC74VHC08FT
	CAPACITORS	
	C1001	CEHAT470M25
	C1002-C1004	CKSSYB104K10
	RESISTORS	
	R1001, R1002, R1005	RAB4C470J
	R1003, R1004, R1007	RAB4C472J

Mark No.	Description	Part No.
	Other Resistors	RS1/16S###J
	OTHERS	
	CN1001 30P FFC CONNECTER	AKM1218
	[43 X RESONANCE BLOCK]	
	SEMICONDUCTORS	
	IC1103	BA10393F
	IC1101, IC1102	TND506MD
	Q1113	2SC4116
	Q1102, Q1103, Q1111, Q1112	2SK3555-01MR
	Q1105	2SK3592-01S
	Q1108, Q1109	2SK3864
	Q1101, Q1104, Q1107, Q1110	QSZ2
	D1109, D1122	1SS302
	D1112, D1119, D1135, D1136	1SS355
	D1101, D1102, D1104, D1105	D1FL40
	D1107, D1108, D1111, D1114-D1117	D1FL40
	D1120, D1121, D1127, D1128	D1FL40
	D1103, D1113, D1118, D1125	RF2001T3D
	D1129, D1130	RF2001T3D
	D1110, D1123	UDZS16(B)
	COILS AND FILTERS	
	L1104	ATH1119
	L1102	ATH1133
	L1103, L1105	ATH1134
	L1101	LFEA470J
	CAPACITORS	
	C1112, C1113, C1125-C1127	ACE1168
	C1111, C1124, C1134 (100P/630V)	ACG1104
	C1135 (100P/630V)	ACG1104
	C1109, C1119 (0.22/250V)	ACG1112
	C1101, C1105, C1116, C1117	CCSRCH331J50
	C1102, C1118	CKSRYB105K6R3
	C1128, C1130-C1132	CKSSYB104K10
	C1104, C1108, C1115, C1122	CKSYB105K25
	RESISTORS	
	R1116, R1122	RS1/10S1003F
	R1133, R1143-R1145	RS1/10S100J
	R1155, R1156	RS1/10S220J
	R1103, R1106, R1118, R1119, R1123	RS1/10S2R2J
	R1126, R1153	RS1/10S2R2J
	R1136	RS1/16S1002F
	R1139	RS1/16S4701F
	R1130, R1134	RS1/16S8201F
	R1113, R1128	RS1MMF101J
	R1147, R1148	RS2MMF5R6J
	VR1101-VR1104	CCP1390
	Other Resistors	RS1/16S###J
	OTHERS	
	1101 DRIVE HEATSINK	ANH1628
	1101 SCREW	PMH30P080FTC
	[43 X SUS BLOCK]	
	SEMICONDUCTORS	
	IC1202	HCPL-M611
	IC1205	NJM2872F05
	IC1203, IC1207	STK795-510
	IC1206	TND301S
	IC1204, IC1209	TND307TD
	Q1209	2SA1727
	Q1203	2SD1898
	Q1205	2SK2865
	Q1208	DTC124EUA
	Q1201	HN1B04FU
	D1212	1SS302
	D1211, D1213	1SS355
	D1204, D1217	D1FL40
	D1201, D1207	EC10QS04
	D1208	UDZS5R6(B)
	COILS AND FILTERS	
	L1204, L1205	ATH1112
	L1202, L1207	LFEA100J
	L1203, L1206	LFEA470J
	CAPACITORS	
	C1214-C1216, C1228-C1230	ACE1163
	C1245	ACE1173
	C1209 (0.1/630V)	ACG1092
	C1219, C1231	ACH1414
	C1246	CEHAT221M25
	C1201, C1203, C1207, C1220	CEHAT470M25
	C1223, C1224, C1238, C1239, C1248	CEHAT470M25
	C1212, C1213, C1225, C1240, C1241	CKSRYB104K16
	C1243	CKSRYB104K16
	C1202, C1205, C1206, C1247	CKSRYF104Z50
	RESISTORS	
	R1260, R1261	ACN1162
	R1230	ACN1166
	R1208	ACN1174
	R1255	ACN1178
	R1256	ACN1198
	R1226, R1251	RS1MMF361J
	R1235, R1236	RS2MMF121J
	Other Resistors	RS1/16S###J
	OTHERS	
	KN1201-KN1205, KN1208, KN1210	ANK-142
	KN1211, KN1212KN1214	ANK-142
	GROUND PLATE	
	CN1201 CONNECTOR	B12B-EH
	[43 X D-D CON BLOCK]	
	SEMICONDUCTORS	
	IC1402	MIP2E3DMU
	IC1401, IC1403	PS2701A-1(L)
	IC1404	TA76431FR
	Q1401	2SA1576A
	Q1402	2SC4116
	D1406, D1409, D1410	D1FK70
	D1407, D1408	D1FL20U(S)
	D1405	U1ZB330
	D1401, D1403	UDZS5R6(B)
	COILS AND FILTERS	
	T1401	ATK1153
	L1401	LFEA101J
	CAPACITORS	
	C1401, C1402	ACH1361
	C1404	CEHAT101M16

Mark No.	Description	Part No.
C1405		CEHAT101M25
C1409		CEHAT331M16
C1403, C1407, C1408, C1411		CKSRYB104K16
C1406		CKSRYF104Z50

RESISTORS

R1405, R1406, R1408-R1410, R1414	RS1/10S3602F
R1420	RS1/16S1101F
R1403	RS1/16S2702F
R1401, R1404	RS1/16S4701F
R1417	RS1/16S7500F
VR1401	CCP1390
Other Resistors	RS1/16S###J

PANEL SENSOR ASSY

SEMICONDUCTORS

IC1072	MM1522XU
IC1071	MM3012XN

CAPACITORS

C1071, C1074, C1075	CKSRYB103K50
C1072, C1073	CKSRYF105Z10

RESISTORS

R1073, R1074	RS1/16S1001F
R1075	RS1/16SS102J
R1071	RS1/16SS471J
R1072	RS1/16SS473J
Other Resistors	RS1/16S###J

X CONNECTOR A ASSY

This assembly has no service parts.

X CONNECTOR B ASSY

This assembly has no service parts.

PCB PARTS LIST for PDP-5004, PDP-5014, PDP-4303, PDP-4314 models

Mark	No.	Description	Part No.

RGB ASSY

[RGB BLOCK]

SEMICONDUCTORS

	IC7411	BD6522F
⚠	IC7412	M5291FP
	IC7402	MM1522XU
	IC7401	MM3012XN
	IC7404	NJM12904V
⚠	IC7408, IC7409	PQ05DZ11
⚠	IC7405, IC7410	PQ20WZ11
⚠	IC7406, IC7407	PQ3DZ13
	IC7403	TC74VHC08FT
	Q7405	2SA1586
	Q7407, Q7408, Q7410, Q7411	HN1A01FU
	Q7404	HN1C01FU
	Q7401	RN1901
	Q7409	RN1902
	D7408	1SS301
	D7407, D7409-D7414	1SS355
	D7415, D7416	EC11FS2

COILS AND FILTERS

	L7401	ATH1125

CAPACITORS

	C7408	ACH1357
	C7414, C7419, C7434 (100/25V)	ACH1374
	C7437 (100/25V)	ACH1374
	C7447, C7450 (47/16V)	ACH1391
	C7416, C7423, C7424 (100/16V)	ACH1394
	C7430 (100/16V)	ACH1394
	C7418, C7421, C7426 (100/6.3V)	ACH1396
	C7432, C7445 (100/6.3V)	ACH1396
	C7452	ACH1396
	C7403	ACH1400
	C7428, C7429, C7448	CCSRCH221J50
	C7440, C7459-C7466	CKSRYB102K50
	C7407, C7409, C7453-C7455	CKSRYB103K50
	C7457, C7458	CKSRYB103K50
	C7436	CKSRYB104K16
	C7446	CKSRYB821K50
	C7413, C7435	CKSRYF104Z50
	C7402, C7410	CKSRYF105Z10
	C7404-C7406, C7411, C7412, C7415	CKSSYF104Z16
	C7417, C7420, C7422, C7425, C7427	CKSSYF104Z16
	C7431, C7433, C7439, C7441-C7444	CKSSYF104Z16
	C7449, C7451	CKSSYF104Z16

RESISTORS

	R7402, R7405, R7417	RAB4CQ101J
	R7426	RAB4CQ103J
	R7480	RS1/10S1R5J
	R7412, R7420, R7486	RS1/16S1001F
	R7437, R7439, R7467, R7469, R7476	RS1/16S1002F
	R7461	RS1/16S1501F
	R7422	RS1/16S1800F
	R7440, R7445	RS1/16S2201F
	R7477	RS1/16S2202F
	R7484	RS1/16S3301F
	R7438	RS1/16S4700F
	R7465	RS1/16S4702F
	R7460	RS1/16S6201F
	R7447	RS1/16S7500F
	R7478	RS1/16S8201F
	Other Resistors	RS1/16S###J

OTHERS

	CN7405 PLUG120-P	AKM1203
	CN7401 PLUG 15-P	AKM1232
	CN7410 PLUG50-P	AKM1270

[MAIN LPF BLOCK]

SEMICONDUCTORS

	IC6402	AN5870SB
	IC6404	BA7078AF
	IC6403	BA7657F
	IC6401	SM5301BS
	IC6407	TC74VHC08FT
	IC6405	TC74VHC125FT
	Q6419-Q6421	2SA1586
	Q6407, Q6417	DTC124EUA
	Q6402-Q6406, Q6408, Q6410, Q6412	HN1B04FU
	D6404	1SS302

COILS AND FILTERS

	L6401	LCTAW4R7J2520
	L6402	LCTAWR68J2520

CAPACITORS

	C6409, C6436, C6437, C6462, C6469	ACH1357
	C6402, C6405, C6406 (47/16V)	ACH1391
	C6427, C6428, C6431 (47/16V)	ACH1391
	C6416, C6417, C6424 (100/16V)	ACH1394
	C6433 (100/16V)	ACH1399
	C6439 (22/16V)	ACH1400
	C6445	CCSRCH151J50
	C6435, C6467, C6468	CCSRCH470J50
	C6401, C6403, C6404, C6414, C6415	CKSRYB103K50
	C6423, C6429, C6430, C6432, C6438	CKSRYB103K50
	C6446, C6449, C6451, C6454, C6456	CKSRYB103K50
	C6459, C6461, C6470-C6476	CKSRYB103K50
	C6463	CKSRYB104K25
	C6408, C6411, C6412, C6421, C6455	CKSRYB105K6R3
	C6457, C6460	CKSRYB105K6R3
	C6458	CKSRYB471K50
	C6443	CKSRYB474K10
	C6442	CKSRYB562K50
	C6407, C6410, C6413, C6418-C6420	CKSSYF104Z16
	C6425, C6426, C6434, C6440, C6441	CKSSYF104Z16
	C6444, C6447, C6448, C6450	CKSSYF104Z16
	C6452, C6453	CKSSYF104Z16

RESISTORS

	R6489	RAB4CQ470J
	R6422	RS1/16S1101F
	R6526-R6528	RS1/16S2200F
	R6428, R6429	RS1/16S3000F
	R6547-R6549	RS1/16S75R0F
	Other Resistors	RS1/16S###J

Mark	No.	Description	Part No.
		OTHERS	
		K6401-K6406 TEST PIN	AKX9002
		CN6402 PLUG(6P)	KM200NA6
		[MAIN AD BLOCK]	
		SEMICONDUCTORS	
		IC6001	CXA3516AR
		IC6002-IC6008	TC74LCX541FT
		Q6001	2SC4116
		D6001	1SS355
		COILS AND FILTERS	
		L6001	LCTAWR68J2520
		CAPACITORS	
		C6001, C6005, C6010 (100/6.3V)	ACH1396
		C6028, C6041, C6043 (100/6.3V)	ACH1396
		C6051, C6054 (100/6.3V)	ACH1396
		C6020	CCSRCH101J50
		C6011	CCSRCH220J50
		C6017	CCSRCH331J50
		C6003, C6018, C6024, C6025	CKSRYB105K6R3
		C6033, C6034, C6037, C6038, C6045	CKSRYB105K6R3
		C6062-C6068	CKSRYB471K50
		C6002, C6004, C6006-C6009	CKSSYF104Z16
		C6012-C6016, C6021-C6023	CKSSYF104Z16
		C6026, C6027, C6029-C6032	CKSSYF104Z16
		C6035, C6036, C6039, C6040, C6042	CKSSYF104Z16
		C6044, C6046-C6050, C6052, C6053	CKSSYF104Z16
		C6055-C6061	CKSSYF104Z16
		RESISTORS	
		R6001, R6004, R6013, R6014	RAB4CQ100J
		R6020, R6021, R6024, R6027, R6033	RAB4CQ100J
		R6038, R6044, R6054	RAB4CQ100J
		R6073-R6085	RAB4CQ330J
		R6023	RN1/16SE3001D
		R6018	RS1/16S2201F
		R6016	RS1/16S2701F
		R6019	RS1/16S3301F
		Other Resistors	RS1/16S###J
		OTHERS	
		K6001-K6007, K6010-K6013 TEST PIN	AKX9002
		[SUB LPF & AD BLOCK]	
		SEMICONDUCTORS	
		IC6602	AD9883AKST-110
		IC6604	BA7078AF
		IC6601	SM5301BS
		IC6608-IC6614	TC74LCX541FT
		IC6605	TC74VHC08FT
		IC6603, IC6607	TC74VHC125FT
		Q6603, Q6604	DTC124EUA
		Q6605	HN1B04FU
		COILS AND FILTERS	
		F6601	ATF1194
		L6701	LCTAWR68J2520
		CAPACITORS	
		C6635-C6637, C6640	ACH1357
		C6633 (100/16V)	ACH1399
		C6644	CCSRCH151J50

Mark	No.	Description	Part No.
		C6638	CKSRYB103K50
		C6604, C6624	CKSRYB104K16
		C6648	CKSRYB104K25
		C6608, C6611, C6612, C6621	CKSRYB105K6R3
		C6630-C6632	CKSRYB105K6R3
		C6646, C6656-C6661	CKSRYB471K50
		C6609, C6614, C6623	CKSRYB473K16
		C6642	CKSRYB474K10
		C6641	CKSRYB562K50
		C6602	CKSRYB822K50
		C6601	CKSRYB823K16
		C6605-C6607, C6610, C6613	CKSSYF104Z16
		C6615-C6620, C6625-C6629, C6634	CKSSYF104Z16
		C6639, C6643, C6645, C6647	CKSSYF104Z16
		C6649-C6655	CKSSYF104Z16
		RESISTORS	
		R6699-R6710, R6723-R6728	RAB4CQ0R0J
		R6729-R6734	RAB4CQ101J
		R6608, R6613, R6621, R6627	RAB4CQ470J
		R6643, R6644, R6667-R6672	RAB4CQ470J
		R6676-R6678, R6681-R6685	RAB4CQ470J
		R6612, R6619, R6620	RS1/16S1000F
		R6625	RS1/16S1101F
		R6607, R6611, R6626	RS1/16S1300F
		R6601	RS1/16S2701F
		Other Resistors	RS1/16S###J
		OTHERS	
		K6601-K6607 TEST PIN	AKX9002
		[BUS SW1 BLOCK]	
		SEMICONDUCTORS	
		IC5701	PD6435A
		CAPACITORS	
		C5701 (47/16V)	ACH1391
		C5709, C5710	CCSRCH150J50
		C5721-C5737	CKSRYB103K50
		C5702-C5708, C5711, C5712	CKSSYF104Z16
		C5714-C5718	CKSSYF104Z16
		RESISTORS	
		R5703-R5706, R5708-R5712, R5714	RAB4CQ100J
		R5717, R5721, R5735, R5739-R5750	RAB4CQ100J
		R5755, R5756, R5762, R5763	RAB4CQ100J
		R5768-R5771	RAB4CQ100J
		R5728-R5734, R5782-R5787	RAB4CQ103J
		Other Resistors	RS1/16S###J
		OTHERS	
		CN5701 PCISOKET120-P	AKP1220
		X5701 CERAMIC RESONATOR	ASS1169
		[BUS SW2 BLOCK]	
		SEMICONDUCTORS	
		IC5801	PD6435A
		CAPACITORS	
		C5801 (47/16V)	ACH1391
		C5809, C5810	CCSRCH150J50
		C5802-C5808, C5811, C5812	CKSSYF104Z16
		C5814-C5818	CKSSYF104Z16

Mark No.	Description	Part No.
	RESISTORS	
	R5816-R5825, R5827, R5835, R5849	RAB4CQ100J
	R5852, R5854, R5856, R5858, R5860	RAB4CQ100J
	R5868-R5871, R5877	RAB4CQ100J
	R5802-R5808, R5812-R5814, R5831	RAB4CQ103J
	R5837, R5844, R5883	RAB4CQ103J
	R5845, R5850, R5851, R5853, R5855	RAB4CQ470J
	R5857, R5859, R5861-R5863, R5876	RAB4CQ470J
	Other Resistors	RS1/16S###J
	OTHERS	
	X5801 CERAMIC RESONATOR	ASS1169
	[IC2 BLOCK]	
	SEMICONDUCTORS	
	IC7001, IC7002	IC42S32200-7TG-K
	IC7004	PE5362A
	IC7003	TC74LCX125FT
	COILS AND FILTERS	
	F7001, F7002	ATF1194
	CAPACITORS	
	C7029, C7041 (100/6.3V)	ACH1396
	C7065	CCSRCH100D50
	C7066-C7068	CCSRCH221J50
	C7001-C7024, C7026-C7028	CKSSYF104Z16
	C7032-C7040, C7042-C7063	CKSSYF104Z16
	C7031	DCH1165
	RESISTORS	
	R7034	RAB4CQ470J
	R7027, R7037	RS1/16SS0R0J
	R7023, R7035-R7036	RS1/16SS101J
	R7001, R7008	RS1/16SS102J
	R7002-R7004, R7024	RS1/16SS103J
	R7006, R7009, R7012	RS1/16SS220J
	R7011	RS1/16SS820J
	Other Resistors	RS1/16S###J
	OTHERS	
	K7001-K7003 TEST PIN	AKX9002
	X7001 CRYSTAL OSCILLATOR	ASS1174
	[IC3 BLOCK]	
	SEMICONDUCTORS	
	IC7102	24LC02B(I)SN
	IC7101	PD5855A
	COILS AND FILTERS	
	F7101, F7102	ATF1194
	CAPACITORS	
	C7103, C7120, C7138 (100/6.3V)	ACH1396
	C7141	CCSRCH100D50
	C7101, C7102, C7104-C7119	CKSSYF104Z16
	C7121-C7137, C7139, C7140, C7142	CKSSYF104Z16
	RESISTORS	
	R7102, R7105-R7108, R7110, R7111	RAB4CQ330J
	R7128, R7129, R7132, R7133	RAB4CQ330J
	R7136, R7137	RAB4CQ330J
	R7154	RAB4CQ470J
	R7125, R7142	RS1/16SS0R0J
	R7120, R7150, R7151	RS1/16SS101J
	R7101	RS1/16SS103J
	R7103, R7104, R7112, R7114	RS1/16SS330J
	R7122, R7126, R7127, R7130, R7131	RS1/16SS330J
	R7134-R7135	RS1/16SS330J
	R7138, R7139, R7152	RS1/16SS330J
	R7149	RS1/16SS472J
	Other Resistors	RS1/16S###J
	OTHERS	
	CN7101 114PFFC CONNECTER	AKM1216
	K7101, K7102 TEST PIN	AKX9002
	[IC3 FLASH BLOCK]	
	SEMICONDUCTORS	
	IC7152	MBM29PL3200BE70PFV
	CAPACITORS	
	C7152, C7153, C7155-C7158, C7160	CKSSYF104Z16
	C7162	CKSSYF104Z16
	RESISTORS	
	R7155-R7160	RS1/16SS472J
	Other Resistors	RS1/16S###J
	[MAIN UCOM BLOCK]	
	SEMICONDUCTORS	
	IC7205	24LC128(I)SN
	IC7201, IC7204	74VHCT00AMTC
	IC7207	MB91F355APMTGE1
	IC7210	PST3612UR
	IC7203, IC7206	PST3628UR
	IC7209	TC74VHC08FT
	IC7202	TC74VHC125FT
	IC7208	TC74VHCT541AFT
	Q7201	2SJ461A
	Q7202	DTC124EUA
	D7202	1SS355
	D7203	SML-310MT
	CAPACITORS	
	C7205, C7236	ACH1391
	C7143, C7203	CCSRCH220J50
	C7213, C7218	CCSRCH7R0D50
	C7248, C7249	CKSRYB102K50
	C7235, C7245	CKSRYB103K50
	C7226, C7237	CKSRYB104K16
	C7230, C7242	CKSRYB104K25
	C7216	CKSRYB472K50
	C7201, C7202, C7209-C7212	CKSSYF104Z16
	C7214, C7215, C7219-C7225	CKSSYF104Z16
	C7227-C7229, C7232-C7234, C7238	CKSSYF104Z16
	C7240, C7241, C7243, C7244	CKSSYF104Z16
	C7246, C7247	CKSSYF104Z16
	RESISTORS	
	R7231	RAB4CQ0R0J
	R7229	RAB4CQ101J
	R7256	RAB4CQ103J
	R7218, R7219, R7284-R7286, R7301	RAB4CQ470J
	R7309, R7311-R7314, R7317	RAB4CQ470J

Mark No.	Description	Part No.
	R7201	RAB4CQ472J
	R7212, R7232	RS1/16S1202F
	R7208-R7209, R7216-R7217	RS1/16SS0R0J
A	R7207, R7221-R7223, R7225-R7226	RS1/16SS470J
	R7228, R7230, R7249, R7251, R7262	RS1/16SS470J
	R7263, R7278-R7279, R7310	RS1/16SS470J
	R7315-R7316, R7318, R7339	RS1/16SS470J
	Other Resistors	RS1/16S###J
	OTHERS	
	CN7201 PLUG 8-P	AKM1225
	X7201 CERAMIC RESONATOR	ASS1170
	CN7204 3-P TOP POST	B3B-EH

B

AV I/O ASSY

[AV I/O BLOCK]

	SEMICONDUCTORS	
	IC7609	24LCS21A
	IC7610	AN5870SB
	IC7602, IC7606, IC7607, IC7613	BA4558F-HT
	IC7603	BD3869AF
	IC7604	NJM78L09UA
	IC7612	PCM1742KE
	IC7601	TC4052BFT
C	IC7611	TC74VHCT541AFT
	Q7602, Q7603, Q7606, Q7611, Q7612	2SA1586
	Q7604, Q7605, Q7610	2SC4116
	Q7607, Q7608	DTC124EUA
	Q7601	RN1902
	Q7609	SM6K2
	D7601, D7614	1SS301
	D7606-D7608, D7610-D7613	1SS302
	D7619	1SS355
	D7602, D7603, D7605, D7609	UDZS5R6(B)
	D7604	UDZS6R8(B)

D

	COILS AND FILTERS	
	F7601	ATF1194
	CAPACITORS	
	C7659, C7669	CCSRCH181J50
	C7673, C7674	CCSRCH220J50
	C7658, C7672	CCSRCH681J50
	C7676, C7678, C7680, C7682	CCSSCH221J50
	C7646, C7651-C7653	CEHAT100M50
	C7654	CEHAT101M10
E	C7665, C7670	CEHAT101M16
	C7623, C7648	CEHAT220M50
	C7638, C7643, C7645, C7705	CEHAT221M6R3
	C7714, C7716, C7718	CEHAT331M10
	C7619, C7635, C7637, C7697	CEHAT470M16
	C7601, C7602, C7609, C7610, C7614	CKSQYB225K10
	C7616, C7629, C7631, C7632, C7639	CKSQYB225K10
	C7627, C7628, C7640, C7650	CKSRYB102K50
	C7660, C7661, C7666, C7683, C7685	CKSRYB103K50
	C7687, C7712, C7713, C7715, C7717	CKSRYB103K50
	C7603, C7620, C7662, C7663, C7667	CKSRYB105K10
F	C7684, C7686, C7688	CKSRYB105K10
	C7633, C7656	CKSRYB471K50
	C7675, C7677, C7679, C7681	CKSSYB102K50

Mark No.	Description	Part No.
	C7615, C7617, C7618, C7624-C7626	CKSSYF104Z16
	C7630, C7634, C7636, C7641, C7642	CKSSYF104Z16
	C7644, C7649, C7655, C7657, C7664	CKSSYF104Z16
	C7668, C7671, C7704, C7706	CKSSYF104Z16
	C7708-C7711	CKSSYF104Z16
	RESISTORS	
	R7653, R7654, R7673, R7674	RS1/16S1002F
	R7712, R7725	RS1/16S2201F
	R7699-R7701	RS1/16S27R0F
	R7709-R7711	RS1/16S75R0F
	Other Resistors	RS1/16S###J
	OTHERS	
	JA7606 15P D-SUB SOCKET	AKP1241
	K7601, K7602 TEST PIN	AKX9002
	JA7601, JA7602 JACK	DKB1031
	CN7601 PLUG(15P)	KM200NA15

[IF UCOM BLOCK]

	SEMICONDUCTORS	
	IC8705	24LC01B
	IC8702	HD64F3687FP
	IC8703	PST9230N
	IC8701	TC74VHC08FT
	IC8704	TC7W126FU
	Q8701	2SJ461A
	Q8708	DTA124EUA
	Q8702	DTC124EUA
	COILS AND FILTERS	
	L8703	LCTAW221J3225
	L8702	LCTAWR68J2520
	CAPACITORS	
	C8706, C8707	CCSRCH120J50
	C8708	CEHAT470M16
	C8704, C8718	CEHAT471M6R3
	C8717, C8720	CKSRYB103K50
	C8722, C8724	CKSRYB471K50
	C8709	CKSRYB472K50
	C8701-C8703, C8705, C8711-C8713	CKSSYF104Z16
	C8716, C8719, C8721, C8725	CKSSYF104Z16
	RESISTORS	
	R8719, R8720, R8723, R8724, R8726	RAB4C101J
	R8704	RAB4C103J
	R8736	RS1/16S1302F
	Other Resistors	RS1/16S###J
	OTHERS	
	CN8701 PLUG 8-P	AKM1225
	K8701-K8703 TEST PIN	AKX9002
	X8702 CERAMIC RESONATOR	ASS1168
	X8701 CRYSTAL OSCILLATOR	ASS1172
	CN8704 PLUG(6P)	KM200NA6

[HDMI BLOCK]

	SEMICONDUCTORS	
	IC6806	24LC02B(I)SN
	IC6809	SI-8033JD
	IC6810	SII9993CTG100
	IC6802	TC74HC4538AFT
	IC6804, IC6805, IC6807, IC6811	TC74LCX541FT
	Q6813	RN1902
	Q6816	SM6K2

Mark No.	Description	Part No.
	D6806, D6809, D6813	1SS301
	D6810, D6812	1SS302
	D6816	D1FM3
	D6811	UDZS6R8(B)

COILS AND FILTERS

	F6804-F6806	ATF1194
	F6807, F6808	ATF1211
	L6804	ATH1184

CAPACITORS

	C6923	CCSRCH221J50
	C6864, C6865, C6867, C6869	CCSSCH101J50
	C6873, C6874, C6879, C6881, C6884	CCSSCH101J50
	C6886, C6888, C6892, C6908, C6910	CCSSCH101J50
	C6912, C6914, C6917, C6920	CCSSCH101J50
	C6921	CCSSCH221J50
	C6891	CEHAT100M50
	C6860	CEHAT101M10
	C6823, C6825	CEHAT220M50
	C6902	CEHAT221M16
	C6878, C6916, C6922	CEHAT221M6R3
	C6877	CEHAT470M16
	C6905	CEHAT471M10
	C6859, C6861, C6875, C6896	CKSRYB471K50
	C6903, C6904, C6906	CKSRYF104Z16
	C6893	CKSSYB473K16
	C6890	CKSSYF103Z50
	C6824, C6841, C6842, C6858	CKSSYF104Z16
	C6862, C6863, C6866, C6868	CKSSYF104Z16
	C6870-C6872, C6876, C6880	CKSSYF104Z16
	C6882, C6883, C6885, C6887, C6889	CKSSYF104Z16
	C6895, C6907, C6909, C6911, C6913	CKSSYF104Z16
	C6915, C6918, C6919	CKSSYF104Z16
	C6894	DCH1161

RESISTORS

	R6896, R6913, R6926, R6933, R6935	RAB4CQ470J
	R6937, R6938, R6953, R6960	RAB4CQ470J
	R6897, R6914, R6927, R6934, R6936	RAB4CQ680J
	R6954, R6968	RAB4CQ680J
	R6831	RD1/2LMF1R0J
	R6932	RS1/16S3900F
	R6952	RS1/16S3901F
	R6962-R6967	RS1/16S75R0F
	R6950	RS1/16S91R0F
	Other Resistors	RS1/16S###J

OTHERS

	JA6802 HDMI CONNECTOR	AKP1232
	Other Resistors	

RESISTORS

	Other Resistors	RS1/16S###J

AUDIO AMP ASSY

SEMICONDUCTORS

	IC5002	BA4558F-HT
⚠	IC5003	LA4625
⚠	IC5004	PQ12DZ11
⚠	IC5001	SI-8120S
	Q5005, Q5007, Q5008	2SA1586
	Q5001, Q5009	2SC4116
	Q5011, Q5012	2SD2114K
	Q5013	DTA124EUA
	D5003	1SS301
	D5001	1SS302
	D5002	1SS355
	D5005	RK46

COILS AND FILTERS

	L5002	ATH1159

CAPACITORS

	C5049, C5080	CEHAT101M16
	C5045	CEHAT220M50
	C5010	CEHAT221M10
	C5022	CEHAT222M16
	C5047, C5048, C5081	CEHAT2R2M50
	C5050	CEHAT330M25
	C5005-C5008, C5016	CEHAT470M16
	C5051	CEHATR47M50
	C5019, C5020	CEHAZL471M25
	C5002, C5004, C5017, C5027	CKSRYB103K50
	C5055-C5058	CKSRYB104K25
	C5043, C5044	CKSRYB222K50

RESISTORS

	R5049-R5052	RD1/4MUF2R2J
	R5053-R5056	RS1/10S5R6J
	R5001	RS1/16S1502F
	R5005, R5006, R5009, R5010	RS1/16S3301F
	R5003, R5004, R5007, R5008	RS1/16S6801F
	Other Resistors	RS1/16S###J

OTHERS

	CN5002 PLUG(6P)	KM200NA6
	5001 SCREW	VBB30P100FNI
	KN5001, KN5002 WRAPPING TERMINAL	VNF1084

VIDEO SLOT I/F ASSY

SEMICONDUCTORS

	IC8952	24LC01B
	Q8953	DTC124EUA
	D8951, D8952	UDZS5.6B

COILS AND FILTERS

	L8951	ATX1008

CAPACITORS

	C8952	CEHAT470M16
	C8953	CKSSYF104Z16

RESISTORS

	Other Resistors	RS1/16S###J

OTHERS

	CN8953 SOKET120-P	AKP1219
	CN8954 PCISOKET184	AKP1251
	CN8955 SOKET50-P	AKP1253
	KN8951, KN8952 GROUND PLATE	ANK1664
	CN8952 L-PLUG(11P)	KM200NA11L

Mark No.	Description	Part No.

IR RECEIVE ASSY

SEMICONDUCTORS

A	Q4901	2SC4116
	D4902	1SS302
	D4901	1SS355

CAPACITORS

	C4905	CCSRCH101J50
	C4901	CEAT470M16
	C4903	CKSRYB102K50
	C4907	CKSRYB103K50
	C4902, C4904	CKSSYF104Z16

RESISTORS

B	Other Resistors	RS1/16S###J

OTHERS

	U4901 REMOTE RECEIVER UNIT	RPM7240-H4

SP TERMINAL L ASSY

SEMICONDUCTORS

	IC9752	MM1522XU
	IC9751	MM3012XN

COILS AND FILTERS

C	L9701, L9702	ATF1206

CAPACITORS

	C9703, C9704	CCSRCH101J50
	C9706, C9708-C9711	CCSRCH221J50
	C9753, C9756	CEAT470M16
	C9754	CKSRYB103K50
	C9752, C9755	CKSRYB105K10
	C9705	CKSRYB332K50
	C9707	CKSRYF473Z50
	C9751, C9757	CKSSYF104Z16

RESISTORS

D	R9703, R9704	RD1/2MMF100J
	R9757, R9760	RS1/16S1001F
	Other Resistors	RS1/16S###J

OTHERS

	CN9701 SPEAKER TERMINAL 2-P	AKE1041
	CN9702 PLUG(6P)	KM200NA6

SP TERMINAL R ASSY

COILS AND FILTERS

E	L9801, L9802	ATF1206

CAPACITORS

	C9804, C9805	CCSRCH101J50
	C9801, C9808-C9811	CCSRCH221J50
	C9806	CKSRYB332K50
	C9807	CKSRYF473Z50

RESISTORS

	R9803, R9804	RD1/2MMF100J
	Other Resistors	RS1/16S###J

OTHERS

F	CN9802 SPEAKER TERMINAL 2-P	AKE1041

Mark No.	Description	Part No.

AV I/O IF ASSY

OTHERS

	CN2101 PCISOKET120-P	AKP1220

COMM SLOT I/F ASSY

SEMICONDUCTORS

	IC8901	TC74VHC00FT
	Q8902	2SC4116
	D8901, D8902	1SS355

COILS AND FILTERS

	L8901	LCTAW221J3225

CAPACITORS

	C8902	CKSRYB104K25
	C8901	CKSSYF104Z16

RESISTORS

	Other Resistors	RS1/16S###J

OTHERS

	CN8904 EDGE CARD CONN	AKP1252
	CN8902 L-PLUG (10P)	KM200NA10L
	CN8903 L-PLUG (11P)	KM200NA11L
	CN8905 L-PLUG (6P)	KM200NA6L

LED ASSY

SEMICONDUCTORS

	Q9652	DTC143EUA
	Q9651	RN2901
	D9652	SML-310MT
	D9651	SML-311UT

CAPACITORS

	C9652-C9655	CCSRCH101J50
	C9656	CKSRYB103K50
	C9651	CKSSYF104Z16

RESISTORS

	Other Resistors	RS1/16S###J

COMM SLOT ASSY

SEMICONDUCTORS

	IC9451	SP3232ECY
	IC9454	TC74VHC00FT
	IC9455, IC9456	TC74VHC125FT

CAPACITORS

	C9455	CEJQ470M6R3
	C9452, C9473, C9475, C9477	CKSRYB471K50
	C9451, C9453, C9454, C9457, C9458	CKSSYF104Z16
	C9472, C9474, C9476	CKSSYF104Z16

RESISTORS

	Other Resistors	RS1/16S###J

OTHERS

	JA9453 9P D-SUB SOCKET	AKP1240
	3214 SLOT PANEL S(F)	ANG2695
	3526 HEXAGON HEADED SCREW	BBA1051
	3500 SCREW	BMZ30P060FZK
	9451 SCREW TERMINAL	VNE1949

Mark No.	Description	Part No.

KEY CONTROL ASSY

SEMICONDUCTORS

IC9001	PD5719A
Q9001	2SC4116
D9001-D9003, D9005-D9007	1SS302
D9004	1SS355

COILS AND FILTERS

F9001-F9006	DTL1069

CAPACITORS

C9006-C9008	CCSRCH101J50
C9005	CEAT470M16
C9001-C9003	CKSRYB472K50
C9004	CKSSYF104Z16

RESISTORS

R9008	RAB4C182J
Other Resistors	RS1/16S###J

OTHERS

CN9002 6P FFC CONNECTOR	AKM1208
X9001 CERALOCK	ASS1162
CN9001 L-PLUG (3P)	KM200NA3L

FRONT KEY ASSY

SWITCHES AND RELAYS

S9401-S9406	ASG1088

OTHERS

CN9400 6P FFC CONNECTOR	AKM1208

DIGITAL VIDEO ASSY

[DIGITAL IF BLOCK]

COILS AND FILTERS

F5001, F5002, F5004	ATF1213

RESISTORS

R5101-R5115, R5131	RAB4C470J
Other Resistors	RS1/16SS###J

OTHERS

CN5001 114PFFC CONNECTER	AKM1216
CN5002 CONNECTOR	AKM1281

[MODULE UCOM BLOCK]

SEMICONDUCTORS

IC5206	BR24L04FJ-W
IC5201	M30622F8PGP-K
IC5205	PST3628UR
IC5208	SN74AHC08PW
IC5214, IC5215	SN74AHC32PW
IC5211, IC5212	SN74AHC541PW
IC5209	TC7W126FU
Q5201	2SJ461A
Q5202	DTC143EUA
D5217	1SS355
D5207-D5212	DAN202U
D5201	SML-310LT

SWITCHES

S5201	ASH1047

CAPACITORS

C5213, C5225	ACH1357
C5205	CKSRYB472K50
C5206, C5223, C5231, C5245-C5262	CKSSYB102K50
C5264	CKSSYB102K50
C5263	CKSSYB104K10
C5202-C5204, C5207, C5208	CKSSYF104Z16
C5210-C5212, C5218, C5224	CKSSYF104Z16
C5226, C5227, C5243, C5244	CKSSYF104Z16

RESISTORS

R5209, R5211, R5212, R5235	RAB4C101J
R5254, R5255, R5265, R5266	RAB4C101J
R5205	RAB4C103J
R5270, R5271	RAB4C472J
R5256, R5257	RAB4C474J
R5294	RS1/16S0R0J
Other Resistors	RS1/16S###J

OTHERS

CN5201 PLUG 8-P	AKM1225
CN5202 CONNECTOR	AKM1274
⚠ X5201 CERAMIC RESONATOR	ASS1178

[PANEL FLASH BLOCK]

SEMICONDUCTORS

IC5305	MBM29PL160BD-75PFTN
IC5303	PST3612UR
IC5301	PST3628UR
IC5302	SN74AHC08PW
Q5301	RN1901
D5301-D5310	DA204U

CAPACITORS

C5320	CCSRCH470J50
C5321, C5322	CCSRCH471J50
C5311, C5314	CKSRYB104K16
C5303, C5306	CKSRYB472K50
C5304, C5307	CKSSYB102K50
C5301, C5302, C5305, C5309, C5313	CKSSYF104Z16
C5316	CKSSYF104Z16

RESISTORS

R5317, R5318	RAB4C101J
Other Resistors	RS1/16SS###J

OTHERS

CN5301 PLUG 15-P	AKM1232
⚠ X5302 CRYSTAL OSCILLATOR	ASS1174
⚠ X5301 CRYSTAL OSCILLATOR	ASS1182

[IC4 BLOCK]

SEMICONDUCTORS

IC5401	PEG054A-K
D5401	SML-310LT
D5402	SML-310MT

COILS AND FILTERS

F5401, F5403, F5409, F5410	ATF1213

Mark	No.	Description	Part No.
		CAPACITORS	
		C5401, C5413, C5417 (100/6.3V)	ACH1396
		C5424 (100/6.3V)	ACH1396
A		C5434, C5435	CKSSYB102K50
		C5402-C5412, C5414-C5416	CKSSYF104Z16
		C5418-C5423, C5425-C5431	CKSSYF104Z16
		RESISTORS	
		R5406, R5421	RAB4C101J
		R5408-R5413, R5415, R5416, R5419	RAB4C220J
		R5422	RAB4C220J
		R5405	RS1/16S5601F
		R5420	RS1/16SS0R0J
		R5426-R5428	RS1/16SS101J
		R5423, R5425	RS1/16SS103J
B		R5429-R5430	RS1/16SS122J
		R5417-R5418	RS1/16SS220J
		Other Resistors	RS1/16S###J
		[ADDRESS CN BLOCK]	
		RESISTORS	
		All Resistors	RS1/16SS###J
		OTHERS	
		CN5521	AKM1201
		⚠CN5501-CN5508	AKM1217
C		CN5511	AKM1218
		[DIGITAL DD CON BLOCK]	
		SEMICONDUCTORS	
		⚠IC5605	BA90BC0FP
		⚠IC5604	MM1665AT
		Q5601	HN1C01FU
		D5602, D5609	DAN202U
		D5601	HZU2R2(B)
		D5604	UDZS5R1(B)
D		**CAPACITORS**	
		C5601, C5603, C5614 (100/16V)	ACH1394
		C5616 (100/16V)	ACH1394
		C5602, C5604, C5615, C5617	CKSRYB103K50
		C5605, C5606	CKSSYF104Z16
		RESISTORS	
		R5610	RS1/16SS101J
		R5606-R5607	RS1/16SS102J
		R5608-R5609, R5611, R5628	RS1/16SS223J
		Other Resistors	RS1/16S###J
E		**OTHERS**	
		⚠CN5602 CONNECTOR	AKM1278
		⚠CN5601 CONNECTOR	AKM1282

VIDEO SLOT2 ASSY

Mark	No.	Description	Part No.
		[INPUT REG BLOCK]	
		SEMICONDUCTORS	
		IC7804	BA4558F-HT
		⚠IC8104	PQ015YZ01ZP
		⚠IC8101	PQ05DZ11
F		⚠IC8102	PQ09DZ11
		⚠IC8103, IC8105	PQ3DZ13
		IC7803	TC4052BFT
		IC7801, IC7802	TK15420M
		Q7805	2SC4116
		Q7803, Q7804	DTC124EUA
		Q7806	HN1C01FU
		D7801-D7804, D7806-D7814	1SS302
		D8106, D8107	1SS302
		D7815, D8101-D8105	1SS355
		COILS AND FILTERS	
		F8101-F8103	ATF1194
		CAPACITORS	
		C7850	CEHAT100M50
		C8105, C8114, C8125, C8130	CEHAT101M10
		C8112	CEHAT101M16
		C7808	CEHAT220M50
		C8101, C8131	CEHAT221M16
		C8122	CEHAT221M6R3
		C7801, C7847, C7848, C8107, C8109	CEHAT470M16
		C8116	CEHAT470M16
		C7806	CEHAT471M16
		C7821, C7825, C7835, C7840, C7851	CEHAT4R7M50
		C7853, C7855	CEHAT4R7M50
		C7827, C7828, C7842, C7843	CKSRYB102K50
		C7857, C7858	CKSRYB102K50
		C7803, C7812, C7814, C7815	CKSRYB103K50
		C7813, C7816, C7817	CKSRYB105K10
		C7823, C7824, C7839, C7844, C7854	CKSRYB221K50
		C7859	CKSRYB221K50
		C7802, C7807, C7820, C7830	CKSSYF104Z16
		C8102-C8104, C8106, C8108	CKSSYF104Z16
		C8110, C8111, C8113, C8115, C8121	CKSSYF104Z16
		C8124, C8126-C8129, C8132	CKSSYF104Z16
		RESISTORS	
		R8113	RS1/16S1001F
		R8112	RS1/16S5100F
		R7808, R7809, R7822, R7823, R7834	RS1/16S75R0F
		R7836, R7837	RS1/16S75R0F
		R8106, R8118	RS1MMF100J
		R8108, R8119-R8121	RS1MMF390J
		Other Resistors	RS1/16S###J
		OTHERS	
		CN7801 DIN SOCKET	AKP1217
		JA7801-JA7803 JACK	DKB1031
		JA7804 JACK	VKB1134
		JA7805 JACK	VKB1150
		7801, 7802 SCREW TERMINAL	VNE1949
		[IC1(Y/C)BLOCK]	
		SEMICONDUCTORS	
		IC6257	24LC01B
		IC6255	PD0278A
		IC6251-IC6254	TC7SHU04FU
		IC6256	TC7W126FU
		Q6255	2SJ461A
		Q6258	DTA124EUA
		Q6251, Q6253	HN1A01FU
		Q6256, Q6257	HN1B04FU

Mark No.	Description	Part No.
COILS AND FILTERS		
F6251-F6254		ATF1194
L6251, L6253		LCTAW120J2520
L6252, L6254		LCTAW150J2520
L6257		LCTAW220J2520
L6255, L6256		LCTAW330J2520
CAPACITORS		
C6305, C6306, C6312, C6313		CCSRCH120J50
C6272, C6274, C6288, C6290		CCSRCH220J50
C6249, C6250		CCSRCH471J50
C6273, C6289		CCSRCH680J50
C6295, C6321, C6322, C6327-C6330		CEHAT101M10
C6324		CEHAT470M16
C6297		CKSQYB225K10
C6258, C6260		CKSRYB102K50
C6265, C6268, C6282, C6285		CKSRYB104K16
C6299, C6300, C6309, C6310, C6316		CKSRYB104K16
C6323		CKSRYB104K16
C6201, C6301, C6314		CKSRYB105K10
C6251, C6253-C6257, C6259		CKSSYF104Z16
C6261, C6262, C6267, C6269-C6271		CKSSYF104Z16
C6275-C6279, C6284, C6286, C6287		CKSSYF104Z16
C6291-C6294, C6296, C6298		CKSSYF104Z16
C6302-C6304, C6307, C6308, C6311		CKSSYF104Z16
C6315, C6317-C6320, C6325, C6326		CKSSYF104Z16
C6252		DCH1165
RESISTORS		
R6251-R6254, R6271, R6275, R6276		RAB4CQ100J
R6329-R6331		RAB4CQ103J
R6321, R6322, R6334, R6335, R6339		RS1/16S1000F
R6273, R6289		RS1/16S1001F
R6305, R6314		RS1/16S1101F
R6291, R6309, R6313		RS1/16S1301F
R6323		RS1/16S2400F
R6277, R6288		RS1/16S2701F
R6264, R6281		RS1/16S4700F
R6306, R6307		RS1/16S8201F
R6255		RS1/16SS100J
Other Resistors		RS1/16S###J
OTHERS		
X6251 CRYSTAL OSCILLATOR		ASS1175
[IC1(CVBS)BLOCK]		
SEMICONDUCTORS		
IC6106		IC42S16100-7TG
IC6107		PD0278A
IC6102-IC6105		TC7SHU04FU
Q6103		DTC124EUA
Q6101, Q6102		HN1A01FU
Q6107		HN1B04FU
COILS AND FILTERS		
F6102, F6103, F6105, F6106		ATF1194
L6101, L6103		LCTAW120J2520
L6102, L6104		LCTAW150J2520
L6108		LCTAW220J2520
L6106		LCTAW330J2520
CAPACITORS		
C6171, C6172		CCSRCH120J50

Mark No.	Description	Part No.
C6126, C6128, C6142, C6144		CCSRCH220J50
C6127, C6143		CCSRCH680J50
C6102, C6106, C6115, C6149, C6155		CEHAT101M10
C6182, C6184, C6186		CEHAT101M10
C6105		CEHAT470M16
C6151		CKSQYB225K10
C6112, C6114		CKSRYB102K50
C6119, C6122, C6136, C6139		CKSRYB104K16
C6153, C6154, C6168, C6177		CKSRYB104K16
C6101, C6175, C6190		CKSRYB105K10
C6103, C6104, C6107-C6111, C6113		CKSSYF104Z16
C6116, C6121, C6123-C6125		CKSSYF104Z16
C6129-C6133, C6138, C6140, C6141		CKSSYF104Z16
C6145-C6148, C6150, C6152		CKSSYF104Z16
C6156-C6161, C6166, C6167, C6170		CKSSYF104Z16
C6173, C6174, C6176, C6178-C6181		CKSSYF104Z16
C6183		CKSSYF104Z16
RESISTORS		
R6163, R6166, R6178, R6180		RAB4CQ0R0J
R6101, R6104-R6106, R6120		RAB4CQ100J
R6124, R6125		RAB4CQ100J
R6153-R6155		RAB4CQ103J
R6210-R6213		RAB4CQ121J
R6146, R6159, R6184		RAB4CQ330J
R6156, R6160, R6161, R6194, R6195		RS1/16S1000F
R6122, R6140		RS1/16S1001F
R6175		RS1/16S1101F
R6147, R6174		RS1/16S1301F
R6196		RS1/16S2400F
R6126, R6138		RS1/16S2701F
R6113, R6129		RS1/16S4700F
R6167, R6168		RS1/16S8201F
R6107		RS1/16SS100J
R6157, R6158, R6182- R6183		RS1/16SS330J
Other Resistors		RS1/16S###J
[SINGLE SW BLOCK]		
SEMICONDUCTORS		
IC7902		AN5870SB
IC7908		TC74VHC08FT
IC7907		TC74VHC126FT
IC7905		TC74VHCT541AFT
Q7903, Q7905, Q7910		DTC124EUA
Q7913, Q7916		HN1A01FU
Q7901, Q7906, Q7911, Q7915		HN1C01FU
Q7914		RN1902
CAPACITORS		
C7923, C7925, C7926		CEHANP470M10
C7905		CEHAT101M10
C7902, C7928, C7929, C7931		CEHAT470M16
C7908, C7912, C7917		CEHAT471M16
C7907, C7911, C7916		CKSRYB103K50
C7924, C7927, C7930		CKSRYB105K10
C7906, C7909, C7910, C7914, C7918		CKSRYF103Z50
C7903, C7904, C7913, C7915		CKSSYF104Z16
C7920-C7922, C7932, C7943		CKSSYF104Z16
RESISTORS		
R7902, R7907, R7910, R7914		RAB4CQ0R0J
R7917, R7918, R7935		RAB4CQ0R0J

Mark No.	Description	Part No.
	R7903	RAB4CQ103J
	R7905, R7909, R7912	RS1/16S27R0F
	R8040-R8042	RS1/16S75R0F
	Other Resistors	RS1/16S###J

OTHERS

	3002 SLOT PANEL 262 (CM)	ANG2710
	3201 SCREW	BMZ30P080FZK
	3202 SCREW	BPZ30P080FZK

POWER SUPPLY UNIT

This assembly has no service parts.

6. ADJUSTMENT

1. At shipment, the unit is adjusted to its best conditions. Normally, it is not necessary to readjust even if an assembly is replaced. If the adjustment is shifted or if it becomes necessary to readjust because of part replacement, etc., perform the adjustment as described below.
2. Any value changed in Service/Factory mode will be stored in memory as soon as it is changed. Before readjustment, take note of the original values for reference in case you need to restore the original settings.
3. Use a stable AC power supply.

6.1 ADJUSTMENT REQUIRED WHEN THE SET IS REPAIRED OR REPLACED

■ When any of the following assemblies is replaced

POWER SUPPLY Unit	No adjustment required
DIGITAL VIDEO Assy	Copy of backup data requires. • When adjust with the service factory mode, refer to "10.BACKUP EEPROM" of "6.3 SERVICE FACTORY MODE." • When adjust with the command, refert to "7.1.6 BACKUP THE ADJUSTMENT VALUES FOR THE MAIN UNIT."
50 (43) X DRIVE Assy	No adjustment required
50 (43) Y DRIVE Assy	No adjustment required
AV I/O Assy	No adjustment required
RGB Assy	No adjustment required
VIDEO SLOT Assy	No adjustment required
Other assemblies	No adjustment required
Service Panel	Refer to "6.5 METHOD FOR REPLACING THE SERVICE PANEL ASSY."

■ When any part in the following assemblies is replaced

POWER SUPPLY Unit	The assembly must be replaced as a unit, and no part replacement is allowed.
DIGITAL VIDEO Assy	No adjustment required
50 (43) X DRIVE Assy	Refer to "6.2 DRIVE ASSY ADJUSTMENT."
50 (43) Y DRIVE Assy	Refer to "6.2 DRIVE ASSY ADJUSTMENT."
AV I/O Assy	Replacement and repair of IC6810, IC7610 and IC8705 are impossible.
RGB Assy	Replacement and repair of IC6001, IC6401, IC6403, IC6601, IC6602 and IC7205 are impossible.
VIDEO SLOT Assy	Replacement and repair of IC6107, IC6255, IC6257 and IC7902 are impossible.
Other assemblies	No adjustment required

6.2 DRIVE ASSY ADJUSTMENT

■ How to readjust the timing of the control signals when the DRIVE Assy TND506MD is to be replaced

As there is a large difference in delay time among the individual TND506MDs, timing adjustment has been made on each TND506MD in the unit process. If the TND506MD is replaced on the X or Y Drive Assy, readjustment of the timing of the control signals is required.

Assy	Replaced IC	Signal for which Readjustment is Required
X DRIVE	IC1101	XSUS-U2 & XSUS-D2
	IC1102	XSUS-U1 & XSUS-D1
Y DRIVE	IC2201	YSUS-U1 & YSUS-D1
	IC2202	YSUS-U2 & YSUS-D2

• How to adjust

Adjust the timing between the startup of the control signals of SUS-U1, SUS-D1, SUS-U2, and SUS-D2 and the startup of the voltage between the gate and the source of the output FET, with the VR resistors that are inserted in the signal line in series. When adjusting, set the unit to Drive OFF mode, and Vsus to 0 V. (For details on how to set to Drive OFF mode, see "7.1.5 Power on/off function for the large-signal system".)

• Specified values for adjustment and adjustment points

		X DRIVE			Y DRIVE		
Signal Name	Set Value for Delay Time	Input Signal	Output Signal	Adjustment VR	Input Signal	Output Signal	Adjustment VR
SUS-U1	375ns ± 10ns	K1008	Q1108	VR1103	K2025	Q2202	VR2201
SUS-D1	375ns ± 10ns	K1009	Q1112	VR1104	K2027	Q2205	VR2202
SUS-U2	375ns ± 10ns	K1005	Q1103	VR1101	K2022	Q2208	VR2203
SUS-D2	375ns ± 10ns	K1006	Q1105	VR1102	K2024	Q2212	VR2204

Note: Connect GND of the probe with DGND (DGND: X Drive Assy: K1020, Y Drive Assy: K2010) for input signal.
For outputting a signal, obtain a signal from the FET gate terminal.
For adjustment, magnify any pulse in the waveform.

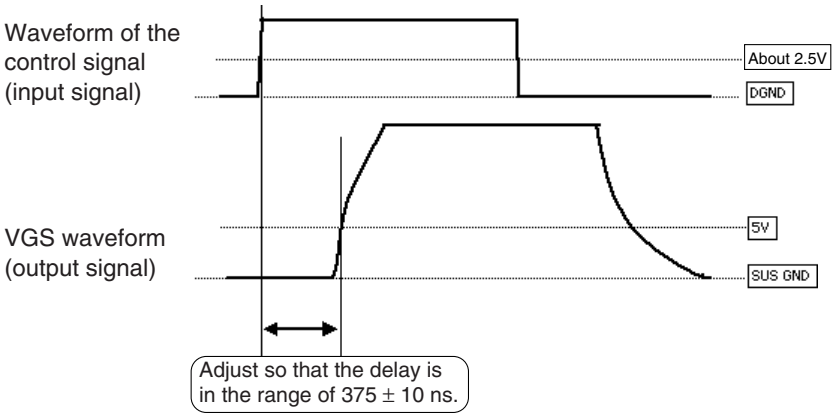
Waveform of the control signal (input signal)
About 2.5V
DGND
VGS waveform (output signal)
5V
SUS GND
Adjust so that the delay is in the range of 375 ± 10 ns.

• Actually measured waveforms

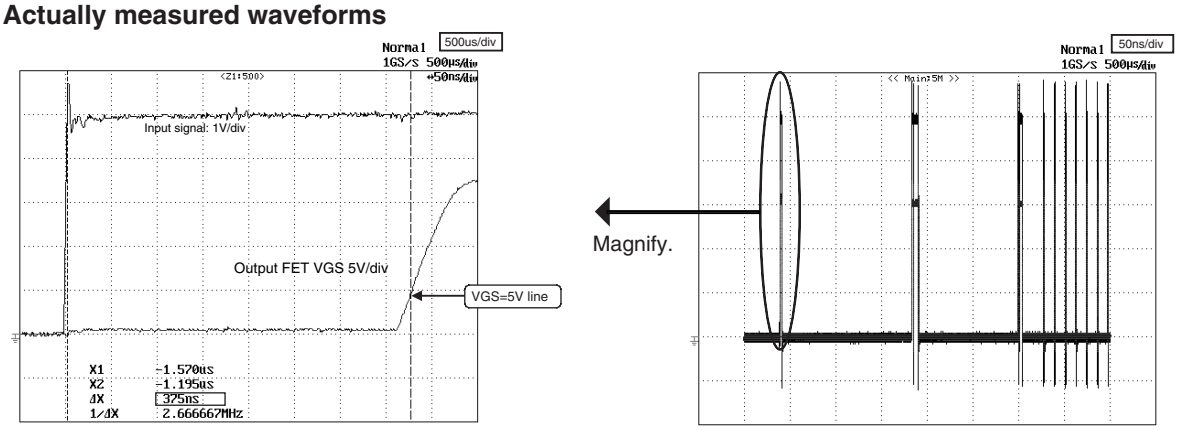

6.3 SERVICE FACTORY MODE

Commands in Service/Factory mode must be issued using the remote control unit supplied with the Plasma Display.

State Transition Diagram

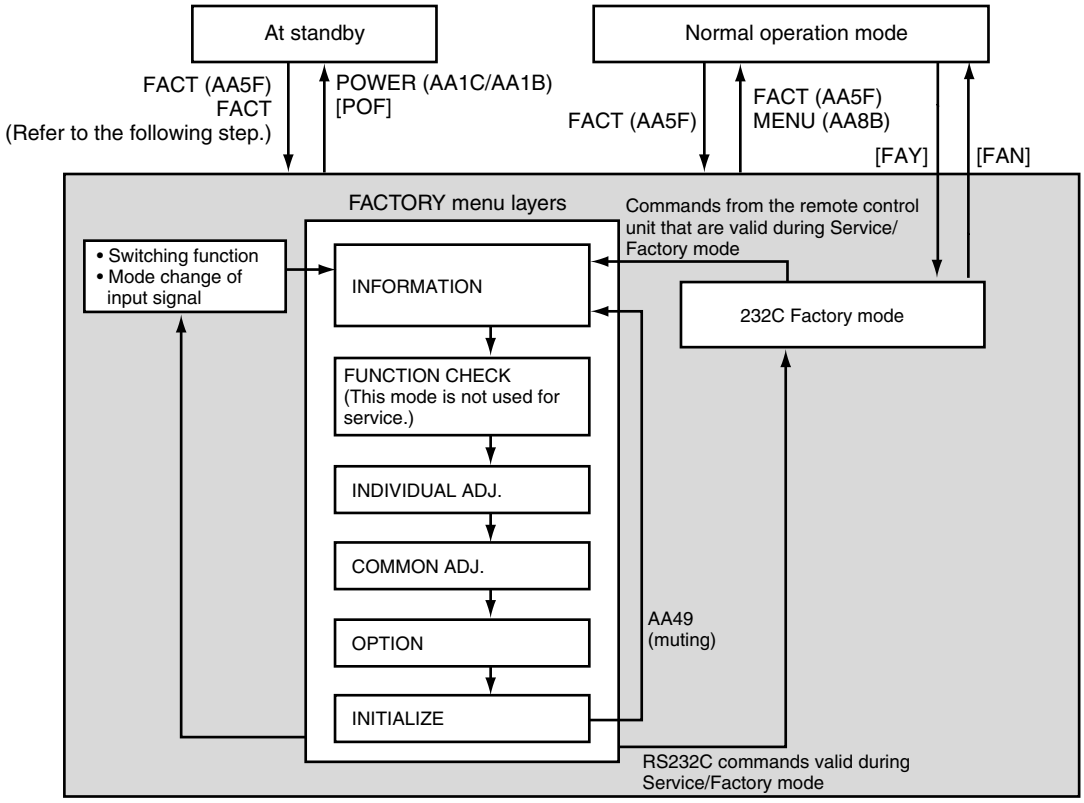

6.4 HOW TO ENTER FACTORY MODE

For adjustments, it is necessary to enter Service/Factory mode. There are two ways to enter Service/Factory mode: by using the remote control unit, or by using RS232C commands from your PC.

When the unit is in Standby (STB) Mode

• Please refer to the technical document (Service Knowhow)

When the power is on

No.	Method	Procedures
1	Remote control unit	When the conventional Service/Factory code (AA5F) is sent, the unit will enter Service/Factory mode.
2	PC	Connect your PC via its RS232C port, and send the FAY command.

■ Operation when Service/Factory mode is entered

● Functions whose settings are set to OFF

The settings of the following functions are set to OFF when Service/Factory mode is entered (including when this mode is entered by receiving the FAY command):

- SPLIT (The display will become that of the main input.) (for PDP-5004, PDP-4304 only)
- MASK CONTROL
- ORBITER

● User's setting data

User setting data are set as follows:

- Although user's adjustment data for video/audio adjustment and various adjustment are stored in memory, they are not reflected on the display.
- Although user's adjustment data for SCREEN are stored in memory, SCREEN adjustment data are reset to the default settings.
- Screen size and sound volume reflect user settings.
- The COLOR DECODING and SIGNAL FORMAT settings are reset to the default values.

■ Functions of the keys on the remote control unit in Service/Factory mode

SR Function	Main Function	Description
MUTING	Switching main items	For shifting to the next (top) main item
▼ (DOWN)	Switching subitems	For shifting to the next (downward) subitem
▲ (UP)	Switching subitems	For shifting to the previous (upward) subitem
◄ (LEFT)	Increasing adjustment value	For increasing adjustment value
► (RIGHT)	Decreasing adjustment value	For decreasing adjustment value
SET	Shifting layers	For shifting to lower or upper layer
INPUT ∗	Switching inputs	For switching the input to ∗
STANDBY/ON	POWER OFF	For turning off the power
FACTORY	Service/Factory OFF	For setting Service/Factory mode to OFF
MENU	Service/Factory OFF	For setting Service/Factory mode to OFF
SPLIT	Main screen/Sub screen change	MAIN ↔ SUB (for PDP-5004, PDP-4304 only)

Main-item indications

Four parameters are displayed:

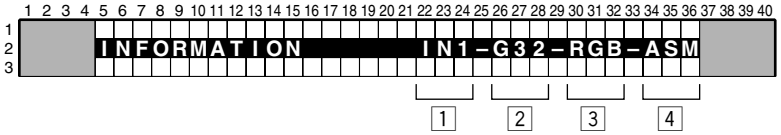

1 Input function

Input Functions	On-Screen Display
IN1 to IN5	IN1 to IN5

2 SIG mode and screen size

Note: See SIG-Mode Tables. (See next page.)

3 Color system and signal type

Color System and Signal Type		On-Screen Display
NTSC	Composite input/ S-connector input	NTV/NTS
BLACK/WHITE		BWV/BWS
Y/Cb/Cr, Y/Pb/Pr		CBR
RGB		RGB
Digital video signal		DIG

4 Option (Destination, etc.)

Options	On-Screen Display
PDP-5004 / PDP-4304	ASM
PDP-5014 / PDP-4314	ABM

● SIG-Mode Table

The signal mode is displayed in three characters:

First character: Resolution of the input signal (numerics for the video signals, and alphabetics for the PC signals)
Second character: Grouping of the vertical frequencies

2nd Character	Reference Vertical Frequency	Area	Remarks
–	–	– 20.0	No signal
B		20.0 to 28.0	
C		28.0 to 45.0	
1	50	45.0 to 54.5	
2	56	54.5 to 58.2	
3	60	58.2 to 63.0	
4	66	63.0 to 68.0	
5	70	68.0 to 73.4	
6	For interpolation of 72-Hz	73.4 to 73.9	For distinguishing between 70-Hz or 75-Hz area
7	75	73.9 to 80.0	
8	85	80.0 to 88.5	
?	–	91.5 –	Out of range

Third character: Selection of the screen size by the user is displayed.
(○: available, ×: not available)

3rd Character	Description on GUI	VIDEO	PC
0	DOT BY DOT	×	○
1	4 : 3	○	○
2	FULL	○	○
3	ZOOM	○	×
4	WIDE	○	×
6	CINEMA	○	×

● SIG-Mode Table

SIG-Mode table for video signals

SIG-Mode	Signal Type	Vertical Freq. fv (Hz)	Horizontal Freq. fh (kHz)	Dot Clock (MHz)	Remarks
13*	SDTV • 480i	60.000	15.734	13.5	
33*	SDTV • 480p	60.000	31.469	27.000	
43*	HDTV • 1080i	60.000	33.750	74.250	
63*	HDTV • 720p	60.000	45.000	74.250	

***: Represents the current screen-size selected.**

SIG-Mode table for PC signals

SIG-Mode	Signal Type	Vertical Freq. fv (Hz)	Horizontal Freq. fh (kHz)	Dot Clock (MHz)	Remarks
A2*	640 × 400	56.422	24.825	21.052	Former 720 × 400
A5*	720 × 400	70.087	31.469	28.322	Former 640 × 400
A8*	720 × 400	85.050	37.861	35.438	New
B1*	640 × 480	49.673	24.688	19.750	640 × 480 For rescan (48/50Hz)
B3*		59.940	31.469	25.175	
B4*		66.666	35.000	30.240	
B6*		72.809	37.861	31.500	
B7*		75.000	37.500	31.500	
B8*		85.000	43.300	36.000	
C1*	848 × 480	49.540	24.621	26.000	848 × 480 For rescan (48/50Hz)
C3*		60.000	31.020	33.750	
D2*	800 × 600	56.250	35.158	36.000	
D3*		60.317	37.879	40.000	
D6*		72.188	48.077	50.000	
D7*		75.000	46.875	49.500	
D8*		85.061	53.674	56.250	
E7*	832 × 624	74.550	49.725	57.283	
F1*	1024 × 768	48.003	38.690	52.000	1024 × 768 For rescan (48/50Hz)
F3*		60.004	48.363	65.000	
F5*		70.069	56.476	75.000	
F7*		75.029	60.023	78.750	
F8*		84.997	68.677	94.500	
G1*	1280 × 768	48.014	38.507	65.000	1280 × 768 For rescan (48/50Hz)
G2*		56.250	45.113	76.150	
G3*		59.870	47.776	79.500	
G5*		69.843	56.014	95.000	
O3*	1280 × 720	59.943	44.718	74.410	

*** : Represents the current screen-size selected.**

INFORMATION mode

Select the main item "INFORMATION" using the MUTE key then select the subitems shown in the table below using the ▲ or ▼ key.

● Operation items

No.	Function / Display	Content	232C Command
1	VERSION (1)	The flash memory versions for each device are displayed (1)	GS1
2	VERSION (2)	The type of video card inserted in the slot is displayed:	
3	SERIAL	For displaying the serial number of the product	GNP
4	PANEL PD	Power-down and its time of occurrence are displayed. The values can be cleared.	GPD
5	PANEL SD	Shutdown and its time of occurrence are displayed. The values can be cleared.	GNG
6	TEMPERATURE	Information on temperature is displayed.	GS2
7	HOUR METER	Cumulative power-on time is displayed. The value can be cleared.	GS2
8	PULSE METER	The pulse meter values at each block are displayed. The values can be cleared.	GPM
9	P ON COUNTER	The number of times the power was turned on is displayed. The value can be cleared.	GPC
10	DIGITAL EEPROM	The status of the backup data for the module microcomputer is displayed and updated.	GS2
11	HDMI SIGNAL INFO 1	The status-register data for the HDMI receiver are read out and displayed in hexadecimal notation.	_
12	HDMI SIGNAL INFO 2		

1. VERSION (1)

- **PDP-5004, PDP-5014**

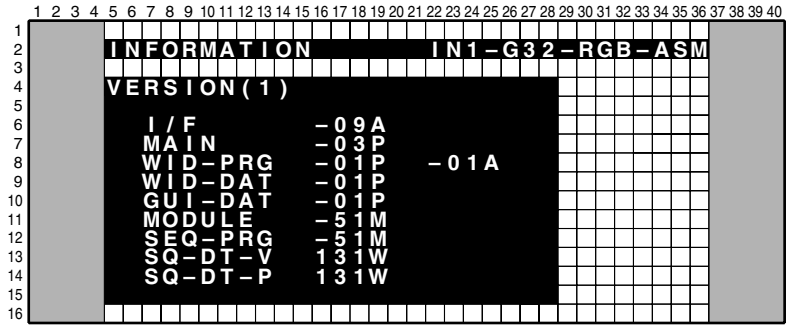

- **PDP-4304, PDP-4314**

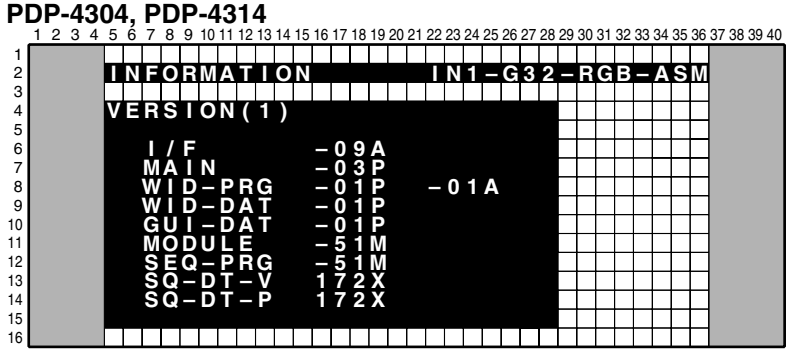

The flash memory versions for each device are displayed.

On-Screen Display	Flash memory of Device
I / F	User IF microcomputer
MAIN	Main microcomputer
WID–PRG	Program for IC3, Boot program for IC3
WID–DAT	Extension Engin data for IC3
GUI-DAT	GUI data for IC3

On-Screen Display	Flash memory of Device
MODULE	Module microcomputer
SEQ–PRG	Program for IC4
SQ–DT–V	Sequence data for IC4 (for VIDEO)
SQ–DT–P	Sequence data for IC4 (for PC)

Note : If the versions for MODULE and SEQ-PRG are -5*M, refer to this manual and PDP-5004 : ORDER NO. ARP3251 for servicing. If it is -0*M, refer to PDP-5004: (ORDER NO. ARP3221, ARP3222) for servicing.

2. VERSION (2)

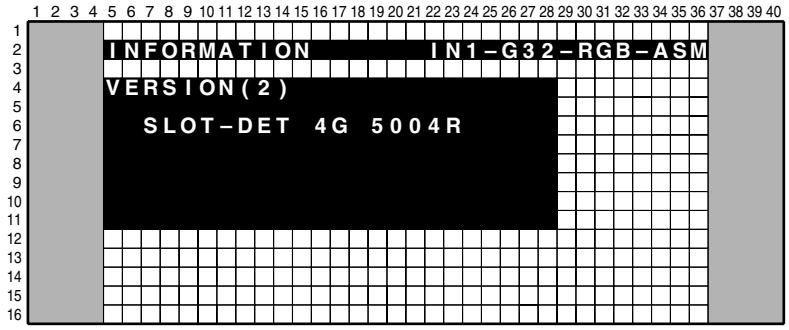

Whether or not the video card has been inserted:

Device	Name Indication	Type of VIDEO SLOT Assy	Remarks
SLOT-DET	SLOT-DET	(No indication)	No card inserted.
		4G 5004R	The video card has been inserted correctly.

3. SERIAL

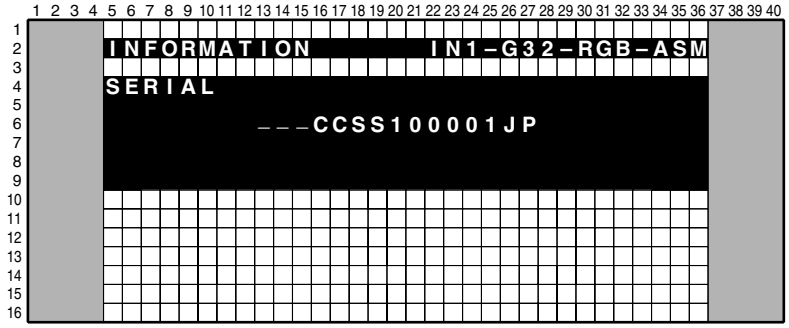

The serial number of the product is displayed.

Note : If the 8th digit from the left in the serial number (_ _ _ CCSS100001JP) is 1, refer to this manual and PDP-5004 : ORDER NO. ARP3251 for servicing. If it is 0, refer to PDP-5004 : (ORDER NO. ARP3221, ARP3222) for servicing.

4. PANEL PD

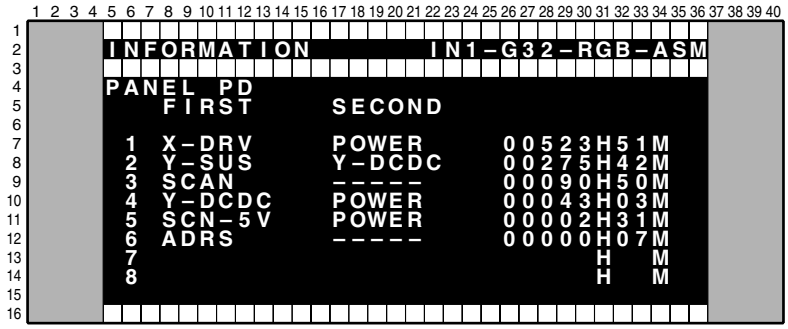

The log of the past eight power-downs is displayed. Power-down points (first and second) and the hour meter value when the power-down was generated are displayed, with the latest power-down data at the top.
The meanings of indications for power-down points are shown in the table below.

• Power-down information

Type of Power-down	On-Screen Display	Type of Power-down	On-Screen Display
No corresponding item	- - - - -	Power-down of the Y-SUS system	Y-SUS
Power-down of the main power supply system	POWER	Power-down of the address system	ADRS
Power-down of the scanning system	SCAN	Power-down of the X-DRIVE circuitry	X-DRV
Power-down in the path between the scanning system and 5-V power supply	SCN-5V	Power-down of the X-DC/DC converter	X-DCDC
Power-down of the Y-Drive system	Y-DRV	Power-down of the X-SUS system	X-SUS
Power-down of the Y-DC/DC converter	Y-DCDC	Power-down of the driving IC power supply system	D-DCDC
PD which cannot be specified	UNKNOWN	Drive stop PD	– – – –

*1: If an activated protection circuit could not be identified after the power-down, it is treated as an unidentifiable power-down (UNKNOWN).

5. PANEL SD

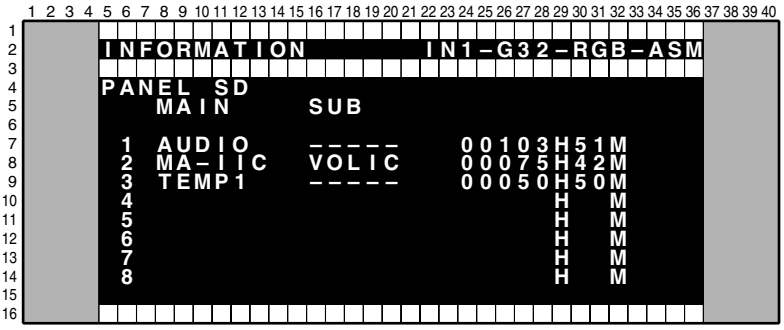

The log of the past eight shutdowns is displayed. Shutdown points and the hour meter value when the shutdown was generated are displayed, with the latest shutdown data at the top.
The meanings of indications for shutdown points are shown in the table below.

• Panel shutdown information

Type of Shutdown	On-Screen Display (MAIN)	Subcategory
Abnormality in IC4 communication	IC4	
Abnormality in module microcomputer IIC communication	MD-IIC	Exists.
DIGITAL-DCDC power decrease	RST2	
Abnormality in panel temperature	TEMP1	
Short-circuiting of the speakers	AUDIO	
Abnormality in module microcomputer communication	MODULE	
Abnormality in three-wire serial communication of the main microcomputer	MA-SRL	Exists.
Abnormality in main microcomputer IIC communication	MA-IIC	Exists.
Abnormality in main microcomputer communication	MAIN	
FAN stopped	FAN	
Abnormality in unit temperature	TEMP	Exists.
Abnormality in the ASIC power on the main microcomputer side	M-DCDC	
Other failures	ETC	Exists.

• Subcategory information

Type of Shutdown	Subcategory
MD-IIC	EEPROM4K, EROM2K
MA-SRL	IF microcomputer, IC2 (IC7004)(IC8702), IC3 (IC7101)
MA-IIC	MA-EEP (IC7205), IC1-V (IC6107), IC1-Y (IC6255), AD-M (IC6001), AD-S (IC6602), SL-EEP (IC6257), IC6/1 (IC5701), IC6/2 (IC5801), VOLIC (IC7603), HDMI 2 (IC6810)
TEMP	INSIDE/AIR (INSIDE = TEMP2/AIR =TEMP3)
ETC	VCC-D1, VCC-D2, VCC-D4 (IC6809)

6. TEMPERATURE

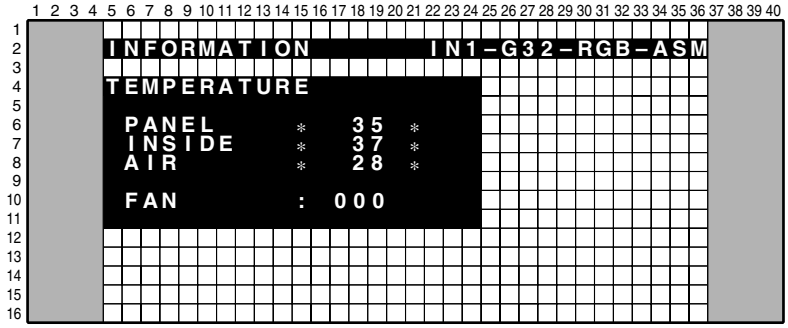

Data from each temperature sensor and the fan output value are displayed:

- Temperature sensors [°C]
  PANEL: Sensor temperature of a panel part (Reference value)
  INSIDE: Temperature inside the unit (Reference value)
  AIR: Ambient temperature around the unit (Reference value)
- Fan output: Fan output data

To update the temperature values or fan output data, use the [◄] or [►] key.

7. HOUR METER

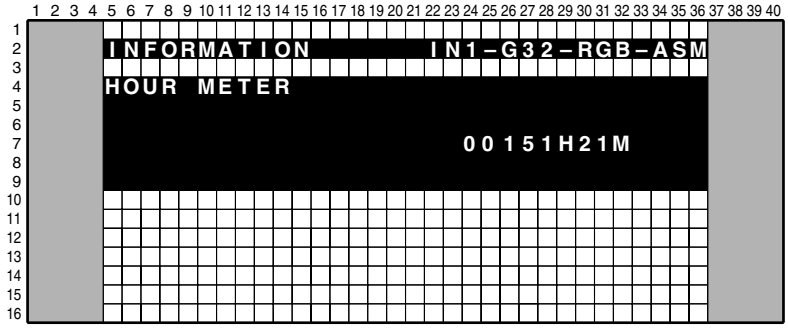

The cumulative power-on time is displayed.

8. PULSE METER

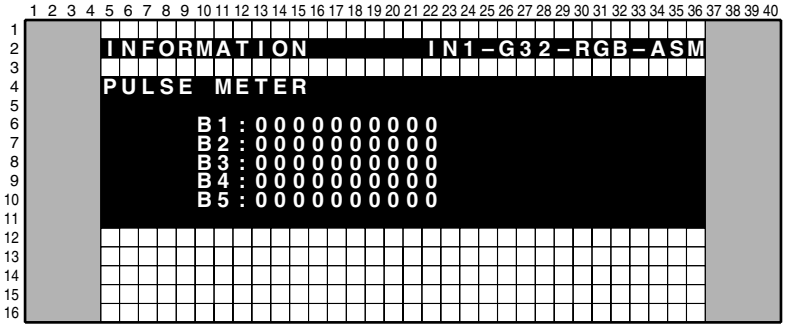

The cumulative number of pulses is displayed.

9. P ON COUNTER

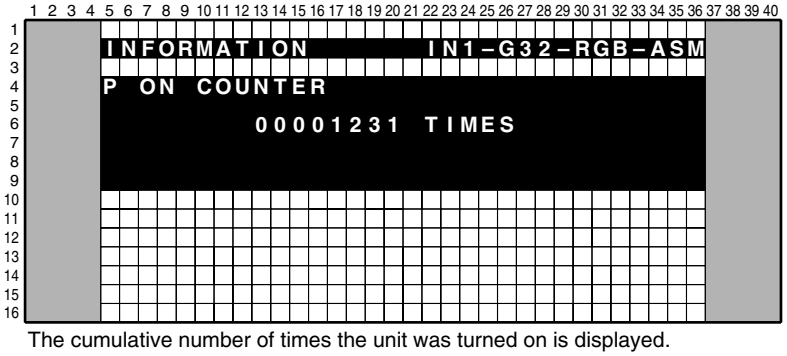

The cumulative number of times the unit was turned on is displayed.

10. BACKUP EEPROM

When the DIGITAL VIDEO Assy is to be replaced, the adjustment values in it are temporarily stored in the backup ROM then are written on the new Assy after replacement. (Refer to the "7.1.6 BACKUP THE ADJUSTMENT VALUES FOR THE MAIN UNIT".)

① Check if adjustment has been made on the DIGITAL VIDEO Assy or not (i.e., in the state of a new service part), and if the data on any adjustment values are retained in the backup ROM or not.

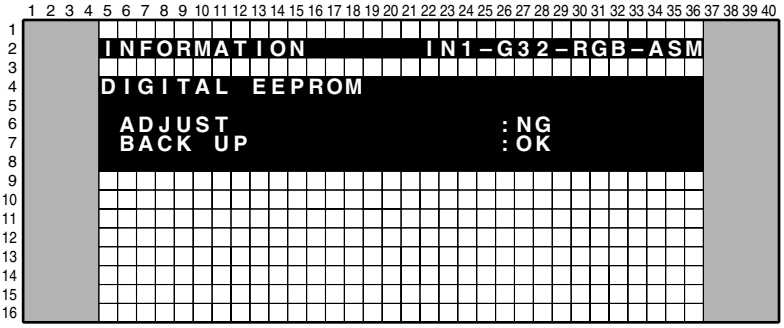

- ADJUST: OK (DIGITAL VIDEO Assy adjusted)
  NG (DIGITAL VIDEO Assy not adjusted)
- BACKUP: OK (Adjustment data retained in the backup ROM)
  NG (Adjustment data not retained in the backup ROM)

② Downloading the data for the DIGITAL VIDEO Assy from the backup ROM

- Press the SET key while display ① above is displayed, and the following display will appear.

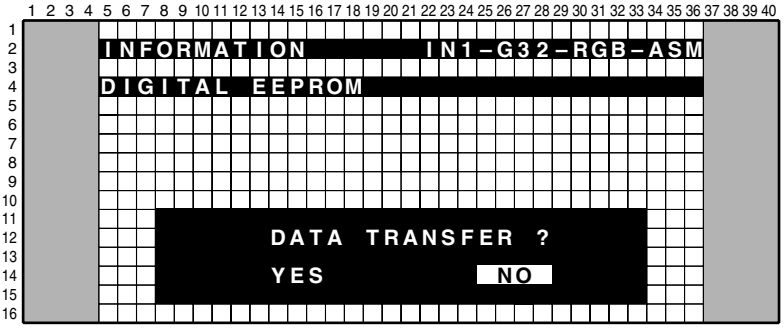

- Move the cursor to YES and press the SET key.
  The data in the backup ROM are copy to the DIGITAL VIDEO Assy.
  (When a new DIGITAL VIDEO Assy has been mounted, it now has the adjustment data suited for the panel.)
- Move the cursor to NO, and press the SET key.
  Copy of the data to the DIGITAL VIDEO Assy will not be executed.

③ Clearing the data in the ROM of the DIGITAL VIDEO Assy

- When YES or NO is selected while display ② above is displayed, the following display will appear.

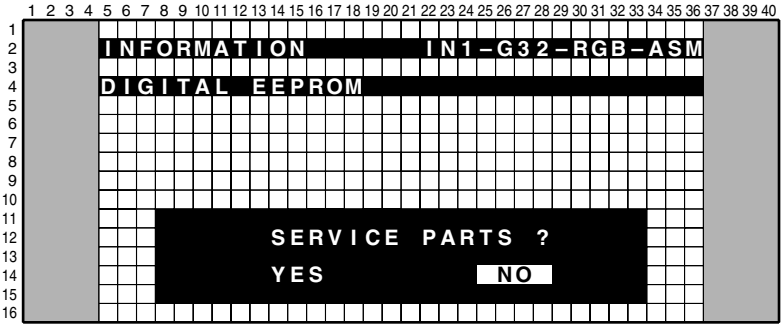

- Move the cursor to YES and press the SET key.
  The data in the ROM of the DIGITAL VIDEO Assy are cleared, and the Assy has no specific adjustment data.
- Move the cursor to NO and press the SET key. The data in the ROM of the DIGITAL VIDEO Assy are not cleared.
  When YES selected on display ② and the data were copy, select NO on this display.

Note: When YES or NO is selected on display ③ above, the display returns to that of ① above.

11. HDMI SIGNAL INFO 1

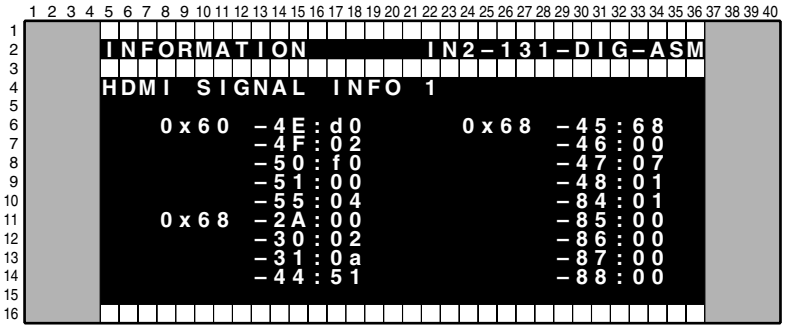

- The status-register data for the HDMI receiver are read out and displayed in hexadecimal notation.
- If an input function other than HDMI is selected, the indication for HDMI is grayed, and the parameter indication is "--".
- To update the status data, use the left/right keys.

12. HDMI SIGNAL INFO 2

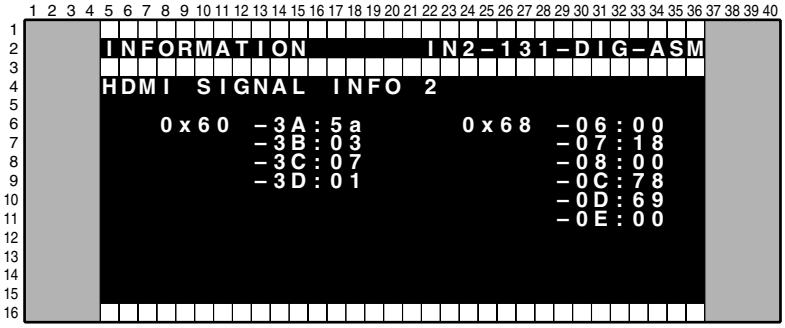

- The status-register data for the HDMI receiver are read out and displayed in hexadecimal notation.
- If an input function other than HDMI is selected, the indication for HDMI is grayed, and the parameter indication is "--".
- To update the status data, use the left/right keys.

Adjustment of corresponding route unevenness

Basically, only replacement of service parts is required, and adjustment is not required.

No.	Command	Adjustment Parameter Name in Factory	Function
1	VSG	CVY GAIN	IC1 MAIN GAIN adjustment (switching routes with the SWM [main] and SWS [sub] commands)
2	VSO	CVY OFFSET	IC1 MAIN OFFSET adjustment (switching routes with the SWM [main] and SWS [sub] commands)
3	RYG	RY GAIN	AD R GAIN adjustment (correction in differences between component- and RGB-system signals)
4	GYG	GY GAIN	AD G GAIN adjustment (correction in differences between component- and RGB-system signals)
5	BYG	BY GAIN	AD B GAIN adjustment (correction in differences between component- and RGB-system signals)
6	ADC	AD MAIN CONTRAST	AD MAIN RGB GAIN adjustment (for main screen)
7	MRG	AD MAIN R GAIN	AD MAIN R GAIN adjustment (for main screen)
8	MGG	AD MAIN G GAIN	AD MAIN G GAIN adjustment (for main screen)
9	MBG	AD MAIN B GAIN	AD MAIN B GAIN adjustment (for main screen)
10	MRO	AD MAIN R OFFSET	AD MAIN R OFFSET adjustment (for main screen)
11	MGO	AD MAIN G OFFSET	AD MAIN G OFFSET adjustment (for main screen)
12	MBO	AD MAIN B OFFSET	AD MAIN B OFFSET adjustment (for main screen)
13	SRG	AD SUB R GAIN	AD SUB R GAIN adjustment (for sub screen)
14	SGG	AD SUB G GAIN	AD SUB G GAIN adjustment (for sub screen)
15	SBG	AD SUB B GAIN	AD SUB B GAIN adjustment (for sub screen)
16	SRO	AD SUB R OFFSET	AD SUB R OFFSET adjustment (for sub screen)
17	SGO	AD SUB G OFFSET	AD SUB G OFFSET adjustment (for sub screen)
18	SBO	AD SUB B OFFSET	AD SUB B OFFSET adjustment (for sub screen)

Reference: Commands for adjustment of differences in signals and memory cells used for storing adjustment values

• Basically no adjustment is required for the Service Assy, as it is properly adjusted before shipment.

Adjustment values to be stored in the EEPROM of the AV I/O (INDIVIDUAL mode)

Adjustment values differ depending on the input function, input signal format, and main/sub screen.

Input and Signal Format	Commands for Adjustment	
	Route for the Main Screen	Route for the Sub Screen
INPUT1 (RGB)	RYG GYG BYG	RYG GYG BYG
INPUT1 (Color difference)	RYG GYG BYG	RYG GYG BYG

- Four adjustment tables are provided here, depending on the input function, input signal format, and main/sub screen.
- No adjustment is required for INPUT 2, which is of HDMI (digital video interface) standards.

Adjustment values to be stored in the EEPROM of the VIDEO SLOT 2 Assy

Adjustment values differ depending on the input function and main/sub screen.

Input and Signal Format	Commands for Adjustment	
	Route for the Main Screen	Route for the Sub Screen
INPUT3 (Y/C)	VSG VSO	RYG GYG BYG
INPUT4 (Comp. V)	VSG VSO	RYG GYG BYG
INPUT5 (RGB)	RYG GYG BYG	RYG GYG BYG
INPUT5 (Color difference)	RYG GYG BYG	RYG GYG BYG

- Eight adjustment tables are provided here, depending on the input function and main/sub screen.

Adjustment values to be stored in the EEPROM of the RGB (COMMON mode)

Adjustment values differ depending on the signal resolution, input signal format, and main/sub screen.

Note: No adjustment is required for HDMI input or signals converted to digital signals by IC1.

[Main adjustment 1]
Main A/D adjustments for R, G, and B individually (COMMON-RGB mode)

Input and Signal Format	Commands for Adjustment		Conditions for the Tables to be Switched
480i (RGB)	MRG MGG MBG	MRO MGO MBO	Video RGB signals
480i (Color difference)	MRG MGG MBG	MRO MGO MBO	Video color-difference signals
VGA (RGB)	MRG MGG MBG	MRO MGO MBO	PC signals (640x400 - 832x624)
XGA (RGB)	MRG MGG MBG	MRO MGO MBO	PC signals (1024x768 - 1280x768)

- To adjust the video signals, input corresponding signals to INPUT 5 to change the RGB/color-difference signal setting then perform adjustment.
- To adjust the PC signal, input a signal to INPUT 1. Make sure that the SIGNAL FORMAT setting is correctly made. Then adjust the signal.
- Four adjustment tables are provided here, depending on the signal resolution, input signal format, and main/sub screen.

[Sub adjustment 1]
Main A/D adjustments for R, G, and B individually (COMMON-RGB 1 mode)

Input and Signal Format	Commands for Adjustment		Conditions for the Tables to be Switched
RGB	SRG SGG SBG	SRO SGO SBO	All R, G, and B signals
Color difference	SRG SGG SBG	SRO SGO SBO	All color-difference signals

- For adjustment according to the above tables, input video signals to INPUT 5 to switch to the route for sub input and to change the RGB/color-difference signal setting then perform adjustment.
- Two adjustment tables are provided here, depending on the signal format.

[Main adjustment 2]
Main A/D adjustments for all R, G, and B simultaneously (COMMON-RGB 2 mode)

Input and Signal Format	Commands for Adjustment	Conditions for the Tables to be Switched
RGB	ADC	All R, G, and B signals
Color difference	ADC	All color-difference signals

- For adjustment according to the above tables, input video signals to INPUT 5 to switch to the route for main input and to change the RGB/color-difference signal setting then perform adjustment.
- A contrast gain commits this adjustment command simultaneously three colors.
- Two adjustment tables are provided here, depending on the signal format.

INDIVIDUAL ADJ. mode

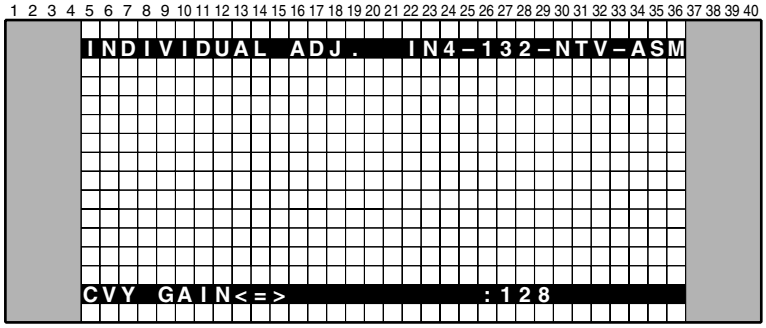

Each time the ▲ or ▼ key is pressed, the individual adjustment items are changed, as follows:

No.	Corresponding 232C Command	Function/Display	Content	Adjustable Range	Remarks
1	VSG	CVY GAIN<=> : ***	MICHAEL (IC6255) input GAIN adj.	064 to 191	Select a route with the command SWM (main) and the command SWS (sub).
2	VSO	CVY OFFSET<=> : ***	MICHAEL (IC6255) input OFFSET adj.	064 to 191	
3	RYG	RY GAIN<=> : ***	AD (IC6001 or IC6602) R input GAIN adj.	000 to 255	The memory tables for the RGB and component systems are separate, and are switchable with the command MCD.
4	GYG	GY GAIN<=> : ***	AD (IC6001 or IC6602) G input GAIN adj.	000 to 255	
5	BYG	BY GAIN<=> : ***	AD (IC6001 or IC6602) B input GAIN adj.	000 to 255	

"***" in the table above represents the adjustment value.
The value of each subitem can be changed using the ◄ or ► key.

Notes:

- The differences in signals for the main and sublevel screens from the AV I/O Assy are compensated, and the compensation data are stored in the EEPROM (IC8705) for each screen.
- No adjustment required normally.

COMMON ADJ. mode

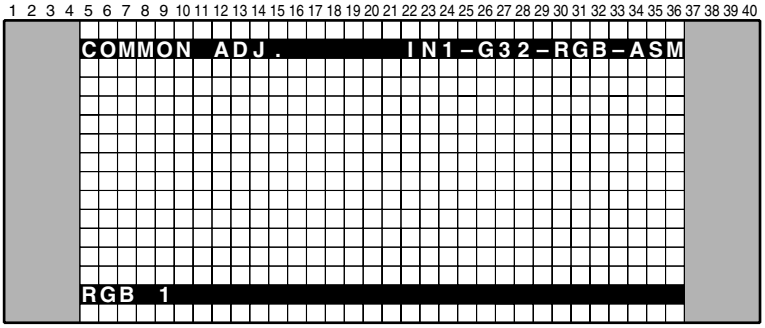

Each time the ▲ or ▼ key is pressed, the subitems are changed, as follows:

- RGB1(+) : Adjustment of the VIDEO SLOT 2 Assy and the RGB Assy
- RGB2(+) : Adjustment of the RGB Assy
- PANEL1(+) : Adjustment items related to the drive (common to the unit)
- PANEL2(+) : Adjustment items related to the drive (dependent on signals)

Each time the SET key is pressed, items grouped under the subitem are selected one by one.

FUNCTION CHECK mode

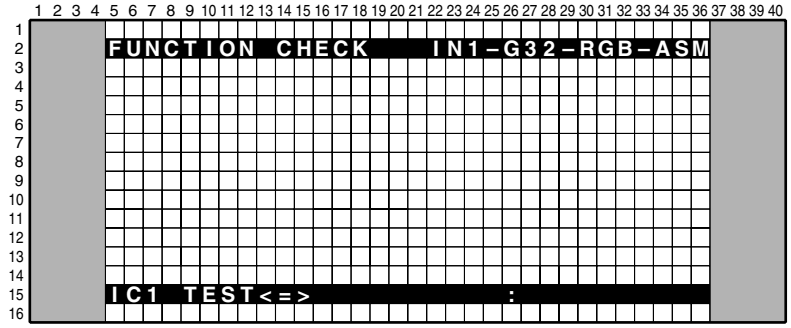

Each time the ▲ or ▼ key is pressed, the individual adjustment items are changed, as follows:

No.	Display	Function
1	IC1 TEST<=> :	(Not used)
2	IC2 TEST<=> :	(Not used)
3	IC3 TEST<=> :	(Not used)
4	IC4 TEST<=> :	(Not used)
5	FAN<=> :***	The rotation speed of the fan is forcibly switched. (*)

Note (*):
- The operation of the fan can be checked by setting FAN to MAX.
- Set to CNT normally.

1. COMMON-RGB1

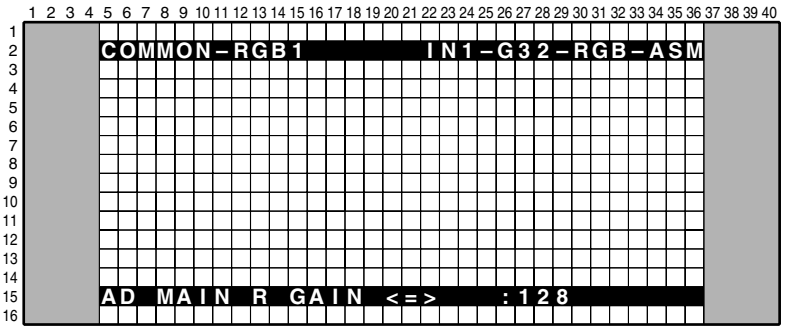

Each time the ▲ or ▼ key is pressed, the subitems are changed, as follows:

When the main input is selected

No.	Corresponding 232C Command	Function/Display	Content	Adjustable Range	Remarks
1	MRG	AD MAIN R GAIN <=> : ***	AD (IC6001) MAIN R GAIN adj. (for main screen)	000 to 255	
2	MGG	AD MAIN G GAIN <=> : ***	AD (IC6001) MAIN G GAIN adj. (for main screen)	000 to 255	
3	MBG	AD MAIN B GAIN <=> : ***	AD (IC6001) MAIN B GAIN adj. (for main screen)	000 to 255	
4	MRO	AD MAIN R OFFSET <=> : ***	AD (IC6001) MAIN R OFFSET adj. (for main screen)	000 to 255	
5	MGO	AD MAIN G OFFSET <=> : ***	AD (IC6001) MAIN G OFFSET adj. (for main screen)	000 to 255	
6	MBO	AD MAIN B OFFSET <=> : ***	AD (IC6001) MAIN B OFFSET adj. (for main screen)	000 to 255	

When the sub input is selected

No.	Corresponding 232C Command	Function/Display	Content	Adjustable Range	Remarks
1	SRG	AD SUB R GAIN <=> : ***	AD (IC6602) SUB R GAIN adj. (for sub screen)	000 to 255	
2	SGG	AD SUB G GAIN <=> : ***	AD (IC6602) SUB G GAIN adj. (for sub screen)	000 to 255	
3	SBG	AD SUB B GAIN <=> : ***	AD (IC6602) SUB B GAIN adj. (for sub screen)	000 to 255	
4	SRO	AD SUB R OFFSET <=> : ***	AD (IC6602) SUB R OFFSET adj. (for sub screen)	064 to 191	
5	SGO	AD SUB G OFFSET <=> : ***	AD (IC6602) SUB G OFFSET adj. (for sub screen)	064 to 191	
6	SBO	AD SUB B OFFSET <=> : ***	AD (IC6602) SUB B OFFSET adj. (for sub screen)	064 to 191	

"***" in the table above represents the adjustment value.
The value of each subitem can be changed using the ◄ or ► key.

Notes: • The differences in signals for the main and sublevel screens from the RGB Assy are compensated, and the compensation data are stored in the EEPROM (IC7205) for each screen.
• No adjustment required normally.

2. COMMON-RGB 2

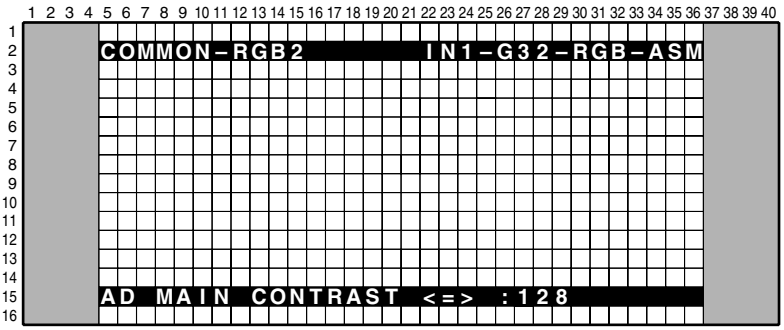

No.	Corresponding 232C Command	Function/Display	Content	Adjustable range	Remarks
1	ADC	AD MAIN CONTRAST<=> : ***	AD (IC6001) MAIN RGB GAIN adj. (for main screen)	000 to 255	

"***" in the table above represents the adjustment value.
The value of each subitem can be changed using the ◄ or ► key.

Note: No adjustment required normally.

3. COMMON-PANEL1

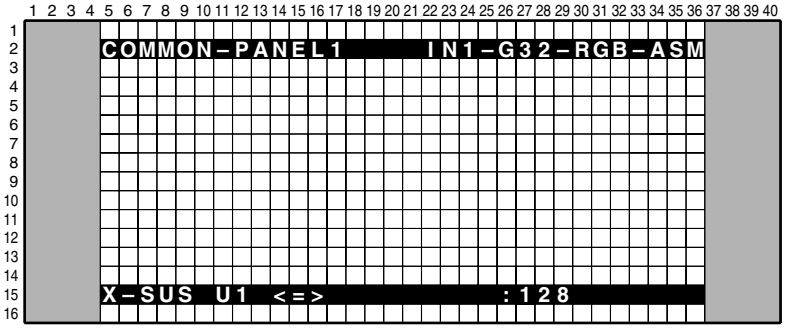

Each time the ▲ or ▼ key is pressed, the subitems are changed, as follows:

No.	Corresponding 232C Command	Function/Display	Content	Adjustable Range
1	XU1	X-SUS U1 <=> : ***	Adjustment of X-SUS leading edge pulse U1	124 to 132
2	XU2	X-SUS U2 <=> : ***	Adjustment of X-SUS leading edge pulse U2	124 to 132
3	XD1	X-SUS D1 <=> : ***	Adjustment of X-SUS trailing edge pulse D1	124 to 132
4	XD2	X-SUS D2 <=> : ***	Adjustment of X-SUS trailing edge pulse D2	124 to 132
5	YU1	Y-SUS U1 <=> : ***	Adjustment of Y-SUS leading edge pulse U1	124 to 132
6	YU2	Y-SUS U2 <=> : ***	Adjustment of Y-SUS leading edge pulse U2	124 to 132
7	YD1	Y-SUS D1 <=> : ***	Adjustment of Y-SUS trailing edge pulse D1	124 to 132
8	YD2	Y-SUS D2 <=> : ***	Adjustment of Y-SUS trailing edge pulse D2	124 to 132
9	YD3	Y-SUS D3 <=> : ***	Adjustment of X-SUS trailing edge pulse D3	124 to 132
10	YD4	Y-SUS D4 <=> : ***	Adjustment of X-SUS trailing edge pulse D4	124 to 132
11	VSU	VLT-SUS <=> : ***	SUS voltage adjustment	000 to 255
12	VOF	VLT-OFS <=> : ***	OFFSET voltage adjustment	000 to 255

"***" in the table above represents the adjustment value.
The value of each subitem can be changed using the ◄ or ► key.

Notes:

- Adjustments No. 1 to No. 10 above are not normally required, unless so instructed by Service Information, etc.
- Readjustment of values for No. 11 [VSU] and No. 12 [VOF] are required when the service panel is replaced.

4. COMMON-PANEL2

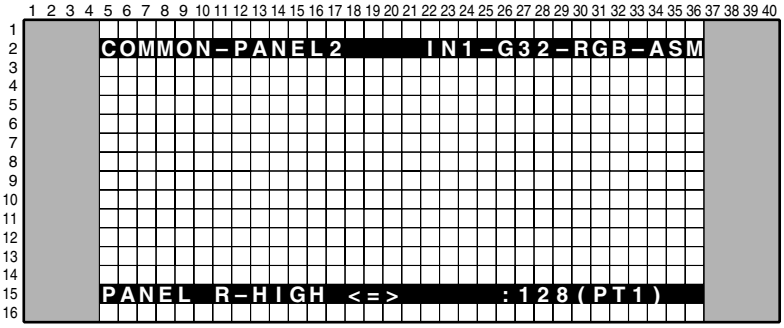

Each time the ▲ or ▼ key is pressed, the subitems are changed, as follows:

No.	Corresponding 232C Command	Function/Display	Content	Adjustable Range
1	PRH	PANEL R HIGH <=> : *** (PTO)	Panel W/B R-HIGH adjustment	000 to 511
2	PGH	PANEL G HIGH <=> : *** (PTO)	Panel W/B G-HIGH adjustment	000 to 511
3	PBH	PANEL B HIGH <=> : *** (PTO)	Panel W/B B-HIGH adjustment	000 to 511
4	PRL	PANEL R LOW <=> : *** (PTO)	Panel W/B R-LOW adjustment	000 to 999
5	PGL	PANEL G LOW <=> : *** (PTO)	Panel W/B G-LOW adjustment	000 to 999
6	PBL	PANEL B LOW <=> : *** (PTO)	Panel W/B B-LOW adjustment	000 to 999
7	ABL	ABL LEVEL <=> : *** (ABx)	Power consumption adjustment	000 to 999

"***" in the table above represents the adjustment value.
The value of each subitem can be changed using the ◄ or ► key.
White balance adjustment.(From No.1 to No.6). (Refer to 138 pages of the " [W/B-adjustment procedurs]")

Notes: Adjustments No. 7: [ABL] above are not normally required, unless so instructed by Service Information, etc.

"(PTO)" and "(ABx)" in the table above represent the following:

Note: No adjustment required normally.

Indication	Table
PT1	For PC and NTSC

Indication	Table
AB1	For 60Hz, 72Hz and 75Hz video
AB3	For PC

OPTION mode

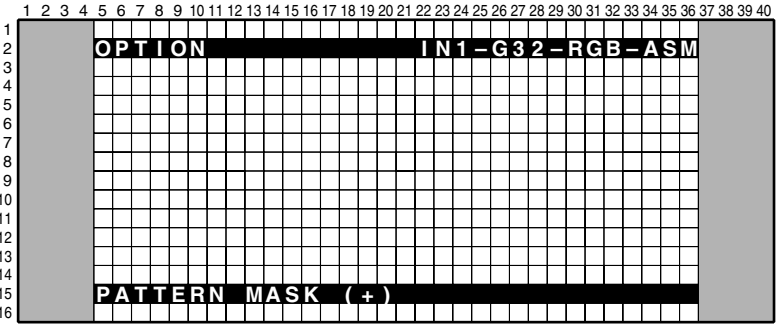

Select the main item "OPTION" using the MUTE key then select the subitems shown in the table below using the ▲ or ▼ key.

No.	Function/Display	Content	Remarks
1	PATTERN MASK (+)	For selecting Pattern mask of IC4	A lower layer exists.
2	FULL MASK (+)	For selecting raster mask of IC4	A lower layer exists.
3	DYNAMIC RANGE	ON ⇔ OFF	The last setting is not stored in memory (initial setting: ON).
4	EDID WRITE MODE	DISABLE ⇔ ENABLE	The last setting is not stored in memory (initial setting: DISABLE).

Note:

- For PATTERN MASK (+) and FULL MASK (+), press the SET key to switch to the lower layer.
- Adjustments No. 3 and 4 are not required for servicing.

1. PATTERN MASK
2. FULL MASK

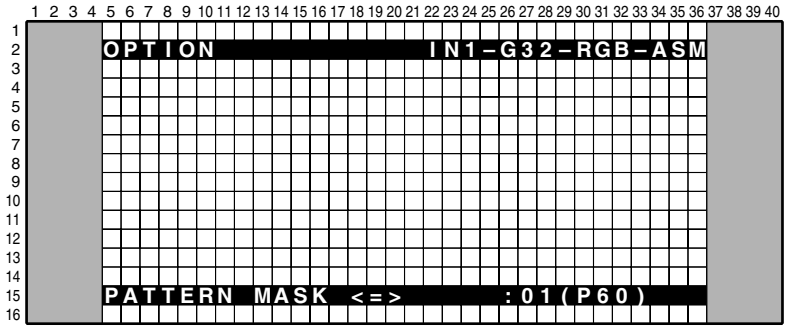

To select the mask frequency, use the ◄ or ► key.
To select the mask pattern, use the ▲ or ▼ key.

Mask Frequency

No.	Corresponding RS-232C Command	Function/ Display	Content
1	F48	V48	Video 48-Hz sequence
2	F50	V50	Video 50-Hz sequence
3	F60	V60 (initial value)	Video 60-Hz sequence
4	F61	P60	PC 60-Hz sequence
5	F70	P70	PC 70-Hz sequence
6	F72	V72	Video 72-Hz sequence
7	F75	V75	Video 75-Hz sequence

Pattern Mask

No.	Corresponding RS-232C Command	Function/ Display	Content
1	M00	OFF	Mask mode: OFF
2	M01	01	White 0 to 100%
3	M02	02	Aging mask
4	M03	03	Aging mask (detection of still picture: OFF)
5	M10	10	H RAMP1
6	M11	11	H RAMP2
7	M12	12	H RAMP3
8	M13	13	H RAMP4
9	M14	14	V RAMP
10	M15	15	H/V RAMP
11	M20	20	Window0
12	M21	21	Window1
13	M22	22	Window2
14	M23	23	Window3
15	M24	24	Window4
16	M25	25	Window5
17	M26	26	Window6
18	M27	27	Window7
19	M28	28	Window8
20	M29	29	Window9
21	M2E	2E	Wiper for erasing afterimage
22	M30	30	COLOR BAR
23	M31	31	Slanted lines

Full Mask

No.	Corresponding RS-232C Command	Function/ Display	Content
1	M00	OFF	Mask mode: OFF
2	M51	51	Raster – White
3	M52	52	Raster – Red
4	M53	53	Raster – Green
5	M54	54	Raster – Blue
6	M55	55	Raster – Black
7	M56	56	Raster – Cyan
8	M57	57	Raster – Mazenta
9	M58	58	Raster – Yellow
10	M59	59	Raster – Cyan 274
11	M60	60	Raster – 50 fresh color
12	M61	61	Raster – 50 purple
13	M62	62	Raster – 50 sky blue
14	M63	63	Raster – Red 779
15	M64	64	Raster – Cyan 218
16	M65	65	Raster – Cyan 448
17	M66	66	Raster – 43 fresh color
18	M67	67	Raster – Red 640
19	M68	68	Raster – Mazenta 98
20	M69	69	Raster – 43 sky blue 1
21	M70	70	Raster – 43 sky blue 2
22	M71	71	Raster – 43 purple
23	M72	72	Raster – Blue 960
24	M73	73	Raster – Yellow 512
25	M74	74	Raster – Gray 512

3. DYNAMIC RANGE

The setting can be changed using the ◄ or ► key.

No.	Corresponding RS-232C Command	Function/ Display	Content
1	DYY	ON	DYNAMIC RANGE correction: ON (initial setting)
2	DYN	OFF	DYNAMIC RANGE correction: OFF

4. EDID WRITE MODE

The setting can be changed using the ◄ or ► key.

No.	Corresponding RS-232C Command	Function/ Display	Content
1	EWN	DISABLE	Prohibiting writing EDID data (initial setting)
2	EWY	ENABLE	Enabling writing EDID data

INITIALIZE mode

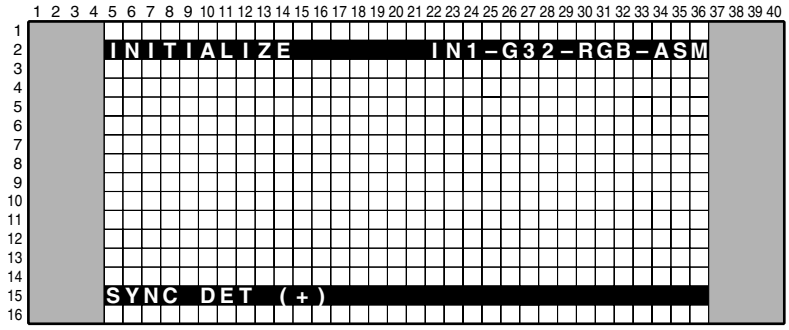

The subitems can be changed using the ▲ or ▼ key.

No.	Corresponding RS-232C Command	Function/Display	Content
1	–	SYNC DET (+) ∗1	Setting of the sync signal detection (correspond individually)
2	–	DRIVE MODE (+)	Setting of the luminescence pulse number of the lowest level (correspond individually)
3	–	SIDE MASK LEVEL (+)	Setting of the side mask color (correspond individually)
4	–	PANEL REVISE (+)	(Not used)
5	FST	FINAL SETUP	For initializing user's settings and some factory settings
6	–	C TEMP LOW (+)	For adjusting the user's C TEMP MODE item selected
7	–	C TEMP MID LOW (+)	
8	–	C TEMP MID (+)	
9	–	C TEMP MID HIGH (+)	
10	–	C TEMP HIGH (+)	
11	–	HDMI INTR POSITION (+)	(Not used)

Note: Any item followed by (+) has a lower layer to which you can switch using the SET key.

∗1: SYNC DET

Setting	Function	Details
STANDARD	Normal setting	The judgment of synchronization is automatically performed, followed by appropriate image processing.
NON-STD1	LD STILL detection OFF	If the LD STILL operation is performed during setting, the image on the screen is horizontally blurred.
NON-STD2	The judgment of synchronization is set to Nonstandard.	Not the 3-D Y/C processing but the 3-line Y/C processing is performed.

1. FINAL SETUP

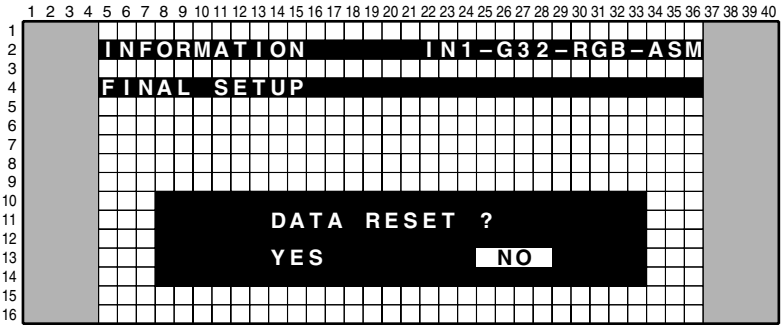

Select YES or NO using the ◄ or ► key then press the SET key for finalizing the selection:
YES : For executing FINAL SETUP
NO : For not executing FINAL SETUP

In FINAL SETUP, the following items can be initialized:

	Item (operation)	Factory setting	Remarks
Normal	Input function (main)	INPUT1	
	Input function (sub)	INPUT2	Only PDP-5004 and PDP-4304 are set.
	Screen size	VIDEO WIDE or FULL	The screen-size setting will be one of the factory-preset values, based on the results of signal-type detection (SIG-MODE).
		PC DOT BY DOT or FULL or 4:3	
	Volume	0	
	Multi screen	OFF	
	AV SELECTION	DYNAMIC (at VIDEO), STANDARD (at PC)	
Menu setting	PICTURE	Default setting for all adjustment items	For each input function
	SCREEN	Default setting for all adjustment items	For each input function
	SET UP	Default setting for all adjustment items	For each input function
	OPTION	Default setting for all adjustment items	For each input function
Factory	PATTERN MASK	OFF	
	FULL MASK	OFF	
	EDIT WRITE MODE	DISABLE	
	PEAK LIMITER	–	

2. C TEMP

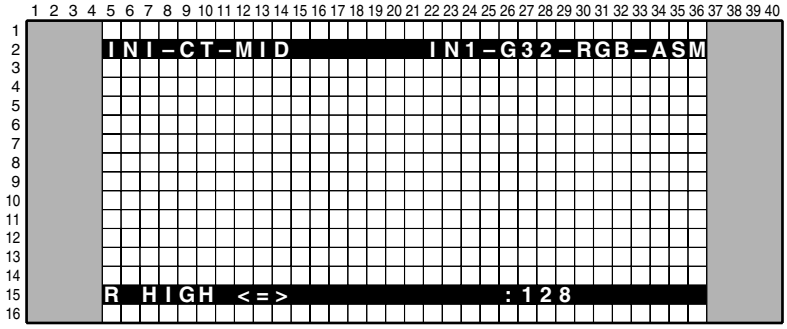

The indication on the 2nd line in the above display varies according to the subitem selected in the upper layer, as follows:
INIT-CT- ****
****: LOW/MID/HIGH

Notes: Adjustments are not normally required, unless so instructed by Service Information, etc.

Each time the ▲ or ▼ key is pressed, items grouped under the subitems are changed, as follows:

No.	Function/Display	Content
1	R HIGH <=>	For adjusting R highlight in the selected color temperature mode
2	G HIGH <=>	For adjusting G highlight in the selected color temperature mode
3	B HIGH <=>	For adjusting B highlight in the selected color temperature mode
4	R LOW <=>	For adjusting R lowlight in the selected color temperature mode
5	G LOW <=>	For adjusting G lowlight in the selected color temperature mode
6	B LOW <=>	For adjusting B lowlight in the selected color temperature mode

To change the value of each item, press the ◄ or ► key.

6.5 METHOD FOR REPLACING THE SERVICE PANEL ASSY

The following adjustments and operations are required when the Panel Assy is replaced for servicing.

■ Adjustments of the Vsus and Vofs voltages

Input the reference adjustment values that are described on the service panel for the Vsus and Vofs voltages, with the RS232C commands or on the Factory menu.

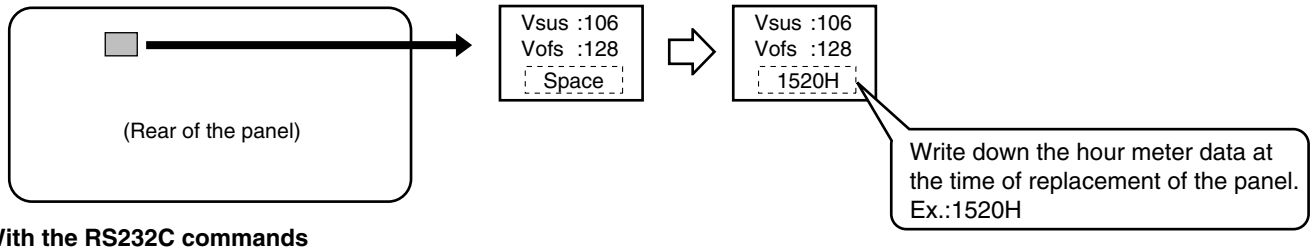

• With the RS232C commands

Input the adjustment values described on the label attached on the rear of the panel:

- Reference adjustment of the Vsus voltage : [VSU***] Ex. : [VSU106]
- Reference adjustment of the Vofs voltage : [VOF***] Ex. : [VOF128]

• On the Factory menu

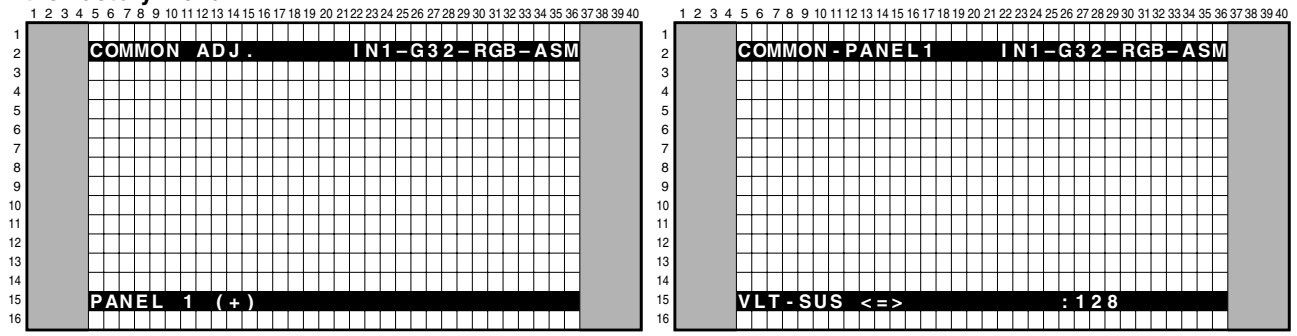

Using the MUTE key, select the main item "COMMON ADJ." Select the subitem "PANEL 1" then "VLT-SUS" or "VLT-OFS," using the ▲ or ▼ key and SET key. Enter the value, using the ◄ or ► key.

■ Clearing various logs for the panel, such as that for the hour meter

It is necessary to clear various logs, such as that for the hour meter, to match the driving hours of the panel before and after replacement. Write down the hour-meter data at the time of replacement of the panel on the label attached to the rear of the panel.

Notes: • For clearing, use the RS232C commands or the Factory menu.
• There are two hour meters. Be careful not to mistake the MR hour meter for the hour meter for the panel.

• With the RS232C commands

You can obtain the accumulated power-on time data of the product itself with the "GS2" RS232C command. (See "6.3 COMMANDS: Command description".)

1 For clearing the hour meter (for the panel) : CHM
2 For clearing the pulse meter : CPM
3 For clearing the shutdown (SD) log : CNG
4 For clearing the power-down (PD) log : CPD

• On the Factory menu

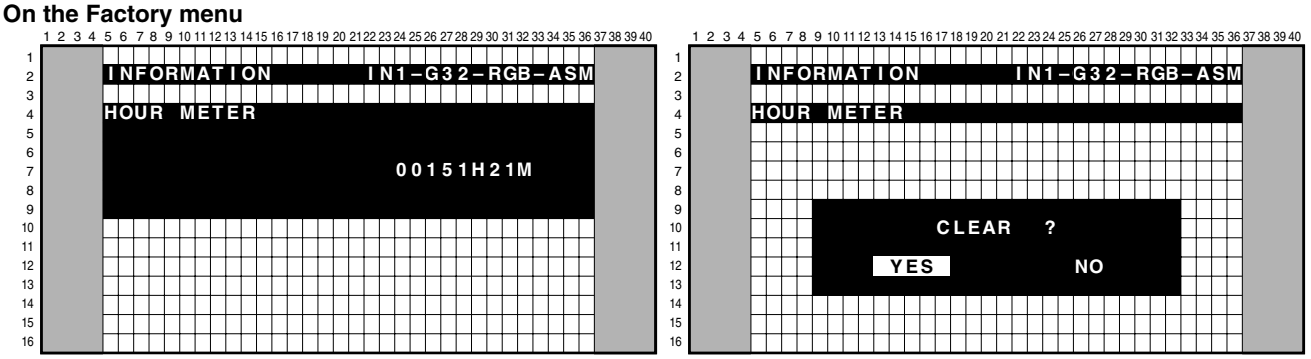

Using the MUTE key, select the main item "INFORMATION." Select the subitem "HOUR METER," using the ▲ or ▼ key and SET key. Clear the hour-meter data.
In the same way, select the subitem "PULSE METER," "PANEL SD," or "PANEL PD" under the main item "INFORMATION" then clear the data.

6.6 COMMAND DESCRIPTION

About GET Command

Operation description of GET command

Conditions under which GET commands are enabled

Most of the GET commands are enabled at any time, regardless of unit's being on/off or in Factory or Normal mode. However, some GET commands must be issued while the power is on to acquire correct data.

GDI: GET STATUS

Data						Size
		PDP-5004	PDP-4304	PDP-5014	PDP-4314	
1	Resolution	[5]: 1280*768	[4]: 1024*768	[5]: 1280*768	[4]: 1024*768	1 Byte
2	Age type	[4]: 2004 year				1 Byte
3	Destination	[A]: America				1 Byte
4	Grade	[S]: Step up		[B]: Basic		1 Byte
5	Configuration	[M]: Monitor				1 Byte
6	Dummy	[2]				1 Byte
7	Spare	[* *]				2 Byte

GS1: Returning information on the model and the version of the software

Order	Data	Size
1	Data on the display	3 byte
2	Version of the module microcomputer	4 byte
3	Version of the IC4-MANTA	4 byte
4	Sequence version (43VIDEO)	4 byte
5	Sequence version (43PC)	4 byte
6	Sequence version (50VIDEO)	4 byte
7	Sequence version (50PC)	4 byte
8	Version of the IF microcomputer	4 byte
9	Version of the main microcomputer	4 byte
10	Version of the IC3-MANTA	4 byte
11	Version of the OSD	4 byte
12	Dummy	12 byte

Breakdown of the data on the display

Data	Model
MX5	PDP-5004 / PDP-5014
MX4	PDP-4304 / PDP-4314

GPW: RGB-level-related adjustment values of the panel system

Order	Data	Size
1	Panel W/B table currently used	3 byte
2	Main contrast	4 byte
3	Red high light of the W/B adjustment value	4 byte
4	Green high light of the W/B adjustment value	4 byte
5	Blue high light of the W/B adjustment value	4 byte
6	Main brightness	4 byte
7	Red low light of the W/B adjustment value	4 byte
8	Green low light of the W/B adjustment value	4 byte
9	Blue low light of the W/B adjustment value	4 byte

• Details on "Panel W/B table"

Data	Table
PT1	WB table for NTSC

GPD: Power-down information

Order	Data	Size	Order	Data	Size
1	Latest "1st PD" data	1 byte	17	Fifth latest “1st PD” data	1 byte
2	Latest "2nd PD" data	1 byte	18	Fifth latest “2nd PD” data	1 byte
3	Data of hour meter for the latest PD	7 byte	19	Data of hour meter for the fifth latest PD	7 byte
4	Data on temperature for the latest PD (TEMP1)	3 byte	20	Data on temperature for the fifth latest PD (TEMP1)	3 byte
5	Second latest “1st PD” data	1 byte	21	Sixth latest “1st PD” data	1 byte
6	Second latest “2nd PD” data	1 byte	22	Sixth latest “2nd PD” data	1 byte
7	Data of hour meter for the second latest PD	7 byte	23	Data of hour meter for the sixth latest PD	7 byte
8	Data on temperature for the second latest PD (TEMP1)	3 byte	24	Data on temperature for the sixth latest PD (TEMP1)	3 byte
9	Third latest “1st PD” data	1 byte	25	Seventh latest “1st PD” data	1 byte
10	Third latest “2nd PD” data	1 byte	26	Seventh latest “2nd PD” data	1 byte
11	Data of hour meter for the third latest PD	7 byte	27	Data of hour meter for the seventh latest PD	7 byte
12	Data on temperature for the third latest PD (TEMP1)	3 byte	28	Data on temperature for the seventh latest PD (TEMP1)	3 byte
13	Fourth latest “1st PD” data	1 byte	29	Eighth latest “1st PD” data	1 byte
14	Fourth latest “2nd PD” data	1 byte	30	Eighth latest “2nd PD” data	1 byte
15	Data of hour meter for the fourth latest PD	7 byte	31	Data of hour meter for the eighth latest PD	7 byte
16	Data on temperature for the fourth latest PD (TEMP1)	3 byte	32	Data on temperature for the eighth latest PD (TEMP1)	3 byte

Hour meter data; 1 to 5 byte: time, 6 to 7 byte: minute

• Details on "1st/2nd PD" data

Data	Power-down Point
0	No power-down
1	Not used (for MR-POWER)
2	P-POWER
3	SCAN
4	SCN-5V
5	Y-DRIVE
6	Y-DCDC
7	Y-SUS
8	ADRS
9	X-DRIVE
A	X-DCDC
B	X-SUS
C	DIG-DCDC
D	Drive processing IC (IC4)
E	Spare
F	Power-down point not identified

GNG: Shutdown information

Order	Data	Size	Order	Data	Size
1	Latest SD data	1 byte	17	Fifth latest SD data	1 byte
2	Data of subcategory for the latest SD	1 byte	18	Data of subcategory for the fifth latest SD	1 byte
3	Data of hour meter for the latest SD	7 byte	19	Data of hour meter for the fifth latest SD	7 byte
4	Data on temperature for the latest SD	3 byte	20	Data on temperature for the fifth latest SD	3 byte
5	Second latest SD data	1 byte	21	Sixth latest SD data	1 byte
6	Data of subcategory for the second latest SD	1 byte	22	Data of subcategory for the sixth latest SD	1 byte
7	Data of hour meter for the second latest SD	7 byte	23	Data of hour meter for the sixth latest SD	7 byte
8	Data on temperature for the second latest SD	3 byte	24	Data on temperature for the sixth latest SD	3 byte
9	Third latest SD data	1 byte	25	Seventh latest SD data	1 byte
10	Data of subcategory for the third latest SD	1 byte	26	Data of subcategory for the seventh latest SD	1 byte
11	Data of hour meter for the third latest SD	7 byte	27	Data of hour meter for the seventh latest SD	7 byte
12	Data on temperature for the third latest SD	3 byte	28	Data on temperature for the seventh latest SD	3 byte
13	Fourth latest SD data	1 byte	29	Eighth latest SD data	1 byte
14	Data of subcategory for the fourth latest SD	1 byte	30	Data of subcategory for the eighth latest SD	1 byte
15	Data of hour meter for the fourth latest SD	7 byte	31	Data of hour meter for the eighth latest SD	7 byte
16	Data on temperature for the fourth latest SD	3 byte	32	Data on temperature for the eighth latest SD	3 byte

Hour meter data; 1 to 5 byte: time, 6 to 7 byte: minute

• Details on the SD data

Data	Cause of Shutdown
0	No abnormality
1	IC4
2	Module microcomputer IIC
3	Abnormality in DIG-RST2 (power decrease of ASIC)
4	Panel having abnormally high temperature
5	Audio failure (short-circuiting of the speakers)
6	Communication failure of the module microcomputer
7	Three-wire serial communication failure of the main microcomputer
8	IIC communication failure of the main microcomputer
9	Communication failure of the main microcomputer
A	Fan stopped
B	Temperature abnormality
D	Abnormality in MAIN-RST2
F	Others

• Data on the subcategories for the module microcomputer IIC

Data	Cause of Shutdown
0	No subcategory
1	EEPROM (4k)
2	EEPROM (2k)

• Data on the subcategories for failure in 3-wire serial communication of the main microcomputer

Data	Cause of Shutdown
0	No subcategory
1	Communication failure of the IF microcomputer
2	IC2 communication failure
3	IC3 communication failure

• Data on the subcategories for failure in IIC communication of the main microcomputer

Data	Cause of Shutdown
0	No subcategory
1	EEPROM (128k) (IC7205)
2	Not used
3	IC1 V (IC6107)
4	IC1 Y (IC6255)
5	AD-PLL main (IC6001)
6	AD-PLL sub (IC6002)
7	IC6/1 (IC5701)
8	Not used
9	HDMI 2 (IC6810)
A	Not used
B	Not used
C	Not used
D	Not used
E	Not used
F	EEPROM (SLOT)
G	Not used
H	Not used
N	IC6/2 (IC5801)

• Subcategory data on abnormal temperature

Data	Cause of Shutdown
2	Temperature inside the unit (INSIDE)
3	Ambient temperature (AIR)

• Subcategory data on other failures

Data	Cause of Shutdown
2	Power monitor 1 (VCC-D1)
3	Power monitor 1 (VCC-D2)
5	Power monitor 1 (VCC-D4) (IC6809)

GS2: Status information

Order	Data	Size	Remarks
1	Notifying of switching to Standby mode	1 byte	1: Successfully switched to Standby mode
2	Whether the unit has already been adjusted or not	1 byte	0: Adjusted, 1: Not adjusted
3	With/without backup of adjustment data	1 byte	0: With backup, 1: Without backup
4	Power-down information	2 byte	1st byte: 1st PD, 2nd byte: 2nd PD
5	Temperature information (TEMP1)	3 byte	000 to 255
6	Abnormality in RST2 (power decrease of the DC-DC converter)	1 byte	0: Normal, 1: Shutdown process caused by an abnormality completed, 2: In the process of displaying a warning against shutdown caused by an abnormality
7	IC4 communication failure	1 byte	
8	EEPROM communication failure	1 byte	
9	Failure in audio	1 byte	
10	Communication failure of the volume IC	1 byte	
11	Backup-ROM communication failure	1 byte	
12	Failure in temperature information (TEMP1)	1 byte	
13	Activation of panel protection	1 byte	0: Panel protection not activated, 1: Panel protection being activated
14	(Reservation)	2 byte	* *
15	Accumulated hour meter data cleared (Note 1)	7 byte	1-5 bytes: Hours, 6-7 bytes: Minutes
16	Hour meter data (clearable) (Note 2)	7 byte	1-5 bytes: Hours, 6-7 bytes: Minutes

* Ignore the 2-byte checksum at the end.

* Data to be used for servicing may be item 5 (temperature data) and 15 and 16 (hour meter data).

Note 1 : The data are updated each time the hour meter data are cleared. The total value of data items 15 and 16 indicates accumulated power-on time after shipment. Data item 15 cannot be cleared with a command.

Note 2 : The hour meter data indicated on the Factory menu are displayed. The data represent accumulated power-on time of the panel after the last clearance of hour meter data. At shipment, the data are reset to 0.

• Power-down information

Data	Power-down point
0	No power-down
1	Not used
2	P-POWER
3	SCAN
4	SCN-5V
5	Y-DRIVE
6	Y-DCDC
7	Y-SUS
8	ADRS
9	X-DRIVE
A	X-DCDC
B	X-SUS
C	DIG-DCDC
D	Drive processing IC (IC4)
E	Reservation
F	Power-down point not identified

GPM: Value of the pulse meter

Order	Data	Size
1	Pulse meter (Block area 1)	10 byte
2	Pulse meter (Block area 2)	10 byte
3	Pulse meter (Block area 3)	10 byte
4	Pulse meter (Block area 4)	10 byte
5	Pulse meter (Block area 5)	10 byte

Note:
The number of electric discharges at each block is displayed. The first digit represents the number of tens of thousands.

[Location of the block areas from which values from the pulse meter are obtained]

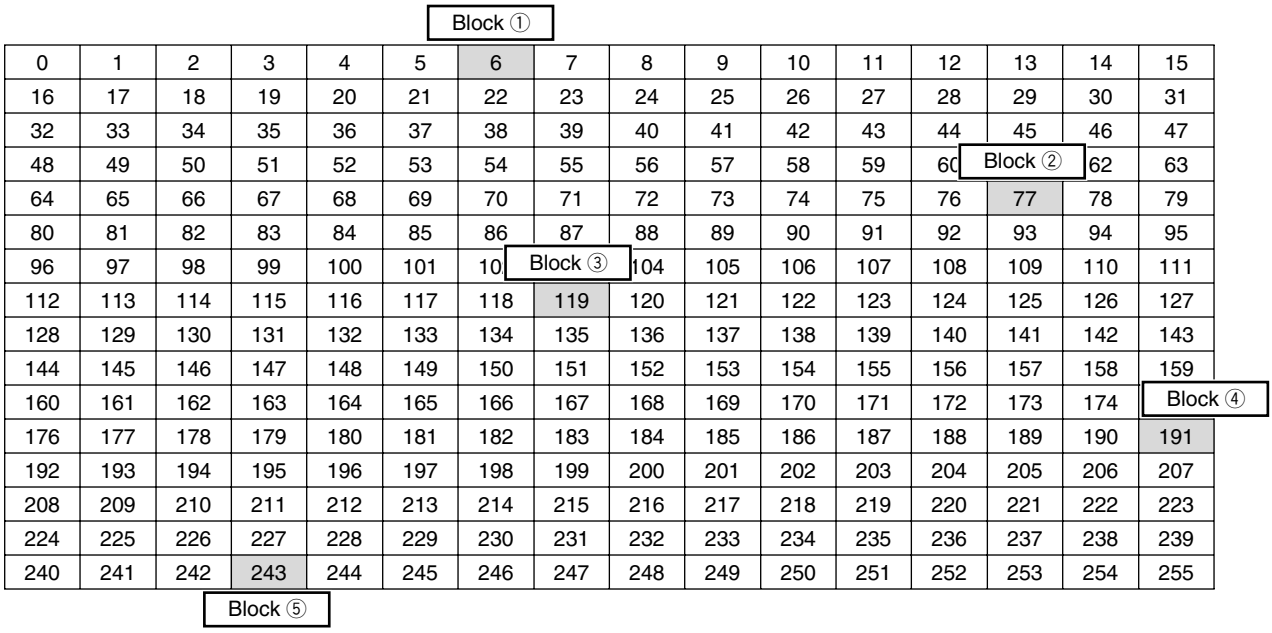

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79
80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95
96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111
112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191
192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255

GPC: Number of times the power was turned on

Order	Data	Size
1	Power-on counter	8 byte

GAJ: Drive-related adjustment values

Order	Data	Size
1	ABL table currently used	3 byte
2	Upper limit of the power	3 byte
3	Vsus adjustment value	3 byte
4	Vofs adjustment value	3 byte
5	X-SUS-U1 adjustment value (XU1)	3 byte
6	X-SUS-U2 adjustment value (XU2)	3 byte
7	X-SUS-D2 adjustment value (XD2)	3 byte
8	X-SUS-D1 adjustment value (XD1)	3 byte
9	Y-SUS-U1 adjustment value (YU1)	3 byte
10	Y-SUS-U2 adjustment value (YU2)	3 byte
11	Y-SUS-D1-2 adjustment value (YD2)	3 byte
12	Y-SUS-D1-1 adjustment value (YD1)	3 byte
13	Y-SUS-D2-2 adjustment value (YD4)	3 byte
14	Y-SUS-D2-1 adjustment value (YD3)	3 byte

• Details on "ABL table"

Data	Table
AB1	ABL table for 60Hz,72Hz and 75Hz video
AB3	ABL table for PC

LIST OF RS-232C COMMAND

Command		Operation	Validity of Direct Numeric Input	Lower limit	Upper limit
[A]			❍	000	255
ABL		Adjusting power consumption			
ADC		AD MAIN CONTRAST adjustment			
AMT	S00	Cancelling the audio mute			
AMT	S01	Executing the audio mute			
AST		Executing the auto setup			
[B]					
BCP		Transmitting the backup data to the DIGITAL VIDEO Assy			
BSL		Adjusting the side mask B	❍	000	255
BYG		Adjusting the BY GAIN	❍	000	255
[C]					
CHM		Clearing the hour meter			
CNG		Clearing the MR NG information			
CPC		Clearing the power-on counter			
CPD		Clearing the power-down information			
CPM		Clearing the pulse meter			
CTM		Clearing the remodeling log			
[D]					
DRF		Turning off the power for the drive system			
DRN		Turning on the power for the drive system			
DW0		Decresing the adjustment value by 10			
DWn		Decreasing the adjustment value by n			
DWF		Minimizing the adjustment value			
DYR	S00	D-range correction NO			
DYR	S01	D-range correction YES			
[E]					
EDW	S00	Prohibiting the writing of EDID data			
EDW	S01	Permitting the writing of EDID data			
[F]					
F48		Video 48-Hz sequence			
F50		Video 50-Hz sequence			
F60		Video 60-Hz sequence			
F61		PC 60-Hz sequence			
F70		PC 70-Hz sequence			
F72		Video 72-Hz sequence			
F75		Video 75-Hz sequence			
FAJ		Determining the main unit adjustment			
FAN		Turning the Service Factory mode off			
FAY		Turning the Service Factory mode on			
FCA		Turning the fan roll control to auto			
FCM		Maximizing the fan roll control			
FST		Executing the FINAL SETUP			
[G]					
GAJ		Obtaining the adjustment values for the panel			
GAS		Obtaining the IC4 status			
GDI		Command for obtaining the command			
GMM		Switching the gamma	❍	000	007
GNG		Obtaining the shut down (NG) information			
GNP		Obtaining the serial number of the panel			
GPC		Obtaining the value of P ON COUNTER			

Command		Operation	Validity of Direct Numeric Input	Lower limit	Upper limit
GPD		Obtaining the power-down information			
GPM		Obtaining the PULSE METER data			
GPP		Obtaining the PD polling log for module			
GPW		Obtaining the PANEL W/B data			
GS1		Obtaining the version data for each device			
GS2		Obtaining the each operating information			
GSL		Adjusting the side mask GREEN	○	000	255
GYG		Adjusting the GY GAIN	○	000	255
[I]					
INP		Indicating the input function of current main screen			
INP	S01	Switching the main screen to Input 1			
INP	S02	Switching the main screen to Input 2			
INP	S03	Switching the main screen to Input 3			
INP	S04	Switching the main screen to Input 4			
INP	S05	Switching the main screen to Input 5			
[M]					
MSK	S00	Mask mode: OFF			
MSK	S01	White: 0 to 100%			
MSK	S02	Aging mask (detection of still picture: OFF)			
MSK	S03	Aging mask			
MSK	S04	Aging mask (detection of still picture: OFF)			
MSK	S10	RAMP slant 1			
MSK	S11	RAMP slant 4			
MSK	S12	RAMP slant 1 shifting			
MSK	S13	RAMP slant 4 shifting			
MSK	S14	V RAMP			
MSK	S15	H/V RAMP			
MSK	S20	Window (for W/B adjustment High: 870, Low: 102)			
MSK	S21	Window (for W/B adjustment High: 1023, Low: 102)			
MSK	S22	Window (for the peak luminance measurement of WB stage High: 1023)			
MSK	S23	Window (for the peak luminance measurement High: 1023 4%)			
MSK	S24	Window (for the peak luminance measurement High: 1023 1.25%)			
MSK	S25	Window-1/7 vertical window (for stress measurement)			
MSK	S26	Window (magenta, green, stripe for checker)			
MSK	S27	Window (green, magenta, stripe for checker)			
MSK	S28	Window (black & white [1 x 8], checkered pattern [for EMG check])			
MSK	S29	Window (for W/B adjustment, magenta=512, yellow=512)			
MSK	S40	Wiper to prevent phosphor burn			
MSK	S30	Color Bar			
MSK	S31	Slanted lines (breaking of wire check)			
MSK	S51	Raster-white			
MSK	S52	Raster-red			
MSK	S53	Raster-green			
MSK	S54	Raster-blue			
MSK	S55	Raster-black			
MSK	S56	Raster-cyan			
MSK	S57	Raster-magenta			
MSK	S58	Raster-yellow			
MSK	S59	Raster-cyan 274			

Command		Operation	Validity of Direct Numeric Input	Lower limit	Upper limit
MSK	S60	Raster-50 flesh color			
MSK	S61	Raster-50 light purple			
MSK	S62	Raster-50 sky blue			
MSK	S63	Raster-red 779			
MSK	S64	Raster-cyan 218			
MSK	S65	Raster-cyan 448			
MSK	S66	Raster-43 flesh color			
MSK	S67	Raster-red 640			
MSK	S68	Raster-magenta 98			
MSK	S69	Raster-43 sky blue 1			
MSK	S70	Raster-43 sky blue 2			
MSK	S71	Raster-43 light purple			
MSK	S72	Raster-blue 960			
MSK	S73	Raster-gray 511 (spare)			
MSK	S74	Raster-gray 511 (spare)			
MBG		AD MAIN B GAIN	○	000	255
MBO		AD MAIN B OFFSET	○	000	255
MGG		AD MAIN G GAIN	○	000	255
MGO		AD MAIN G OFFSET	○	000	255
MRG		AD MAIN R GAIN	○	000	255
MRO		AD MAIN R OFFSET	○	000	255
[N]					
NGN		Prohibiting the shut down operation			
[O]					
OSD	S00	Turning the OSD indication off			
OSD	S01	Turning the OSD indication on			
[P]					
PLT	S00	PEAK LIMITER OFF			
PLT	S01	PEAK LIMITER ON			
PBH		Panel W/B B-HIGH adjustment	○	000	511
PBL		Panel W/B B-LOW adjustment	○	000	999
PDN		POWER DOWN NO			
PDY		POWER DOWN YES			
PGH		Panel W/B G-HIGH adjustment	○	000	511
PGL		Panel W/B G-LOW adjustment	○	000	999
PL0		Adjusting the brightness setting to 0			
PL1		Adjusting the brightness setting to 1			
PL2		Adjusting the brightness setting to 2			
PL3		Adjusting the brightness setting to 3			
PL4		Adjusting the brightness setting to 4			
PL5		Adjusting the brightness setting to 5			
PLA		Center luminance correction ON (APL interlocking OFF)			
PLN		Center luminance correction OFF			
POF		Turning the power OFF			
PON		Turning the power ON			
PRH		Panel W/B R-HIGH adjustment	○	000	511
PRL		Panel W/B R-LOW adjustment	○	000	999

Command		Operation	Validity of Direct Numeric Input	Lower limit	Upper limit
[R]					
RSL		Adjusting the side mask RED	○	000	255
RYG		RY GAIN	○	000	255
[S]					
SBG		AD SUB B GAIN	○	000	255
SBO		AD SUB B OFFSET	○	064	191
SFI		Initializing the full mask table			
SFT		Indicating the current signal format			
SFT	S01	Setting the signal format to PC FORMAT1 (VGA or XGA or SXGA or 720-PC)			
SFT	S02	Setting the signal format to PC FORMAT2 (WVGA or WXGA or SXGA+)			
SFT	S03	Setting the signal format to VIDEO 525p or VIDEO 750p			
SFT	S04	Setting the signal format to PC AUTO			
SGG		AD SUB G GAIN	○	000	255
SGO		AD SUB G OFFSET	○	064	191
SIP		Indicating the current function type			
SIP	S04	Input switching auxiliary (PC)			
SIP	S05	Input switching auxiliary (HDMI)			
SN0		Setting 1, 2, or 3 for the serial number of the panel			
SN1		Setting 4, 5, or 6 for the serial number of the panel			
SN2		Setting 7, 8, or 9 for the serial number of the panel			
SN3		Setting 10, 11, or 12 for the serial number of the panel			
SN4		Setting 13, 14, or 15 for the serial number of the panel			
SPI		Initializing the video EEPROM data			
SRG		AD SUB R GAIN	○	000	255
SRO		AD SUB R OFFSET	○	064	191
SWM		Full-screen display of main output			
SWS		Full-screen display of sub output			
SZM		Indicating the current screen size setting			
SZM	S00	Setting the screen size to Dot by Dot or PARTIAL			
SZM	S01	Setting the screen size to 4:3			
SZM	S02	Setting the screen size to FULL or FULL1080i			
SZM	S03	Setting the screen size to ZOOM			
SZM	S04	Setting the screen size to CINEMA			
SZM	S05	Setting the screen size to WIDE			
[T]					
TSN		Trap SW is invalid			
TSY		Trap SW is valid			
[U]					
UAJ		Return the DIGITAL VIDEO Assy to service parts			
UP0		10 adds adjustment value			
UPn		n adds adjustment value			
UPF		Maximizing the adjustment value			

Command		Operation	Validity of Direct Numeric Input	Lower limit	Upper limit
[V]					
VMT	S00	Cancelling the panel mute			
VMT	S01	Executing the panel mute			
VOF		Offset voltage adjustment	❍	000	255
VOL	***	Adjusting the audio volume	❍	000	060
VSG		CVY GAIN	❍	064	191
VSO		CVY OFFSET	❍	000	255
VSU		SUS voltage adjustment	❍	000	255
[W]					
WAN		WBL-APL interlocking prohibition			
WAY		WBL-APL interlocking permission			
[X]					
XD1		D1 trailing-edge pulse of X-SUS			
XD2		D2 trailing-edge pulse of X-SUS			
XU1		U1 leading-edge pulse of X-SUS			
XU2		U2 leading-edge pulse of X-SUS			
[Y]					
YD1		D1 trailing-edge pulse of Y-SUS			
YD2		D2 trailing-edge pulse of Y-SUS			
YD3		D3 trailing-edge pulse of Y-SUS			
YD4		D4 trailing-edge pulse of Y-SUS			
YU1		U1 leading-edge pulse of Y-SUS			
YU2		U2 leading-edge pulse of Y-SUS			

7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 CONFIGURATION OF THE PC BOARD

Note : This illustration is PDP-5004.

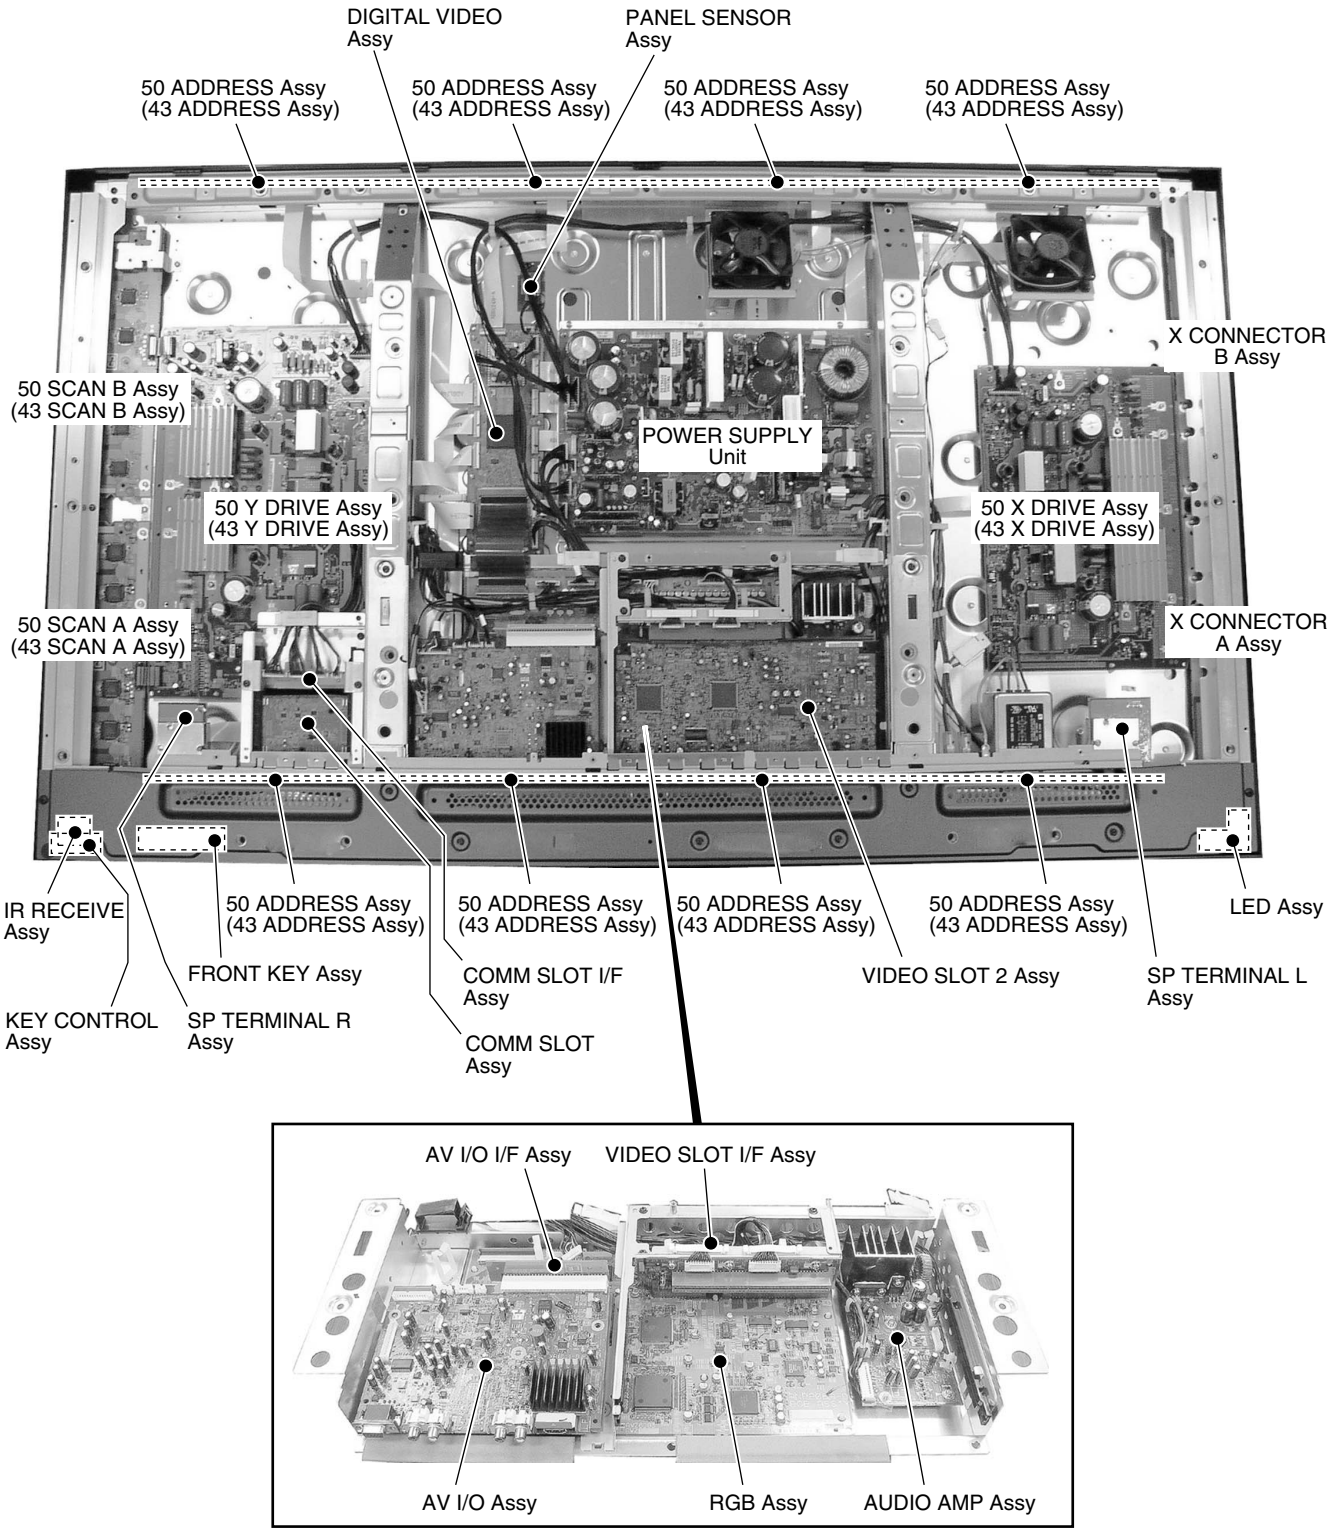
DIGITAL VIDEO Assy
PANEL SENSOR Assy
50 ADDRESS Assy (43 ADDRESS Assy)
50 ADDRESS Assy (43 ADDRESS Assy)
50 ADDRESS Assy (43 ADDRESS Assy)
50 ADDRESS Assy (43 ADDRESS Assy)
X CONNECTOR B Assy
50 SCAN B Assy (43 SCAN B Assy)
POWER SUPPLY Unit
50 Y DRIVE Assy (43 Y DRIVE Assy)
50 X DRIVE Assy (43 X DRIVE Assy)
50 SCAN A Assy (43 SCAN A Assy)
X CONNECTOR A Assy
IR RECEIVE Assy
50 ADDRESS Assy (43 ADDRESS Assy)
50 ADDRESS Assy (43 ADDRESS Assy)
50 ADDRESS Assy (43 ADDRESS Assy)
50 ADDRESS Assy (43 ADDRESS Assy)
LED Assy
FRONT KEY Assy
COMM SLOT I/F Assy
VIDEO SLOT 2 Assy
SP TERMINAL L Assy
KEY CONTROL Assy
SP TERMINAL R Assy
COMM SLOT Assy
AV I/O I/F Assy
VIDEO SLOT I/F Assy
AV I/O Assy
RGB Assy
AUDIO AMP Assy

● Rear view

7.1.2 DIAGNOSIS FOR SHUTDOWN AND POWER-DOWN BY LED

• Operation statuses indicated by LEDs

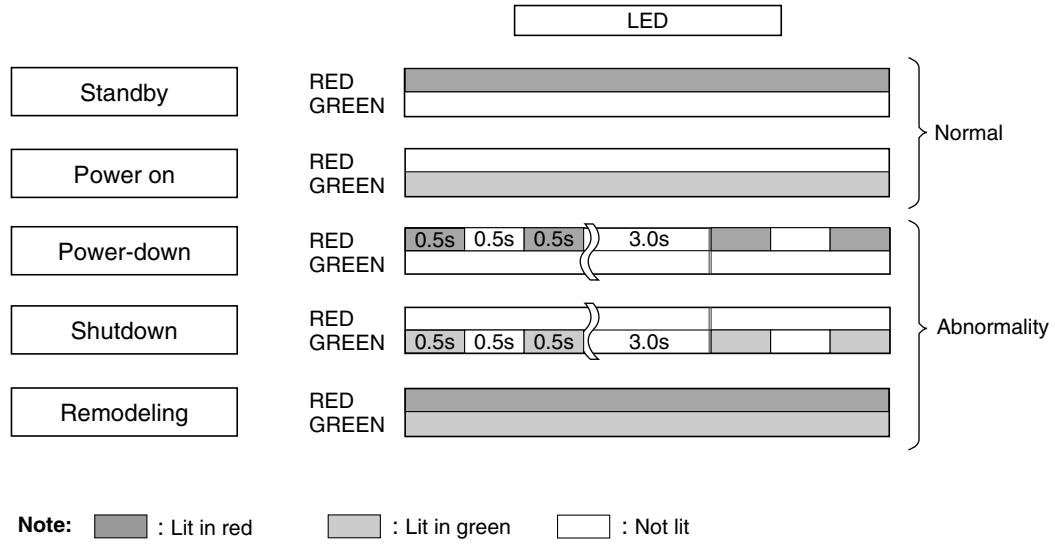

Note: : Lit in red : Lit in green : Not lit

• Identification of locations having abnormality by the number of times the LEDs flash

■ On Shutdown and power-down

Shutdown

• Operation: When the microcomputer detects any abnormality, it forcibly shuts the unit off.
• LED indication: The LED flashes in green.

Note: The LED flashes regardless of the FRONT INDICATOR setting on the Integrator menu.

Power-down

• Operation: When the unit is in emergency status, a protection circuit is activated, and the power is shut off.
• LED indication: The LED flashes in red.

Category	LED		Content		Unit's Operation	Warning Message
	STB	ON				
SD		Once	Communication failure of the panel-drive IC		Shutdown 3 seconds after warning	Shutdown by circuit failure (01)
		Twice	Communication failure of the module IIC		Shutdown 3 seconds after warning	Shutdown by circuit failure (02)
		3 times	Power decrease of the digital DC-DC converter		Immediate shutdown	
		4 times	Panel having high temperature		Shutdown 30 seconds after warning	Shutdown by warning temperature rise (04)
		5 times	Audio failure		Shutdown 3 seconds after warning	Shutdown by warning speaker failure (05)
		6 times	Communication failure of the module microcomputer		Shutdown 3 seconds after warning	Shutdown by circuit failure (06)
		7 times	Main 3-wire serial communication in failure		Shutdown 3 seconds after warning	Shutdown by circuit failure (07)
		8 times	Communication failure of the main IIC		Shutdown 3 seconds after warning	Shutdown by circuit failure (08)
		9 times	Communication failure of the main microcomputer		Immediate shutdown	
		10 times	Fan in failure		Shutdown 3 seconds after warning	Shutdown by warning fan abnormality (10)
		11 times	Unit having higher temperature		Shutdown 30 seconds after warning	Shutdown by warning temperature rise (11)
		13 times	Main microcomputer ASIC power supply NG		Immediate shutdown	
		14 times	Communication failure of IF-EEPROM		Shutdown 3 seconds after warning	Shutdown by circuit failure (14)
		15 times	Other failure	VCC-D1	Shutdown 3 seconds after warning	Shutdown by circuit failure (15)
				VCC-D2		
				VCC-D4		
PD	Once					
	Twice		Power		Immediate power-down	
	3 times		SCAN		Immediate power-down	
	4 times		SCAN-5V		Immediate power-down	
	5 times		Y-DRIVE		Immediate power-down	
	6 times		Y-DCDC		Immediate power-down	
	7 times		Y-SUS		Immediate power-down	
	8 times		ADDRESS		Immediate power-down	
	9 times		X-DRIVE		Immediate power-down	
	10 times		X-DCDC		Immediate power-down	
	11 times		X-SUS		Immediate power-down	
	12 times		DIGITAL-DCDC		Immediate power-down	
	14 times		UNKNOWN (Not identified)∗1		Immediate power-down	
	15 times		Drive processing IC (IC4)∗2			

∗1: If the unit cannot identify which protection circuit was activated, even if a power-down had been detected, the red LED may flash 15 times.
∗2: If 15 times blink of a power-down cannot be specified, the drive processing IC exists.
See "4.PANEL PD" on page 99 and "GPD: Power-down information" on page 118.

• Block diagram of the shutdown signal system

Note:
The figures ① - ⑮ indicate the number of times the LED flashes when shutdown occurs in the corresponding route.

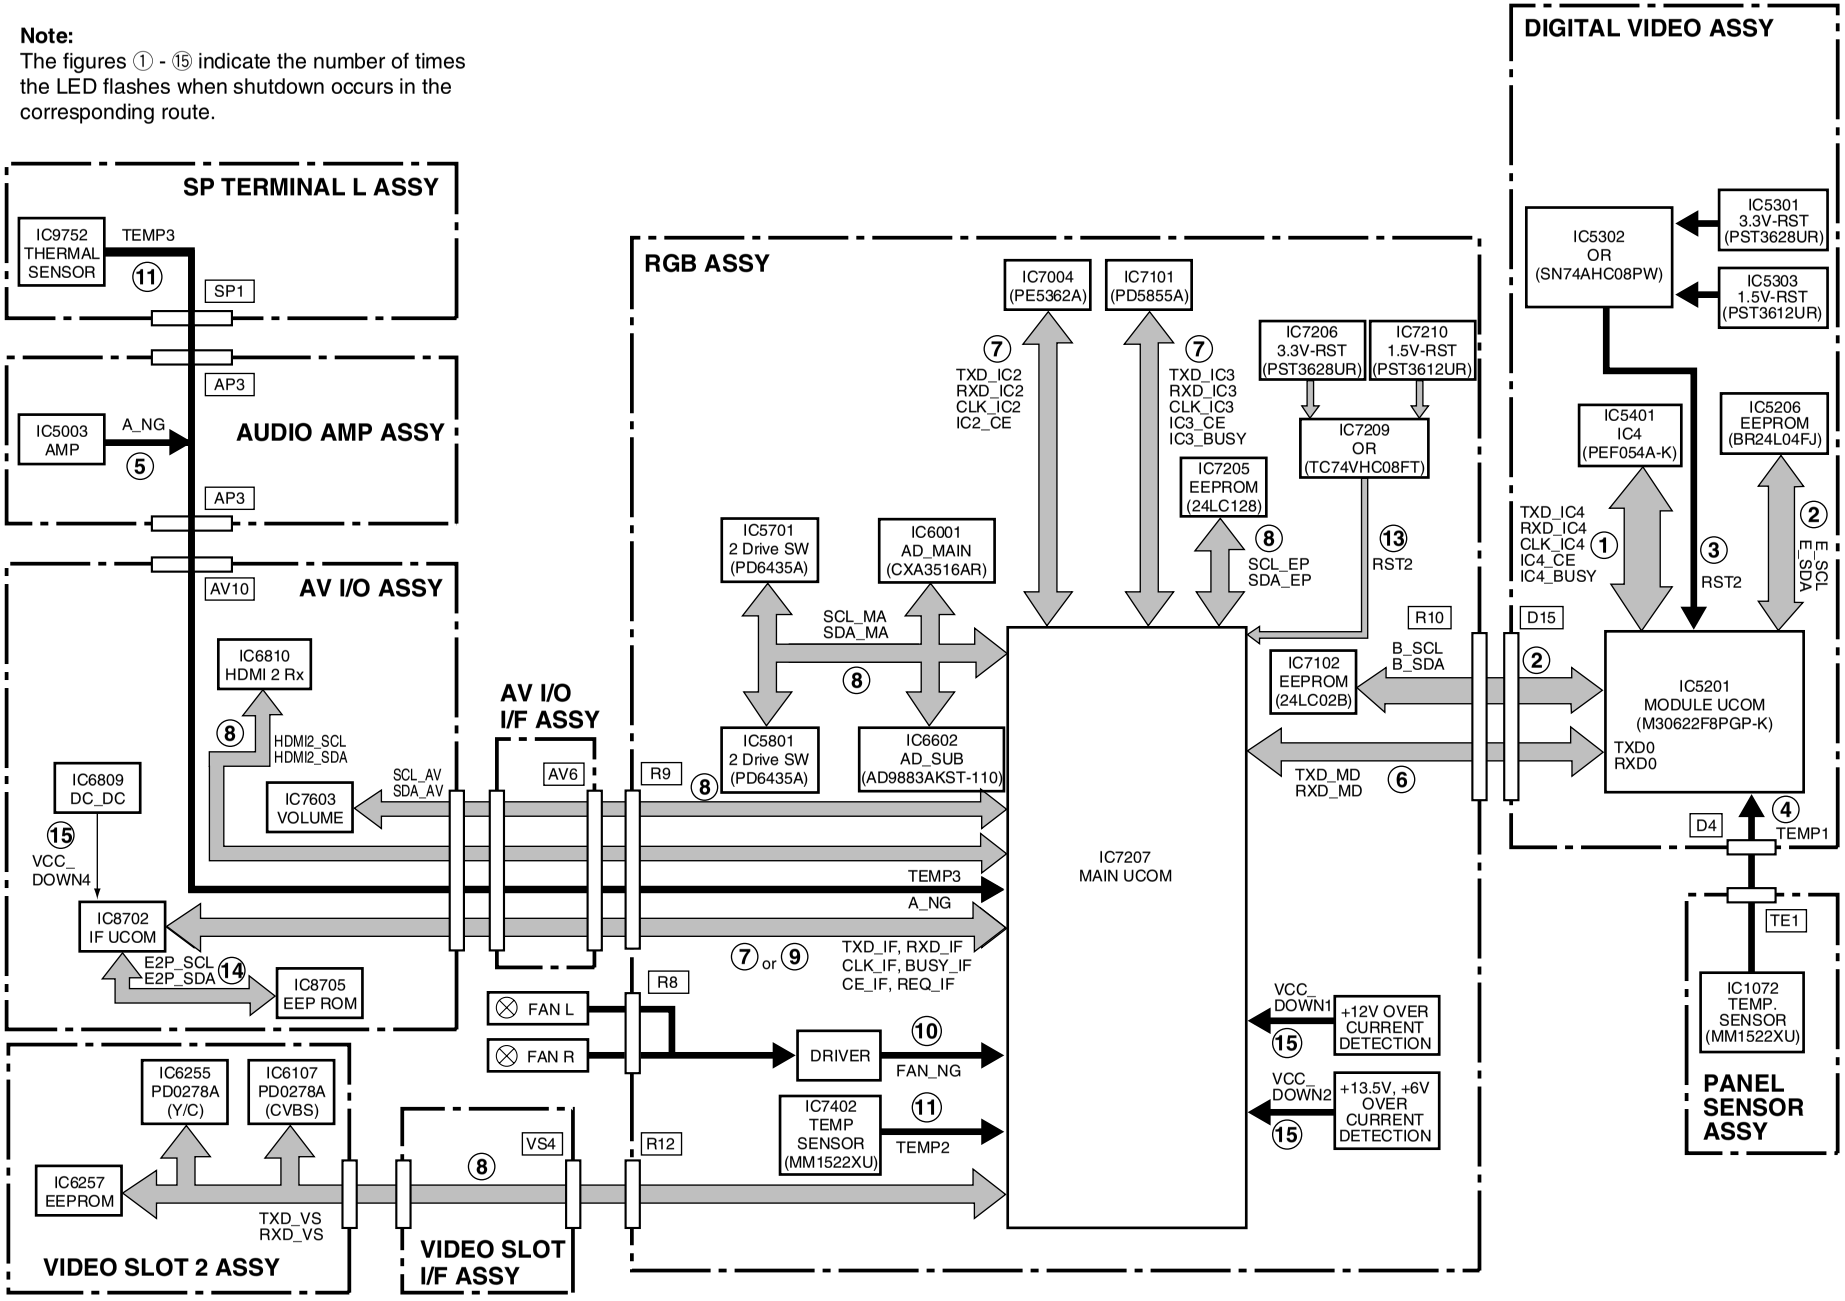

• Diagnosis of shutdown

	SD Circuit in Operation	Defective Assy	Reason for Shutdown	Point to be Checked	Possible Defective Part	Remarks
1	Communication failure of the panel-drive IC	DIGITAL VIDEO	Communication failure of IC4 or defective peripheral circuits	IC4 Block, Panel Flash Block	IC5401, IC5305	
			Writing failure of IC4			After turning the unit on again, check if the data on the version can be read with the GS1 command.
2	Communication failure of the module IC (Check the shutdown subcategory on the Factory menu.)	DIGITAL VIDEO	Communication failure of the EEPROM (4k) or defective peripheral circuits	Module Ucom Block	IC5206	
		RGB	Communication failure of the EEPROM (2k) or defective peripheral circuits	IC3 Block	IC7102	
			Defective 114-pin FPC	CN400(D15) - CN7101(R10)	ADY1081	Check if the cable is disconnected or not securely connected.
3	Power decrease of DIGITAL-DC-DC	DIGITAL VIDEO	Defective DC-DC converter	Digital DD Control Block	U5601	Check if 3.3V, 2.5V, and 1.5V are activated (not short-circuited).
		DIGITAL VIDEO	Defective RST IC	Panel Flash Block	IC5301,IC5302,IC5303	
		POWER SUPPLY	No startup of 12 V			
4	Panel having higher temperature	DIGITAL VIDEO	Disconnection of cable	CN5202 - CN1071		
			Panel having higher temperature	Surrounding temperature		Temperature detected by a sensor must not exceed 90°C (TEMP1).
5	Audio failure		Speaker short-circuited	Speaker terminals		Check if the speaker cables are in contact with the chassis, etc.
		AUDIO AMP	Defective AMP IC	Audio Amp	IC5003	
		AUDIO AMP	Disconnection of cable	CN7601(AV1) - CN5001(AP2)		Check if the cable is disconnected or not securely connected.
6	Communication failure of the module microcomputer	DIGITAL VIDEO	Communication failure in the module microcomputer or defective peripheral circuits	Module Ucom Block	IC5201	Check short/open of the communication line (TXDO/RXDO).
			Failure in writing in the module microcomputer	Module Ucom Block	IC5201	
			Defective 114-pin FPC	CN4004(D15) - CN7101(R10)	ADY1081	Check if the cable is disconnected or not securely connected.
7	Serial communication failure of the 3-wire of the main microcomputer	AV I/O	Communication failure in the IF microcomputer or defective peripheral circuits	IF Ucom Block	IC8702	Check short / open of the communication line (TXD_IF/RXD_IF/CLK_IF/BUSY_IF/CE_IF)
		RGB	Communication failure in the CELIA or defective peripheral circuits	IC2 Block	IC7004	Check short / open of the communication line (TXD_IC2/RXD_IC2/CLK_IC2/CE_IC2)
		RGB	Communication failure in the MIKE or defective peripheral circuits	IC3 Block	IC7101	Check short / open of the communication line (TXD_IC3/RXD_IC3/CLK_IC3/BUSY_IC2/CE_IC3)
		RGB	Failure in writing in the MIKE	IC3 Block	IC7101	
8	IIC communication failure of the main microcomputer (Confirm the SD subcategory in the factory menu)	VIDEO SLOT2	Failure in MICHAEL Y/C or defective peripheral circuits	IC1 (Y/C) Block	IC6255	
		VIDEO SLOT2	Failure in MICHAEL CVBS or defective peripheral circuits	IC1 (CVBS) Block	IC6107	
		RGB	Failure in AD MAIN or defective peripheral circuits	Main AD Block	IC6001	
		RGB	Failure in AD SUB or defective peripheral circuits	Sub LPF & AD Block	IC6602	
		RGB	Failure in ROZ or defective peripheral circuits	Bus SW1 Block	IC5701	
		RGB	Failure in ROZ or defective peripheral circuits	Bus SW2 Block	IC5801	
		AV I/O	Failure in VOL IC or defective peripheral circuits	AV I/O Assy	IC7603	
		AV I/O	Failure in HDMI Rx IC or defective peripheral ciecuits	IC6810 Block	IC6810	
		RGB	Failure in EEPROM or defective peripheral circuits	Main Ucom Block	IC7205	
		VIDEO SLOT2	Failure in EEPROM or defective peripheral circuits	IC1 (Y/C) Block	IC6257	
			Defective communication line between any of the above devices and the main microcomputer		IC7207	Check short / open of SCL_AV/SDA_AV, SCL_MA/SDA_MA and SCL_EP/SDA_EP

	SD Circuit in Operation		Defective Assy	Reason for Shutdown	Point to be Checked	Possible Defective Part	Remarks
9	Communication failure in main microcomputer		RGB	Communication failure in main microcomputer or defective peripheral circuits	Main Ucom Block	IC7207	Check short / open of communication line (TXD_IF/RXD_IF/CLK_IF/BUSY_IF/CE_IF/REQ_IF)
			RGB	Failure in writing in the main microcomputer	Main Ucom Block	IC7207	
10	Fan failure		FAN	Failure in the fan motor or fan stopped by attached dust			
			RGB	Disconnection of cable	Relay part between CN7402 (R8) and the wire from the fan		Check if the cable is disconnected or not securely connected.
11	Unit having higher temperature			Use under high temperature	Surrounding/internal temperature		Temperature detected by a sensor must not exceed 65°C (TEMP3) /95°C (TEMP2)
			AUDIO AMP	Disconnection of cable	CN5003(AP3) - CN9702(SP1)		Check if the cable is disconnected or not securely connected.
14	Communication failure in IF EEPROM		AV I/O	Communication failure in EEPROM or defective peripheral circuits	I/F Ucom Block	IC8705	Check short / open of E2P_SCL/E2P_SDA
15	Other failures	VCC-D1	RGB	Defective circuits in the 12V system			Check for shortcircuits in the 12V system.
		VCC-D2	RGB	Defective circuits in the 13.5V and 6.5V systems.			Check for shortcircuits in the 13.5V and 6.5V systems.
		VCC-D4	AV I/O	Defective circuits in the 3.3V system of HDMI 2.			Check for shortcircuits in the 3.3V system of HDMI 2.

• Diagnosis of abnormalities other than shutdown and power-down

Symptoms	Defective Assy	Abnormal Summary	Point to be Checked	Possible Defective Part	Remarks
No power (LED unlit)		Disconnection of cable	CN7404		Check if the connection between the POWER SUPPLY and RGB assemblies is properly made.
	POWER SUPPLY	STB 3.3 V not started	CN7404(AV1)-11 pin		
	AV I/O	Defective IF microcomputer	IF Ucom Block	IC8702	Check if the oscillation is normal (X8701 = 32 kHz, X8702 = 9.8 MHz) and if RESET is set to H (IC8703).
No power (The LED remains lit in red and does not light in green.)	RGB	Defective main microcomputer	Main Ucom Block	IC7207	If communication with the main microcomputer fails approx. 20 seconds after the AC power is on, the main microcomputer may be defective.
No power (The LED remains lit in red and dgreen.)		Detect Trap switch	CN7204		Check if the TRAP switch is secured in its position correctly. See "7.1.8 How to cancel the TRAP switch."
		Defective Trap switch		ASG1089	Check if the unit operates normally when the TRAP switch is canceled. See "7.1.8 How to cancel the TRAP switch."
Key input not effective		Disconnection of cable	CN4801 - CN9002 CN9001 - CN8702		Check if the cables are not connected or securely connected.
Remote control unit not effective		Disconnection of cable	CN4901 - CN8901		Check if the cable is not connected or securely connected.
	IR RECEIVE	Defective IR receiver section	IR	U4901	Check if a pulse is output when the key corresponding to Pin 3 of the CN4901 is pressed.
Abnormality in a one-eighth area of the screen	DIGITAL VIDEO	Defective IC4	IC4 Block	IC5401	Check if an abnormal area in the screen changes when the FPC connected to the address corresponding to the abnormal area is replaced with the one corresponding to the next address.
	ADDRESS				Check that an abnormal area in the screen does not change when the FPC connected to the address corresponding to the abnormal area is replaced with the one corresponding to the next address.
Abnormal screen (Data of every other dot are abnormal)		Defective 114-pin FPC	CN7101 - CN5001	ADY1081	Check if the FPC is broken or not securely connected.

• **Block diagram of the power-down signal system**

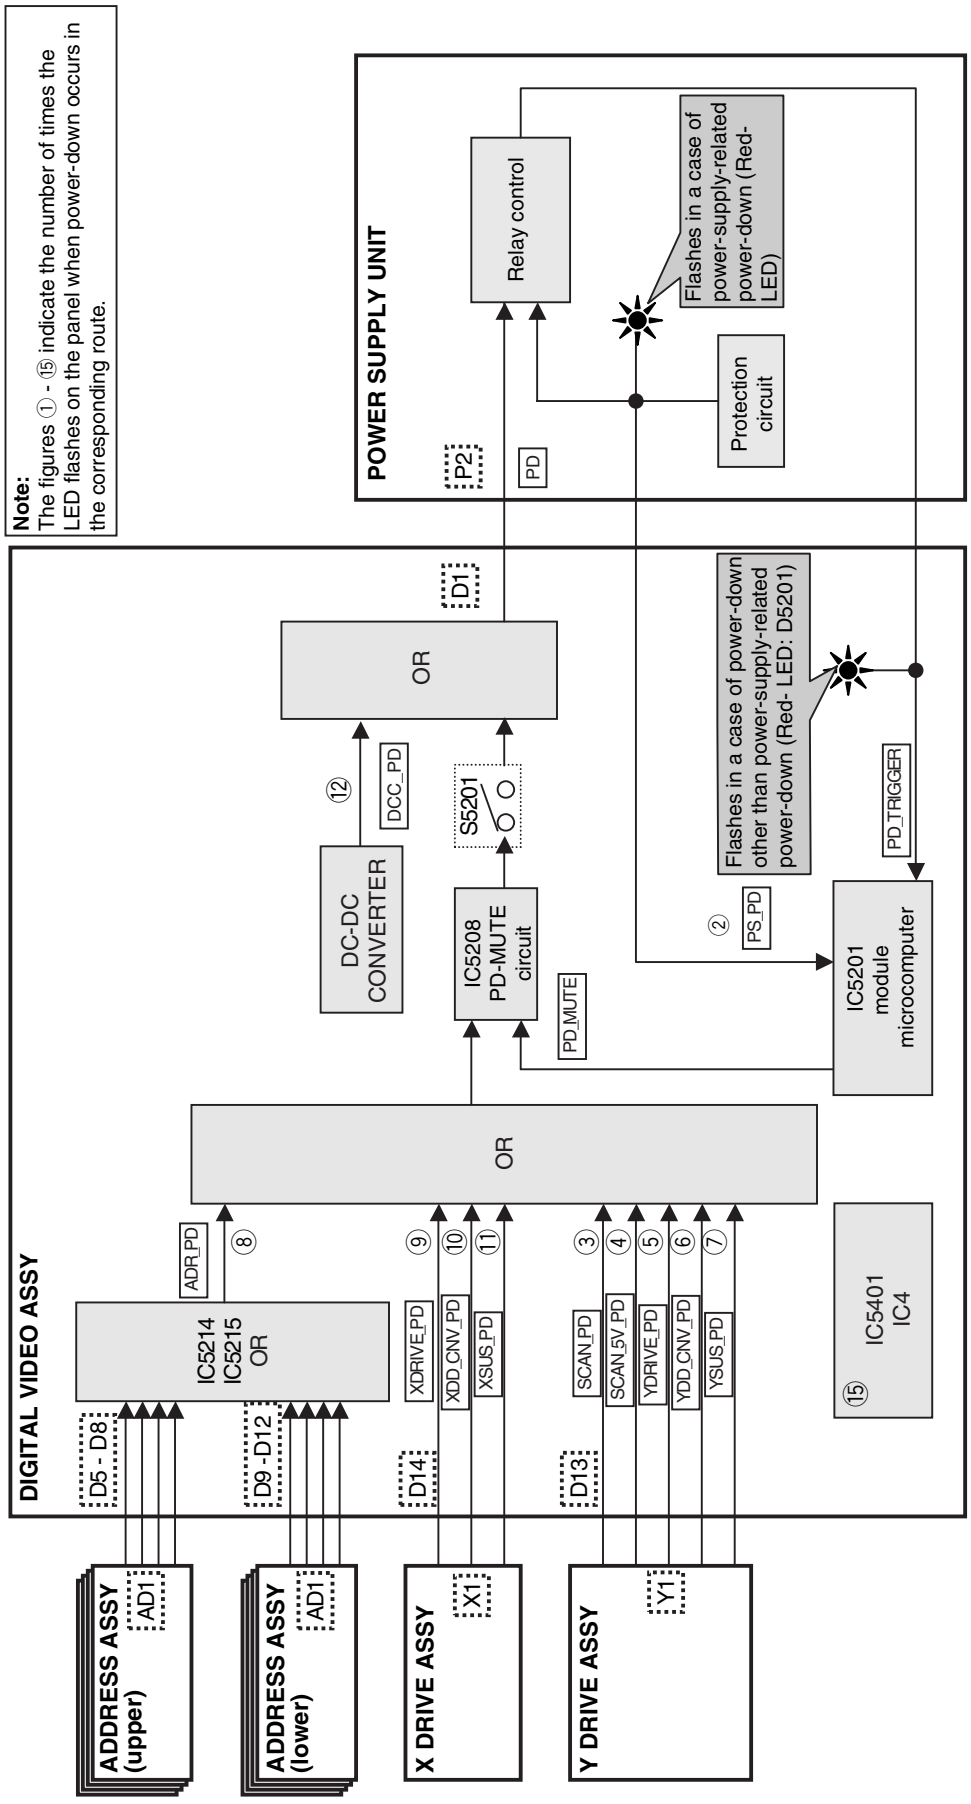

• Power-down diagnosis (defective points)

	PD Circuit in operation	Defective Assy	Reason for Power-down	Point to be Checked	Possible Defective Part	Remarks
2	POWER	POWER SUPPLY Unit				If the elapsed time from relay-on until the LED in the power supply unit lights is about 2-4 seconds, the defective assembly may be the 50 (43) X or Y DRIVE.
		50 (43) X DRIVE Assy	VSUS UVP	X SUS BLOCK	IC1203, IC1207 (mask module)	
		50 (43) Y DRIVE Assy	VSUS UVP	Y SUS BLOCK	IC2303, IC2307 (mask module)	
3	SCAN	50 (43) SCAN A, B Assy or 50 (43) Y DRIVE	VH UVP	SCAN IC	SCAN IC	
			VH UVP	VH DC/DC	IC2401, IC2402, IC2410, L2401	
			VH OVP	VH DC/DC	IC2402, IC2410	
			Disconnection of cable detected	CN2001, CN2301		
4	SCN-5V	50 (43) SCAN A, B Assy or 50 (43) Y DRIVE Assy	Disconnection of cable detected	CN2101, CN2102, CN2301		
			IC5V UVP	SCAN IC, IC5V DC/DC Y SUS BLOCK	SCAN IC, Q2401, Q2402, IC2304,	
			IC5V OVP	IC5V DC/DC	IC2403, IC2411	
5	Y-DRIVE	50 (43) Y DRIVE Assy	+16.5V OCP	Y SUS BLOCK	IC2303, IC2307 (mask module), IC2301, IC2304, IC2305, R2332	
6	Y-DCDC	50 (43) Y DRIVE Assy	VOFS UVP	VOFS DC/DC	IC2404, IC2412, Q2404, Q2407, Q2312	
			VOFS OVP	VOFS DC/DC	IC2404, IC2412	
7	Y-SUS	50 (43) Y DRIVE Assy	Power-down caused by detection of middle-point voltage	Y RESONANCE BLOCK	Q2202, Q2203, Q2214, Q2205, Q2206, Q2208, Q2209, Q2212, IC2201, IC2202, D2201, D2206, D2220, D2211, D2225, D2230, Control signal series resistors	
8	ADRS	50 (43) ADDRESS	Disconnection of cable detected	CN1501		
			Power-down caused by detection of a power surge	ADR RESONANCE BLOCK	R1631, Q1601, D1602	
9	X-DRIVE	50 (43) X DRIVE Assy	Disconnection of cable detected	CN1001, CN1201		
			+16.5V OCP	X SUS BLOCK	IC1203, IC1207 (mask module), IC1204, IC1206, R1230, IC1205	
			VRN OCP	X SUS BLOCK	Q1205, R1226, R1251	
10	X-DCDC	50 (43) X DRIVE Assy	VRN OVP	VRN DC/DC	IC1403, IC1404	
			VRN UVP	VRN DC/DC	IC1402, IC1403, IC1404	
				X SUS BLOCK	Q1205, R1226, R1251	
11	X-SUS	50 (43) X DRIVE Assy	Power-down caused by detection of middle-point voltage	X RESONANCE BLOCK	Q1102, Q1103, Q1114, Q1105, Q1108, Q1109, Q1111, Q1112, IC1101, IC1102, D1103, D1113, D1118, D1125, D1129, D1130, Control signal series resistors	
12	DIG-DCDC	DIGITAL VIDEO Assy	DCDC +3.3V, +1.5V OVP	DC DC CONVERTER BLOCK	U5602 (DC DC CONVERTER Module)	
15	IC4	DIGITAL VIDEO Assy	IC4 Drive STOP	IC4 BLOCK	IC5401	

OVP: **O**ver **V**oltage **P**rotection UVP: **U**nder **V**oltage **P**rotection OCP: **O**ver **C**urrent **P**rotection

Note: 50 (43) *** Assy means (50 *** Assy or 43 *** Assy.)

7.1.3 PROCESSING AT THE TIME OF ABNORMALITIES

Fan and temperature sensor

● **Circuitry**

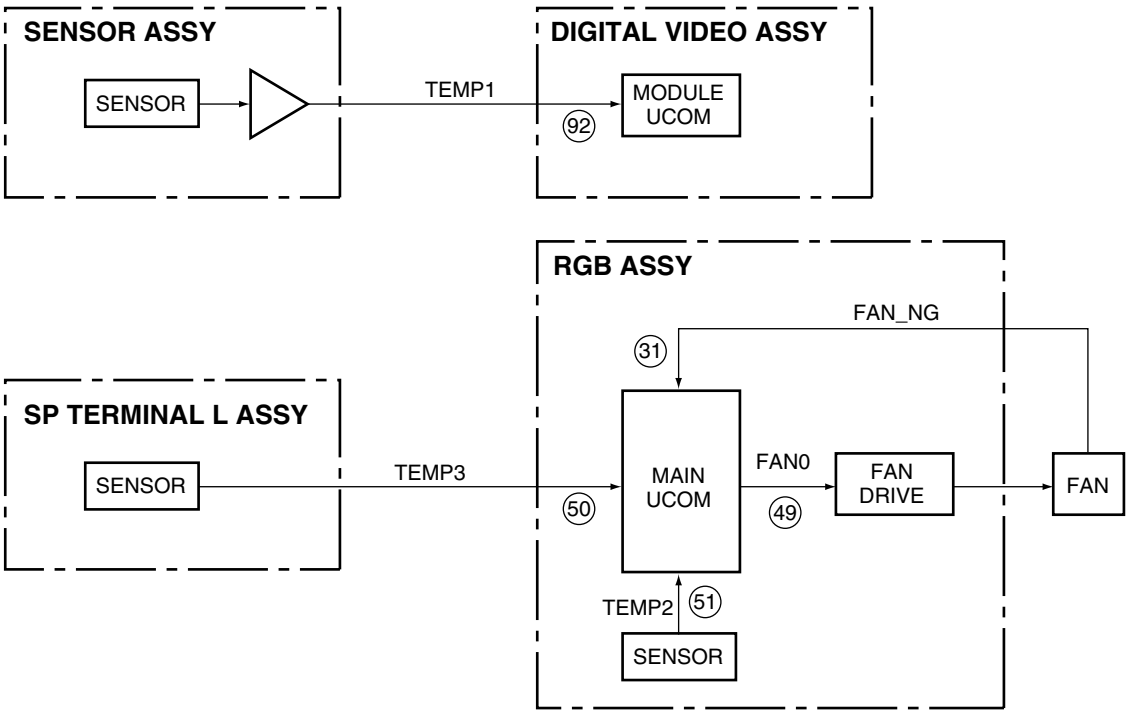

● **Port monitoring specifications**

Port Name	Shutdown Name	Assign	Control Microcomputer	Active	Remarks
FAN_NG	FAN	31	Main	Shutdown when the signal becomes high	Disconnection of the fan connector or abnormality in operation of the fan detected
TEMP1	Unit under high temperature	92	Module	Shutdown when the set value is exceeded	Monitoring high temperature of the panel, Drive system temperature compensation
TEMP2	Unit under high temperature	51	Main		Monitoring high temperature of boards
TEMP3	Unit under high temperature	50	Main		Monitoring ambient temperature

7.1.4 TEMPERATURE COMPENSATION OF DRIVE SYSTEM VOLTAGE

Function: To control the DRIVE-system voltage according to the temperature (Temperature compensation functions such that the voltage is lowered on the lower-temperature side and the voltage becomes higher on the higher-temperature side.)

Purpose: For improving the yield by compensating for the temperature characteristics of the panel

Note: • Temperature compensation is performed only for the VSUS voltage, and not for the VOFS voltage. This compensation is controlled by the software.
• Temperature compensation is carried out with the value of TEMP1.

7.1.5 POWER ON/OFF FUNCTION FOR THE LARGE-SIGNAL SYSTEM

Function: Only the power for the low voltage lines (16 V, 12 V, and 6.5 V) is on, and the power for the high voltage lines (VSUS, VADR) is off.

Usage: 1. Use when only an operational check for the low voltage lines is required, such as when making repairs.
2. Use when rewriting of a program for each microcomputer is required.

Methods: 1 Set the slide switch (S5201) on the DIGITAL VIDEO Assy to its upper position ("DRF" is mentioned on the board see Fig. below).
2. Send the "DRF" RS232C command to turn the large-signal system off.
3. Send the "DRN" RS232C command to turn the large-signal system on.

Notes:

- As the unit enters Power-Down and Muting On mode when Methods 1 and 2 are performed, and power-downs other than those caused by the power (PS_PD) and DC-DC-converter (DIGITAL_DC-DC) circuits are not activated.
- If the slide switch is set from OFF to ON while the power is on, a power-down will occur. Be sure to turn the power off before switching the slide switch.
- Although the "DRF" RS232C command is enabled during Standby, if the power is turned on then turned off, the unit will return to "DRN" mode.

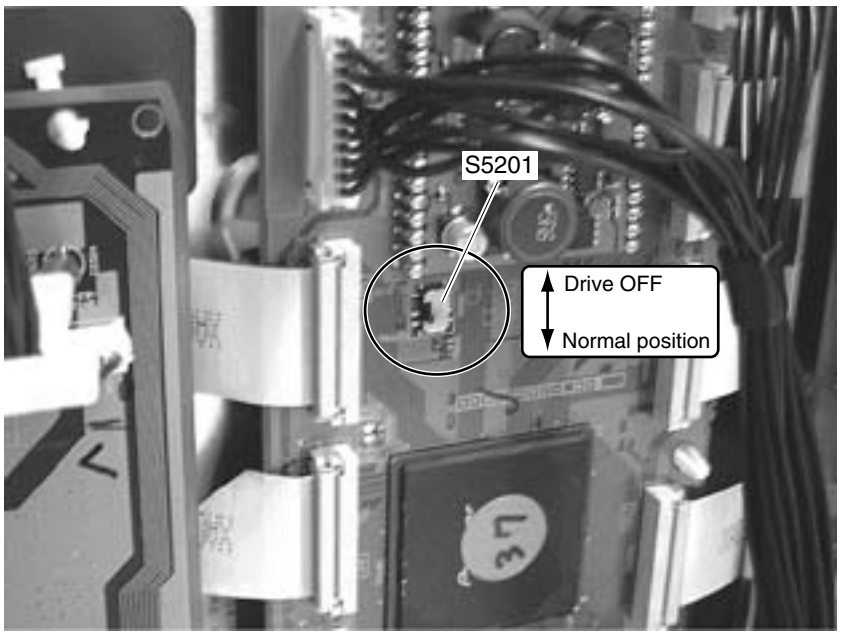

Fig. Drive OFF switch

7.1.6 BACKUP THE ADJUSTMENT VALUES FOR THE MAIN UNIT

■ Outline

The data on the adjustment values for the main unit are stored in an EEPROM (IC5206, 4 kbits) on the DIGITAL VIDEO Assy. Part of the data (area A in the figure below) are automatically copied to an EEPROM (IC7102, 2 kbits) mounted on the RGB Assy for backup. When the DIGITAL VIDEO Assy is replaced, the backup data on the adjustment values for the main unit stored in the RGB Assy can be copied to the new DIGITAL VIDEO Assy, thus enabling you to omit newly performing adjustments on the main unit. The logs for the product (power-down log, etc.) can also be copied.

■ Data to be backed up in the digital EEPROM (area A)

- Margin adjustment values (Vsus, Vofset)
- Power upper-limit adjustment value (ABL)
- PANEL white-balance adjustment values
  (PANEL-R HIGH, PANEL-G HIGH, PANEL-B HIGH, PANEL-R LOW, PANEL-G LOW, PANEL-B LOW)
- Drive waveform adjustment values
  (X-SUS-U1, X-SUS-U2, X-SUS-D1, X-SUS-D2, Y-SUS-U1, Y-SUS-U2, Y-SUS-D1, Y-SUS-D2, Y-SUS-D3, Y-SUS-D4)
- Hour meter
- Pulse meter
- Number of times the power has been turned on
- PD/SD logs

■ Basic flow of automatic backup

Using a keyword, the data in areas A and B are judged as to whether they have been adjusted or not, then copying is performed.

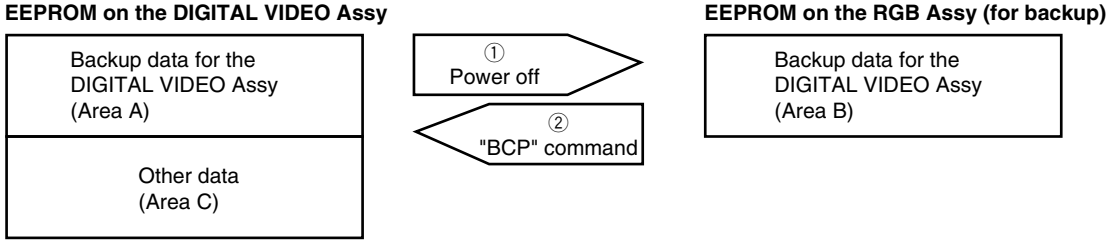
EEPROM on the DIGITAL VIDEO Assy
Backup data for the DIGITAL VIDEO Assy (Area A)
Other data (Area C)
① Power off
② "BCP" command
EEPROM on the RGB Assy (for backup)
Backup data for the DIGITAL VIDEO Assy (Area B)

① The keyword on the DIGITAL VIDEO Assy is checked when the power is turned off, and if it is "adjusted", automatic backup is performed.
② If the keyword on the RGB Assy (Area B) is "adjusted," copying can be performed with the "BCP" RS232C command.

■ Actual automatic backup operations

1. When the DIGITAL VIDEO Assy is replaced with an Assy for service

Changing of keywords is not required. Replace the DIGITAL VIDEO Assy with an Assy for service, and send the "BCP" RS232C command. Thus, the backup data in the EEPROM on the RGB Assy are copied to the EEPROM on the DIGITAL VIDEO Assy for service.

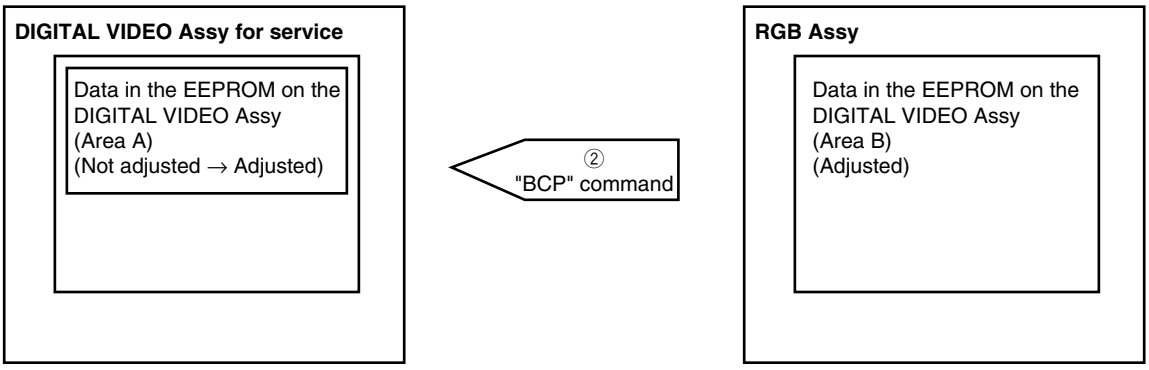
DIGITAL VIDEO Assy for service
Data in the EEPROM on the DIGITAL VIDEO Assy (Area A) (Not adjusted → Adjusted)
② "BCP" command
RGB Assy
Data in the EEPROM on the DIGITAL VIDEO Assy (Area B) (Adjusted)

2. When a repaired DIGITAL VIDEO Assy is mounted on another unit (reuse of the repaired DIGITAL VIDEO Assy)

The keyword of the DIGITAL VIDEO Assy to be reused must be changed to "not adjusted" using the "UAJ" RS232C command.

Note 1: If a repaired DIGITAL VIDEO Assy is mounted in another unit (Unit 2) without this change of keyword, and the power to the unit 2 is turned off, the data in force before the repair of the DIGITAL VIDEO Assy will be copied to Area B of the RGB Assy of Unit 2, overwriting the data necessary for Unit 2. Once overwritten, the original data will not be restored.

3. When a repaired DIGITAL VIDEO Assy is mounted on the original unit (reuse of the repaired DIGITAL VIDEO Assy)
Changing of keywords is not required. After the repaired DIGITAL VIDEO Assy is mounted in the original unit, the unit can operate with its latest adjustment values.

4. When both the DIGITAL VIDEO Assy and RGB Assy are simultaneously replaced with other assemblies
The automatic backup function of this unit will not work properly.

Note 2: Readjustment of the main unit is required.
Note 3: After readjustment of the main unit, send the "FAJ" RS232C command to change the keyword of the DIGITAL VIDEO Assy to "adjusted." Thus, when the unit is turned off, automatic backup of adjustment data is performed properly.
Note 4: If readjustment of the main unit is totally impossible, it can be omitted by installing the EEPROM (IC5206, 4 kbits) originally mounted on the DIGITAL VIDEO Assy for service.
Note 5: After copying the backup data, turn the power off then back on to reflect the copied backup data.

■ Miscellaneous

If the white balance (W/B) value is largely shifted because of aging, etc., W/B adjustment is required. (As this may be a rare case, the adjustment procedures are described below, just for your reference.

[W/B-adjustment procedures]

The W/B adjustment can be performed with the RS232C commands. Minolta CA-100 color difference meter are required.

① Send the "FAY" RS232C command to enter Factory mode.

② Set the keyword for the DIGITAL VIDEO Assy to "not adjusted" with the "UAJ" RS232C command.

③ Obtain the current adjustment values in the two adjustment tables (see "6.6 Command Description").
- Shifting to Table 1: Send the "M51" and "F60" commands. Obtaining the adjustment values: Send the "GPW" command.
- Shifting to Table 2: Send the "M51" and "F75" commands. Obtaining the adjustment values: Send the "GPW" command.

④ For each table, set the brightness.
- Adjustment in Table 1: After sending the "F60" command, perform adjustment.
- Adjustment in Table 2: After sending the "F75" command, perform adjustment.

For each table, change the RGB parameters so that the values measured using a Minolta color difference meter (CA-100) become as indicated below. In this case, any one of PRH, PGH, or PBH must be set to 256.

	Cd/mm
x	285
y	289

"PRH***" : 000 - 511
"PGH***" : 000 - 511
"PBH***" : 000 - 511

⑤ Check after adjustment
- Shifting to Table 1: Send the "F60" command. Obtaining the adjustment values: Send the "GPW" command.
- Shifting to Table 2: Send the "F75" command. Obtaining the adjustment values: Send the "GPW" command.

Check that the adjustment data have been changed.

⑥ Change the keyword for the DIGITAL VIDEO Assy to "adjusted" by sending the "FAJ" RS232C command.
Note: Use a Minolta CA-100 color difference meter or the equivalent for measurement. Otherwise, the specifications of the product cannot be assured.

⑦ Send the "FAN" RS232C command to enter Normal mode.
- If the value is different from that you set, readjust it.

Note: To reset the adjustment to its original value, send the "BCP" RS232C command then turn the power off then back on to retrieve the backup data.

- The setting values for color temperature differ between Factory mode and Normal mode. Therefore, the setting value for color-difference signals in Normal mode are different from those in Factory mode, even after the White Balance adjustment has been performed.

7.1.7 TROUBLESHOOTING

Video

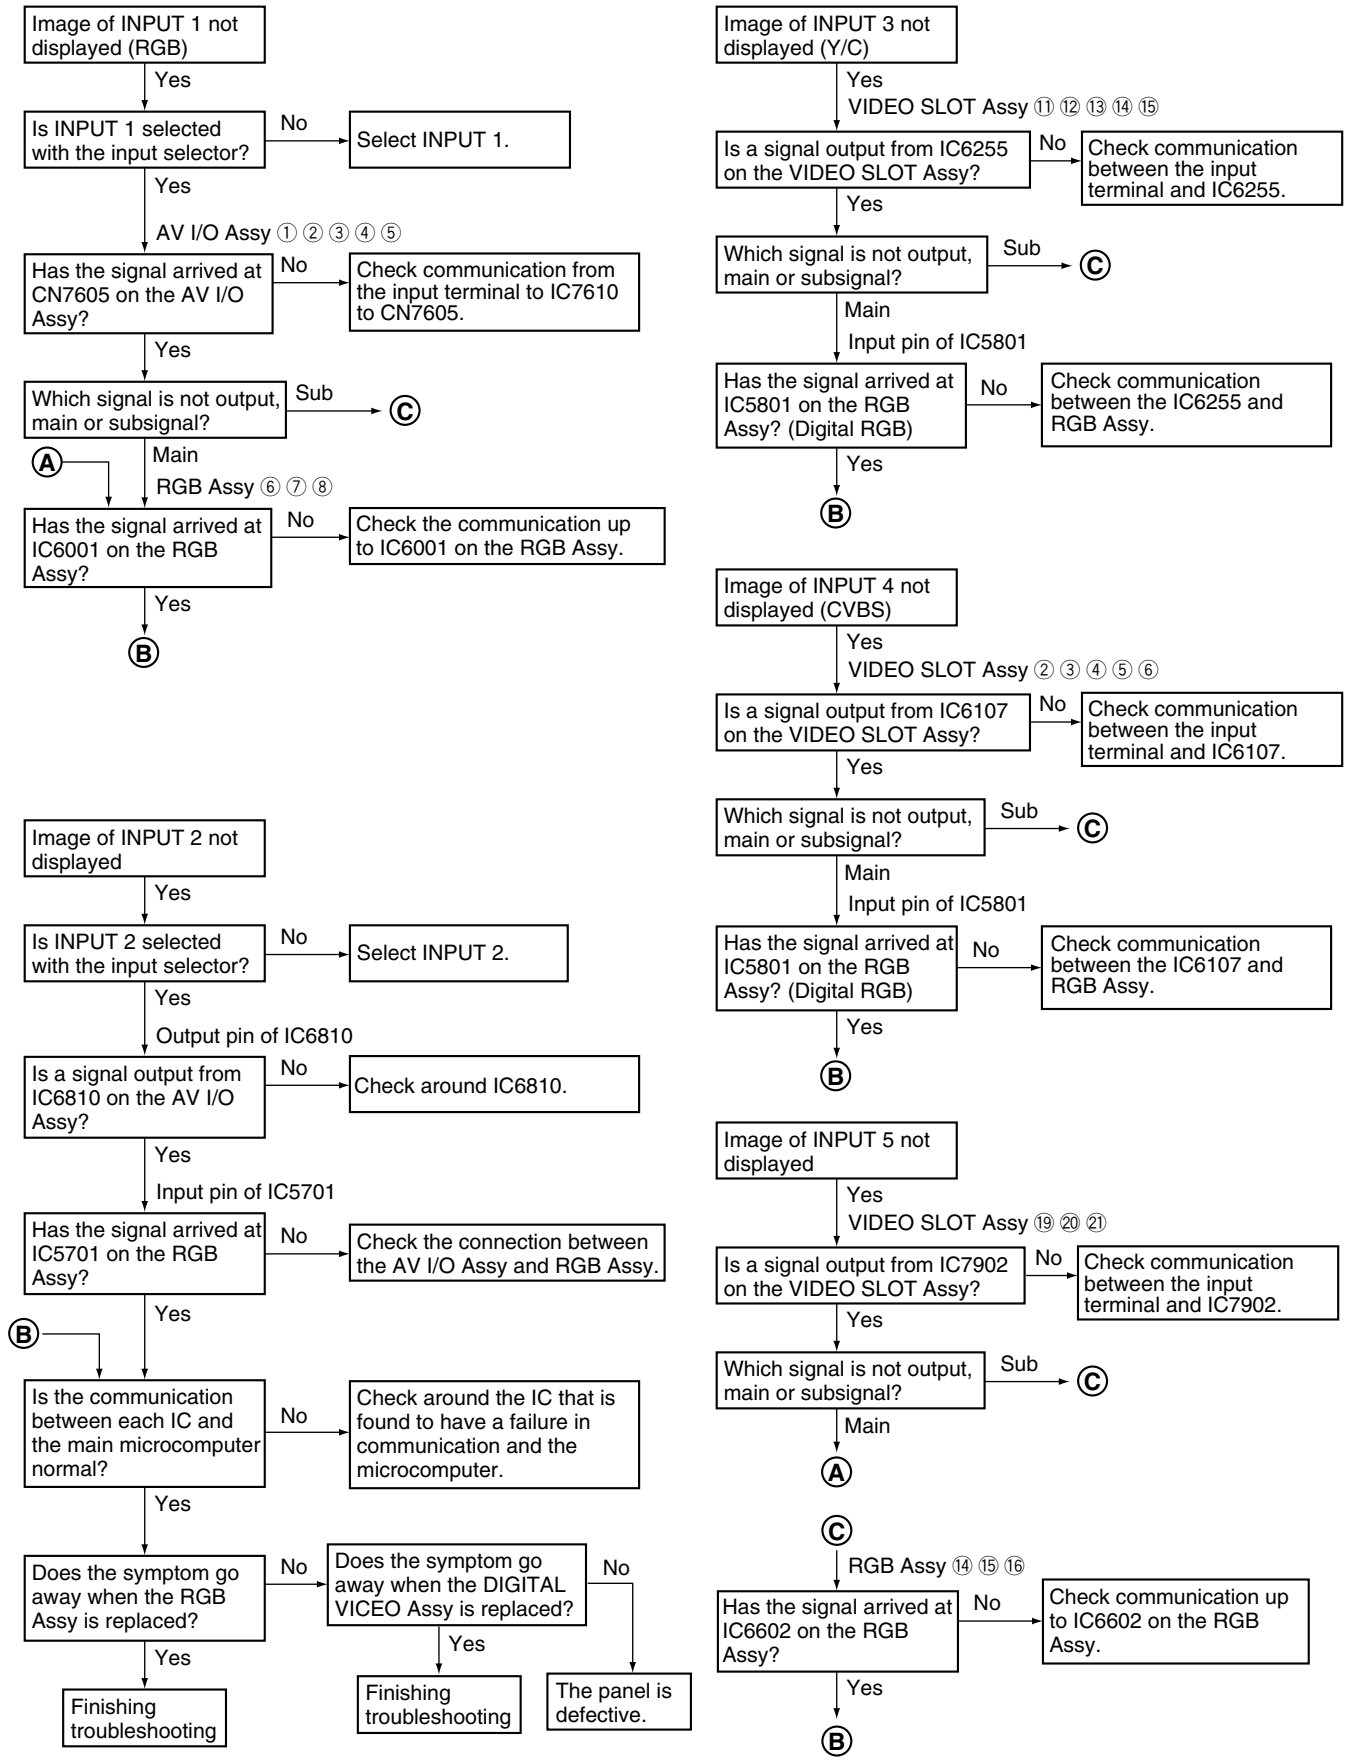
Image of INPUT 1 not displayed (RGB)
Yes
Is INPUT 1 selected with the input selector?
No
Select INPUT 1.
Yes
AV I/O Assy ① ② ③ ④ ⑤
Has the signal arrived at CN7605 on the AV I/O Assy?
No
Check communication from the input terminal to IC7610 to CN7605.
Yes
Which signal is not output, main or subsignal?
Sub
C
A
Main
RGB Assy ⑥ ⑦ ⑧
Has the signal arrived at IC6001 on the RGB Assy?
No
Check the communication up to IC6001 on the RGB Assy.
Yes
B
Image of INPUT 2 not displayed
Yes
Is INPUT 2 selected with the input selector?
No
Select INPUT 2.
Yes
Output pin of IC6810
Is a signal output from IC6810 on the AV I/O Assy?
No
Check around IC6810.
Yes
Input pin of IC5701
Has the signal arrived at IC5701 on the RGB Assy?
No
Check the connection between the AV I/O Assy and RGB Assy.
Yes
B
Is the communication between each IC and the main microcomputer normal?
No
Check around the IC that is found to have a failure in communication and the microcomputer.
Yes
Does the symptom go away when the RGB Assy is replaced?
No
Does the symptom go away when the DIGITAL VICEO Assy is replaced?
No
Yes
Yes
Finishing troubleshooting
Finishing troubleshooting
The panel is defective.
Image of INPUT 3 not displayed (Y/C)
Yes
VIDEO SLOT Assy ⑪ ⑫ ⑬ ⑭ ⑮
Is a signal output from IC6255 on the VIDEO SLOT Assy?
No
Check communication between the input terminal and IC6255.
Yes
Which signal is not output, main or subsignal?
Sub
C
Main
Input pin of IC5801
Has the signal arrived at IC5801 on the RGB Assy? (Digital RGB)
No
Check communication between the IC6255 and RGB Assy.
Yes
B
Image of INPUT 4 not displayed (CVBS)
Yes
VIDEO SLOT Assy ② ③ ④ ⑤ ⑥
Is a signal output from IC6107 on the VIDEO SLOT Assy?
No
Check communication between the input terminal and IC6107.
Yes
Which signal is not output, main or subsignal?
Sub
C
Main
Input pin of IC5801
Has the signal arrived at IC5801 on the RGB Assy? (Digital RGB)
No
Check communication between the IC6107 and RGB Assy.
Yes
B
Image of INPUT 5 not displayed
Yes
VIDEO SLOT Assy ⑲ ⑳ ㉑
Is a signal output from IC7902 on the VIDEO SLOT Assy?
No
Check communication between the input terminal and IC7902.
Yes
Which signal is not output, main or subsignal?
Sub
C
Main
A
C
RGB Assy ⑭ ⑮ ⑯
Has the signal arrived at IC6602 on the RGB Assy?
No
Check communication up to IC6602 on the RGB Assy.
Yes
B

Audio

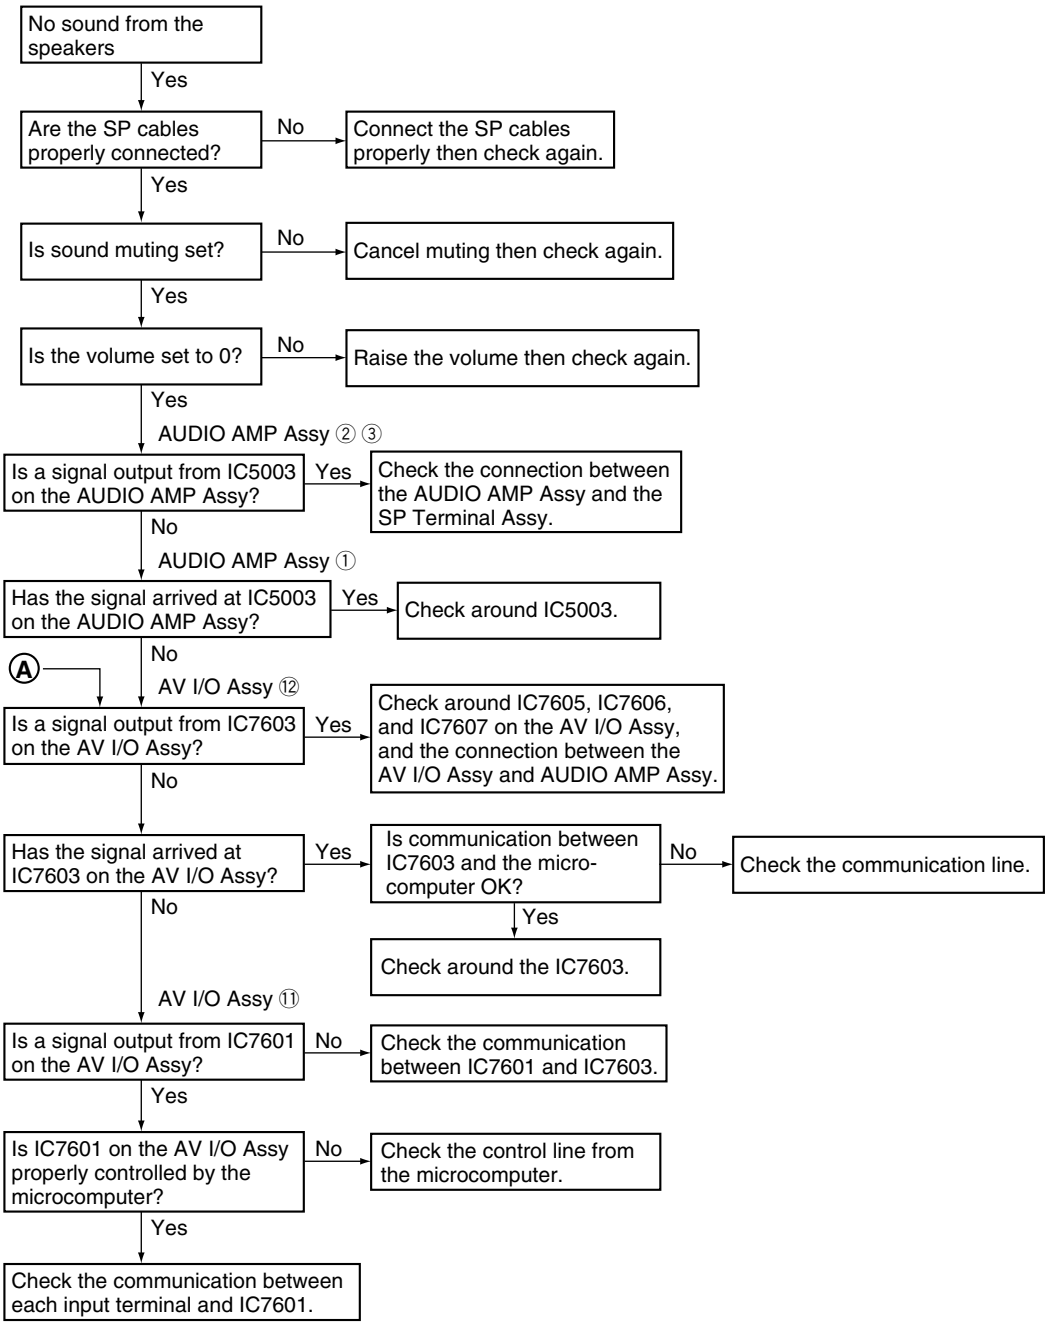
No sound from the speakers
Yes
Are the SP cables properly connected?
No
Connect the SP cables properly then check again.
Yes
Is sound muting set?
No
Cancel muting then check again.
Yes
Is the volume set to 0?
No
Raise the volume then check again.
Yes
AUDIO AMP Assy ② ③
Is a signal output from IC5003 on the AUDIO AMP Assy?
Yes
Check the connection between the AUDIO AMP Assy and the SP Terminal Assy.
No
AUDIO AMP Assy ①
Has the signal arrived at IC5003 on the AUDIO AMP Assy?
Yes
Check around IC5003.
No
Ⓐ
AV I/O Assy ⑫
Is a signal output from IC7603 on the AV I/O Assy?
Yes
Check around IC7605, IC7606, and IC7607 on the AV I/O Assy, and the connection between the AV I/O Assy and AUDIO AMP Assy.
No
Has the signal arrived at IC7603 on the AV I/O Assy?
Yes
Is communication between IC7603 and the micro-computer OK?
No
Check the communication line.
Yes
Check around the IC7603.
No
AV I/O Assy ⑪
Is a signal output from IC7601 on the AV I/O Assy?
No
Check the communication between IC7601 and IC7603.
Yes
Is IC7601 on the AV I/O Assy properly controlled by the microcomputer?
No
Check the control line from the microcomputer.
Yes
Check the communication between each input terminal and IC7601.

7.1.8 CANCELING DETECTION BY THE TRAP SWITCH

• Canceling detection by the TRAP switch

Outline: For video data transmission from the HDMI input to the plasma display, digital signals are used. Therefore, this unit adopts the HDCP (High-bandwidth Digital Content Protection) system for copyright protection. This unit is also provided with a detection switch (TRAP switch) that will prohibit the unit from being turned on again if the rear case of the unit is opened, in order to prevent the panel technology from being leaked out.

Function: To deactivate the detection of the TRAP switch

Purposes: 1. During production of this unit, adjusting with the rear cover opened is possible.
2. During servicing or repairing, diagnoses of the assemblies are possible while the power is on.

Methods: For setting, use RS232C commands:
TSN: Ignore the monitoring of the switch
CTM: Clear the detection log of the switch
TSY: Reactivate monitoring of the switch

Notes:

- The TRAP switch is located on the chassis (see Fig. below).
- Once rear case opening is detected, send the TSN and CTM commands.
- Because the TSN command is not stored in memory, monitoring of the switch can be reactivated by turning the unit off then back on.
- The same setting is possible using the Factory menu.

● **How to enter Factory mode using the remote control unit**

Please refer to the technical documentation (Service knowhow).

● **How to clear the detection log of the TRAP switch**

In the INITIALIZE layer, hold the OSD key on the remote control unit pressed for at least 3 seconds.

● **After a power-down, to cancel detection of the TRAP switch using only the remote control unit, follow the procedures below.**

First, fix the TRAP switch to its depressed position. Set the drive ON/OFF switch in the DIGITAL VIDEO Assy to OFF,
Then enter the Factory mode. Press the MUTE key five times, then hold the DISPLAY key pressed for at least 4 seconds. Set the AC switch on the panel to OFF. The log is also cleared. Then set the drive ON/OFF switch to ON.

Note : This illustration is PDP-5004.

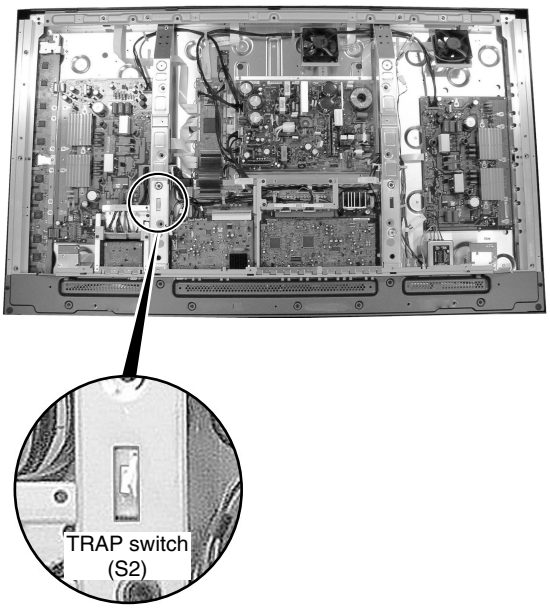

Fig. TRAP switch

7.1.9 DISASSEMBLY

• PDP-5004, PDP-5014 models

1 Rear Case, Front Case Assy

① Remove the grip by removing the four screws.

Note:
When reattaching the grip, be sure to securely tighten the screws.

② Remove the six screws.

③ Remove the seventeen screws.

Note :
When reattaching the rear case, first attach the screws for the holes indicated with ∗1 to place the rear case in the correct position.

④ Remove the rear case.

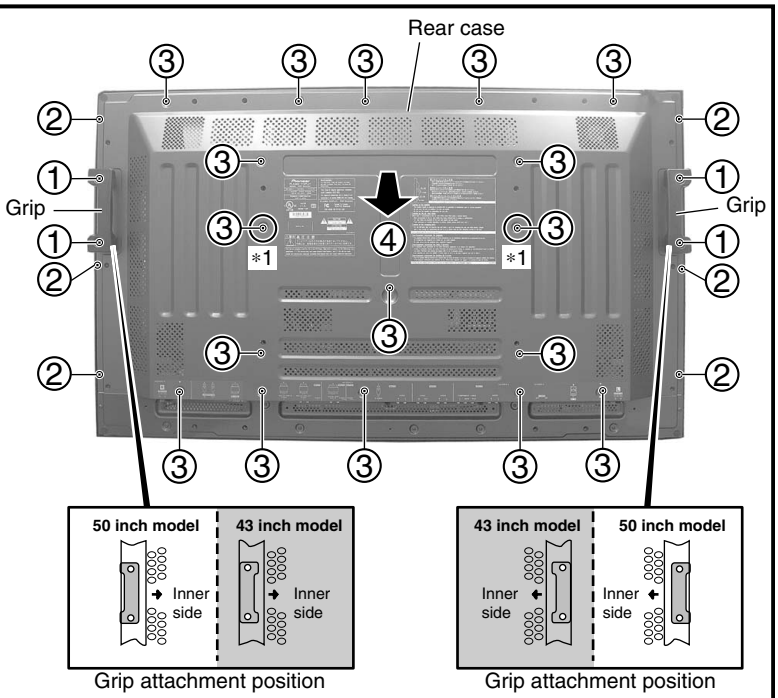

⑤ Remove the three screws.

⑥ Remove the one rivet.

⑦ Remove the lead cover.

⑧ Disconnect the flexible cable.

⑨ Remove the front case Assy.

Note:
If only the front case Assy must be removed, without removing the rear case, perform the steps ⑤ to ⑨.

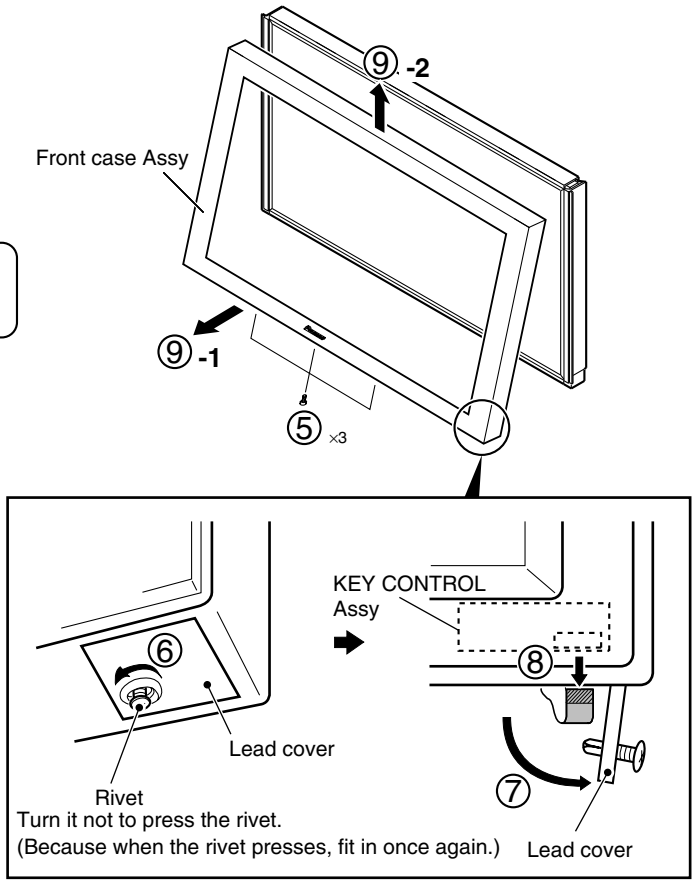

2 Multi Base Section

● Diagnosis of AV I/O Assy

① Remove the Three screws.
② Remove the two hexagon head screws.
③ Remove the one screw.
④ Remove the one pin grommet.
⑤ Remove the AV I/O Assy with the AV I/O I/F Assy.

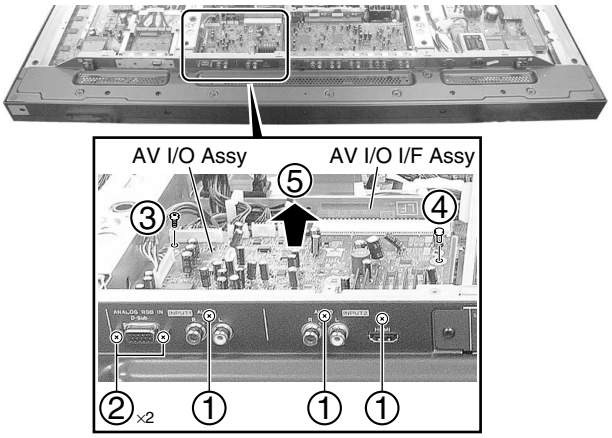

⑥ Remove the AV I/O Assy from the AV I/O I/F Assy.
⑦ Connect the AV I/O Assy to slot of the RGB Assy.

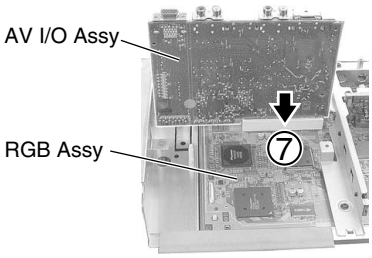

Diagnosis

Note:
The cooling fan may rotate during diagnosis, in the following cases:
- When the rotation speed of the fan has been set to maximum for Integrator mode
- When the ambient temperature surrounding the temperature sensor is 35˚C or higher

● Removing Multi Base Section

① Remove the two Torque screws.
② Remove the COMM SLOT Assy.
③ Remove the two Torque screws.
④ Remove the VIDEO SLOT 2 Assy.
⑤ Remove the nine screws.
⑥ Disconnect the some connectors at need.
⑦ Remove the terminal panel.

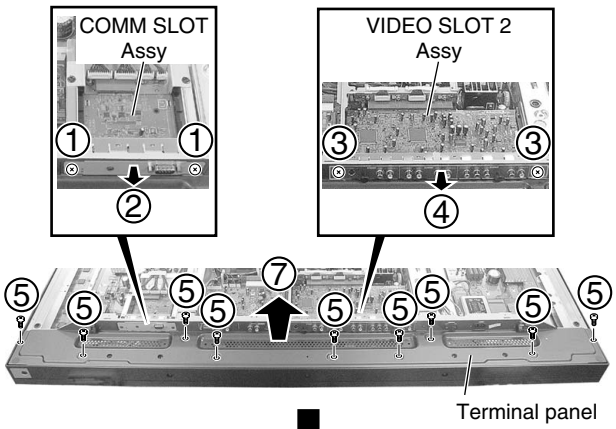

⑧ Remove the two screws.
⑨ Disconnect the some connectors at need.
⑩ Remove the multi base section.

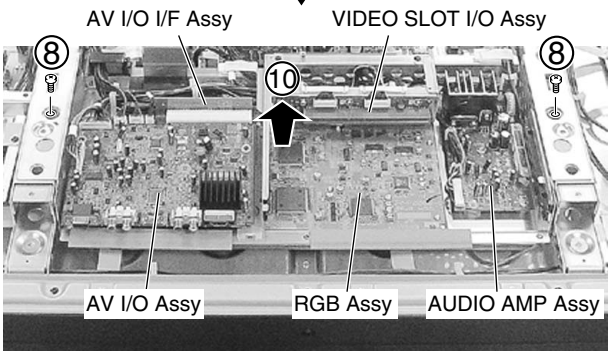

Note:
Some tiny metal shavings may be released from the paring screw section when the VIDEO SLOT I/F Assy is detached from the sheet metal and is reattached to it. Be sure to clear away any shavings or other foreign matter before reattaching it to the RGB Assy.

3 X CONNECTOR A Assy, B Assy, 50 SCAN A Assy and B Assy

● X CONNECTOR A and B Assy

① Remove the enclosure sheet 1.

Note:
Enclosure sheet 1 is attached to comply with the safety standards. Make sure that it will not be shifted or peeled off. If it is peeled off, securely reattach it in its original place.

② Remove the jumper wire by removing the flat clamp.

③ Remove the one nyron rivet.

④ Remove the one screw.

Note:
Be sure to remove this screw. If you don't, the connector on the LED Assy may be damaged.

⑤ Remove the LED Assy.

⑥ Remove the front chassis VR (50M) by removing the five screws.

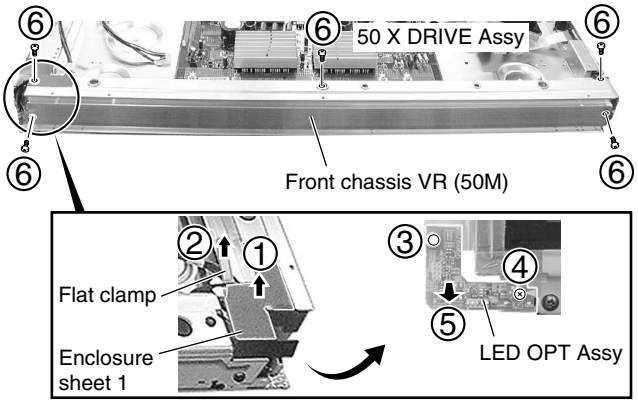

⑦ Remove the seven screws.

⑧ Remove the two spacers.

⑨ Remove the X CONNECTOR A and B Assy.

Note when reassembling the front chassis VR (50M)
Remove or loosen the screws that secure the panel holder in order not to damage the front protect panel Assy.

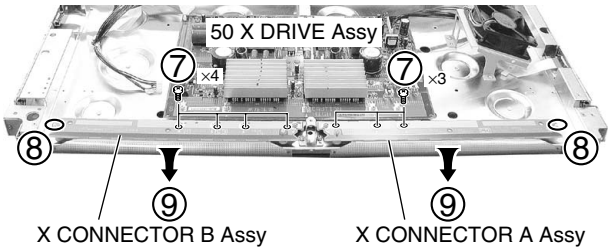

● 50 SCAN A and B Assy

① Remove the one nylon rivet.

② Remove the jumper wire by removing the flat clamp.

③ Remove the one screw.

④ Remove the front chassis VL (50M) by removing the five screws.

⑤ Remove the SCAN heatsink by removing the two screws.

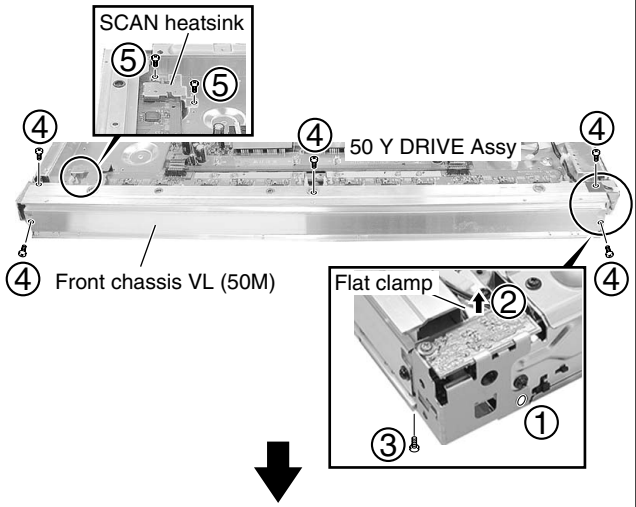

⑥ Remove the six screws.

⑦ Disconnect the two pin connectors.

⑧ Remove the six spacers.

⑨ Remove the 50 SCAN A and B Assy.

Note when reassembling the front chassis VL (50M)
Remove or loosen the screws that secure the panel holder in order not to damage the front protect panel Assy.

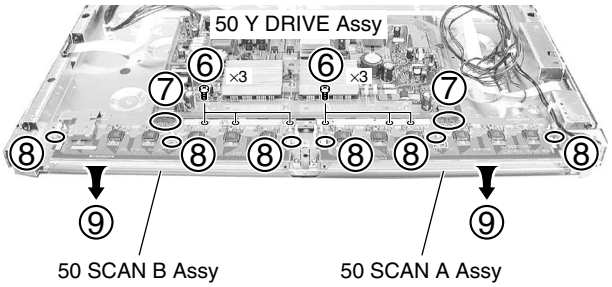

• **PDP-4304, PDP-4314 models**

1 Rear Case, Front Case Assy

① Remove the grip by removing the four screws.

Note:
When reattaching the grip, be sure to securely tighten the screws.

② Remove the six screws.

③ Remove the sixteen screws.

Note :
When reattaching the rear case, first attach the screws for the holes indicated with ∗1 to place the rear case in the correct position.

④ Remove the rear case.

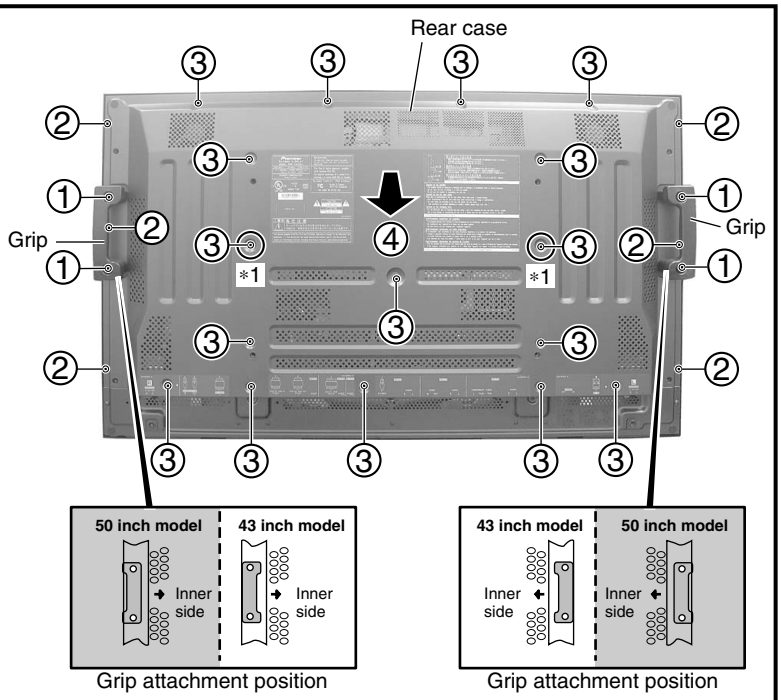

⑤ Remove the three screws.

⑥ Remove the one rivet.

⑦ Remove the lead cover.

⑧ Disconnect the flexible cable.

⑨ Remove the front case Assy.

Note:
If only the front case Assy must be removed, without removing the rear case, perform the steps ⑤ to ⑨.

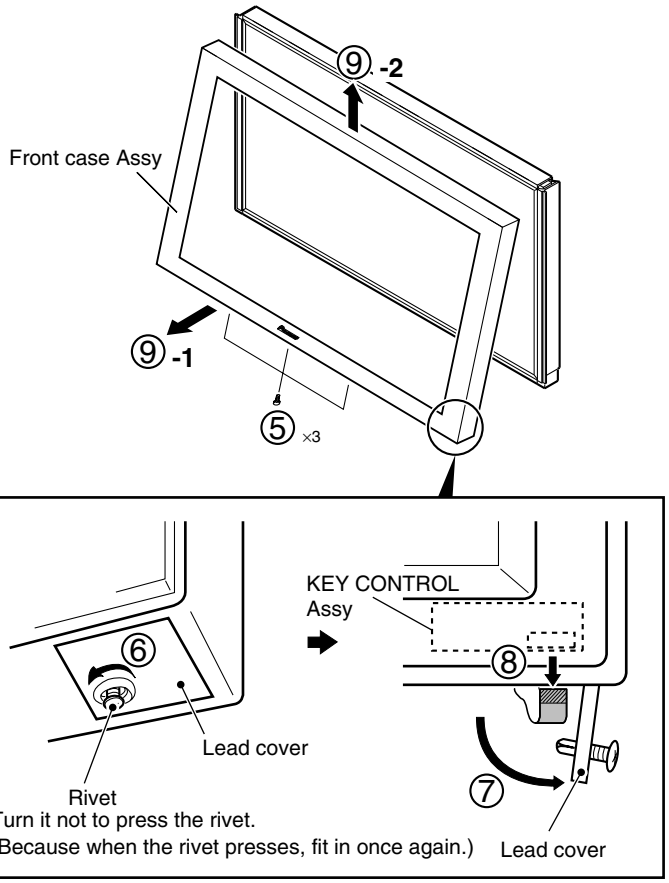

2 Multi Base Section

● Diagnosis of AV I/O Assy

① Remove the three screws.
② Remove the two hexagon head screws.
③ Remove the one screw.
④ Remove the one pin grommet.
⑤ Remove the AV I/O Assy with the AV I/O I/F Assy.

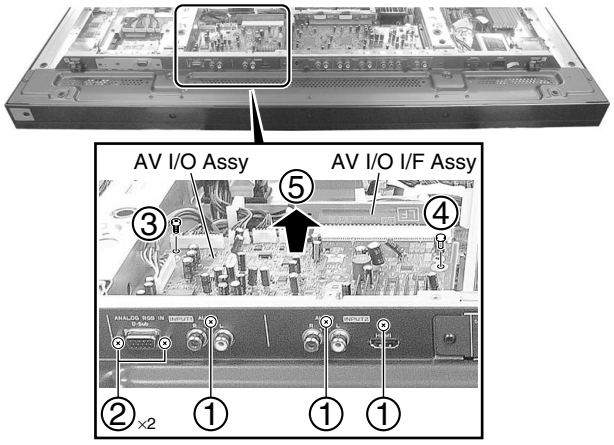

⑥ Remove the AV I/O Assy from the AV I/O I/F Assy.
⑦ Connect the AV I/O Assy to slot of the RGB Assy.

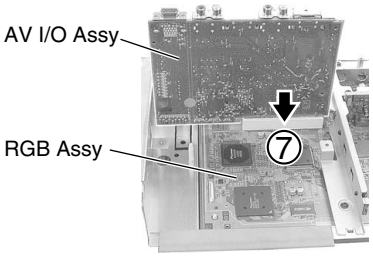

Diagnosis

Note:
The cooling fan may rotate during diagnosis, in the following cases:
- When the rotation speed of the fan has been set to maximum for Integrator mode
- When the ambient temperature surrounding the temperature sensor is 35˚C or higher

● Removing Multi Base Section

① Remove the two Torque screws.
② Remove the COMM SLOT Assy.
③ Remove the two Torque screws.
④ Remove the VIDEO SLOT 2 Assy.
⑤ Remove the nine screws.
⑥ Disconnect the some connectors at need.
⑦ Remove the terminal panel.

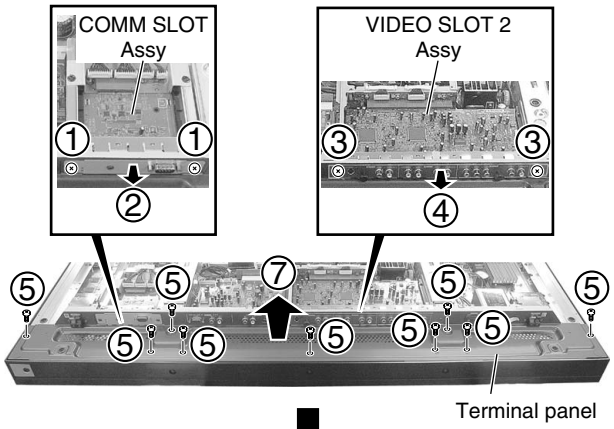

⑧ Remove the two screws.
⑨ Disconnect the some connectors at need.
⑩ Remove the multi base section.

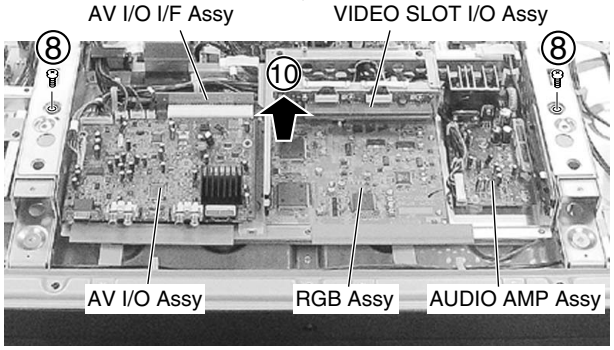

Note:
Some tiny metal shavings may be released from the paring screw section when the VIDEO SLOT I/F Assy is detached from the sheet metal and is reattached to it. Be sure to clear away any shavings or other foreign matter before reattaching it to the RGB Assy.

3 X CONNECTOR A, B Assy, 43 SCAN A, B Assy

● X CONNECTOR A and B Assy

① Remove the enclosure sheet 1.

Note:
Enclosure sheet 1 is attached to comply with the safety standards. Make sure that it will not be shifted or peeled off. If it is peeled off, securely reattach it in its original place.

② Remove the jumper wire by removing the flat clamp.

③ Remove the one nyron rivet.

④ Remove the one screw.

Note:
Be sure to remove this screw. If you don't, the connector on the LED Assy may be damaged.

⑤ Remove the LED Assy.

⑥ Remove the front chassis VR (43M) by removing the five screws.

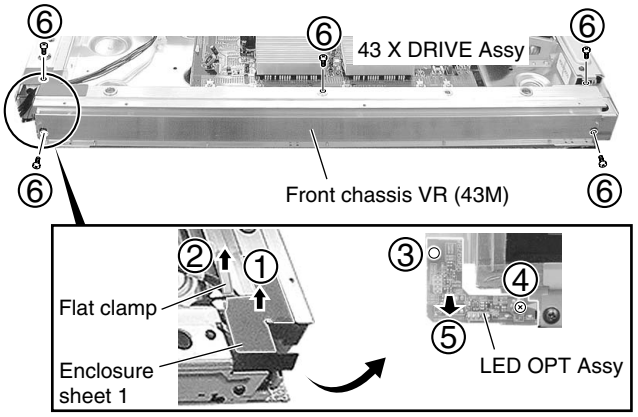

⑦ Remove the seven screws.

⑧ Remove the two spacers.

⑨ Remove the X CONNECTOR A and B Assy.

Note when reassembling the front chassis VR (43M)
Remove or loosen the screws that secure the panel holder in order not to damage the front protect panel Assy.

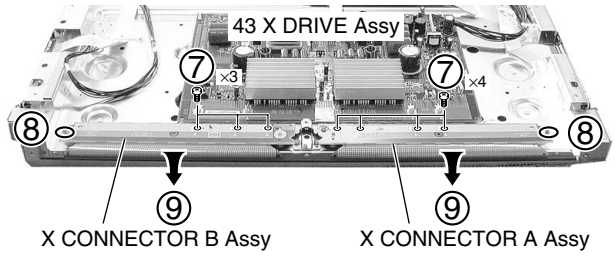

● 43 SCAN A and B Assy

① Remove the one nylon rivet.

② Remove the jumper wire by removing the flat clamp.

③ Remove the one screw.

④ Remove the front chassis VL (43M) by removing the five screws.

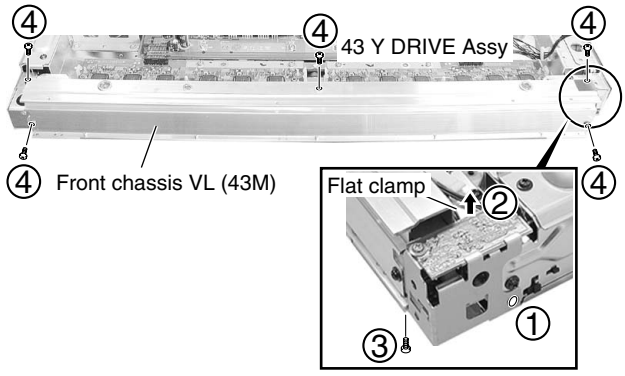

⑤ Remove the four screws.

⑥ Disconnect the two pin connectors.

⑦ Remove the six spacers.

⑧ Remove the 43 SCAN A and B Assy.

Note when reassembling the front chassis VL (43M)
Remove or loosen the screws that secure the panel holder in order not to damage the front protect panel Assy.

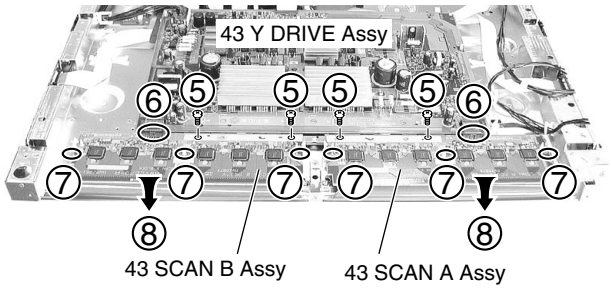

7.2 IC INFORMATIION

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

● **List of IC**

BA10393F, BA10358F, STK795-512A, STK795-513A, STK795-510, STK795-511, AN16021AA-K, SN755866PZP, MBM29PL160BD-75PFTN, M30622F8PGP-K, PEG054A-K, AN5870SB, AD9883AKST-110, SM5301BS, BA7078AF, IC42S32200-7TG-K , MBM29PL3200BE70PFV, CXA3516AR, SII9993CTG100, IC42S16100-7TG-K, LA4625

■ BA10393F (50 X DRIVE ASSY : IC1103), (43 X DRIVE ASSY : IC1103) (50 Y DRIVE ASSY : IC2211), (43 Y DRIVE ASSY : IC2211)

• Comparator IC

● **Pin Arrangement (Top View) / Block Diagram**

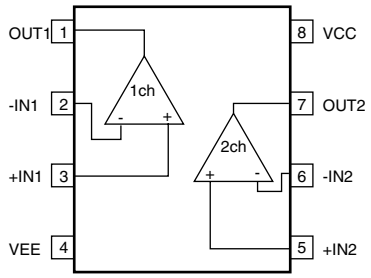

■ BA10358F (50 Y DRIVE ASSY : IC2406), (43 Y DRIVE ASSY : IC2406)

• Ope-Amp. IC

● **Pin Arrangement (Top View) / Block Diagram**

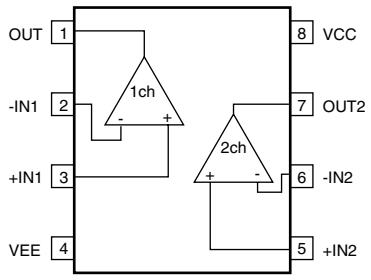

■ STK795-512A (50 X DRIVE ASSY: IC1203, IC1207)

PDP Mask Module IC

● **Block Diagram**

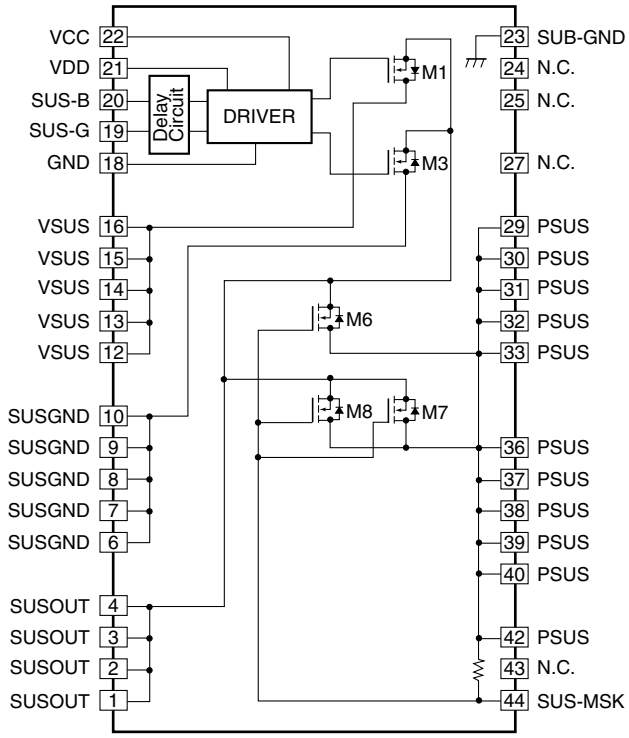

■ STK795-513A (50 Y DRIVE ASSY: IC2303, IC2307)

PDP Mask Module IC

● **Block Diagram**

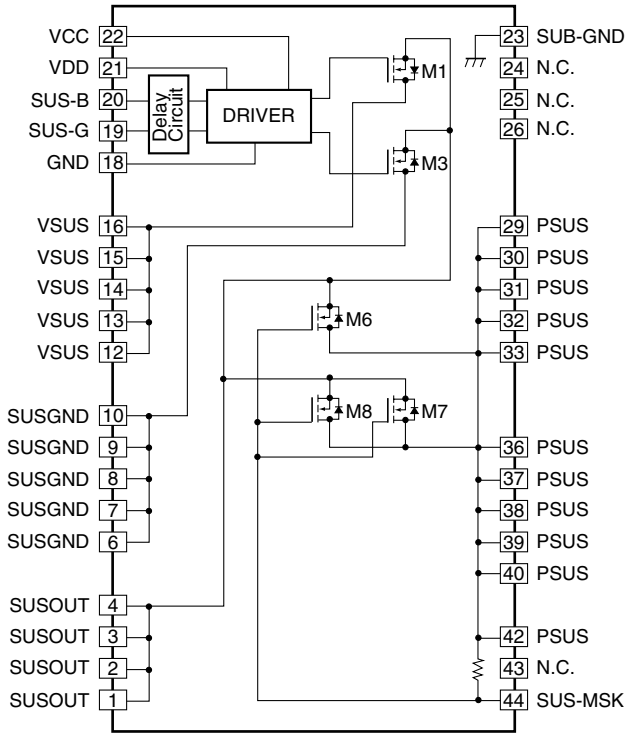

■ STK795-510 (43 X DRIVE ASSY: IC1203, IC1207)

• PDP Mask Module IC

● Block Diagram

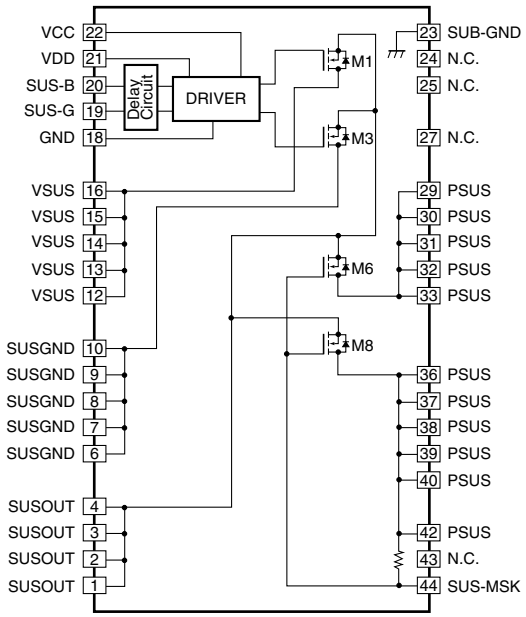

■ STK795-511 (43 Y DRIVE ASSY: IC2303, IC2307)

• PDP Mask Module IC

● Block Diagram

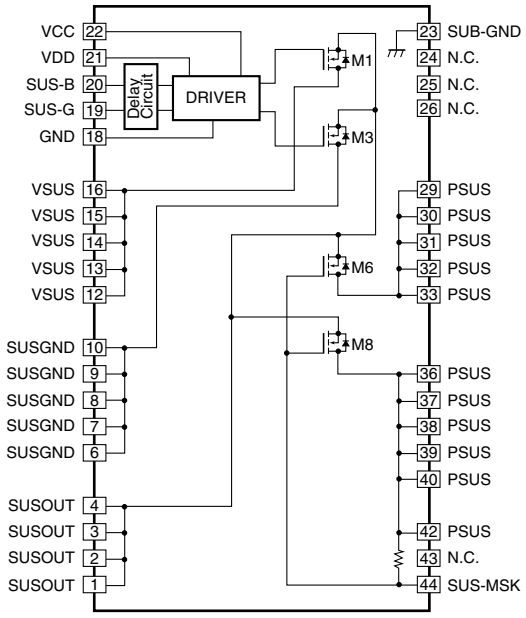

■ AN16021AA-K (50 SCAN A ASSY : IC3001 - IC3006)
(50 SCAN B ASSY : IC3201 - IC3206)

• **Mod Ucom**

● **Pin Arrangement (Top view)**

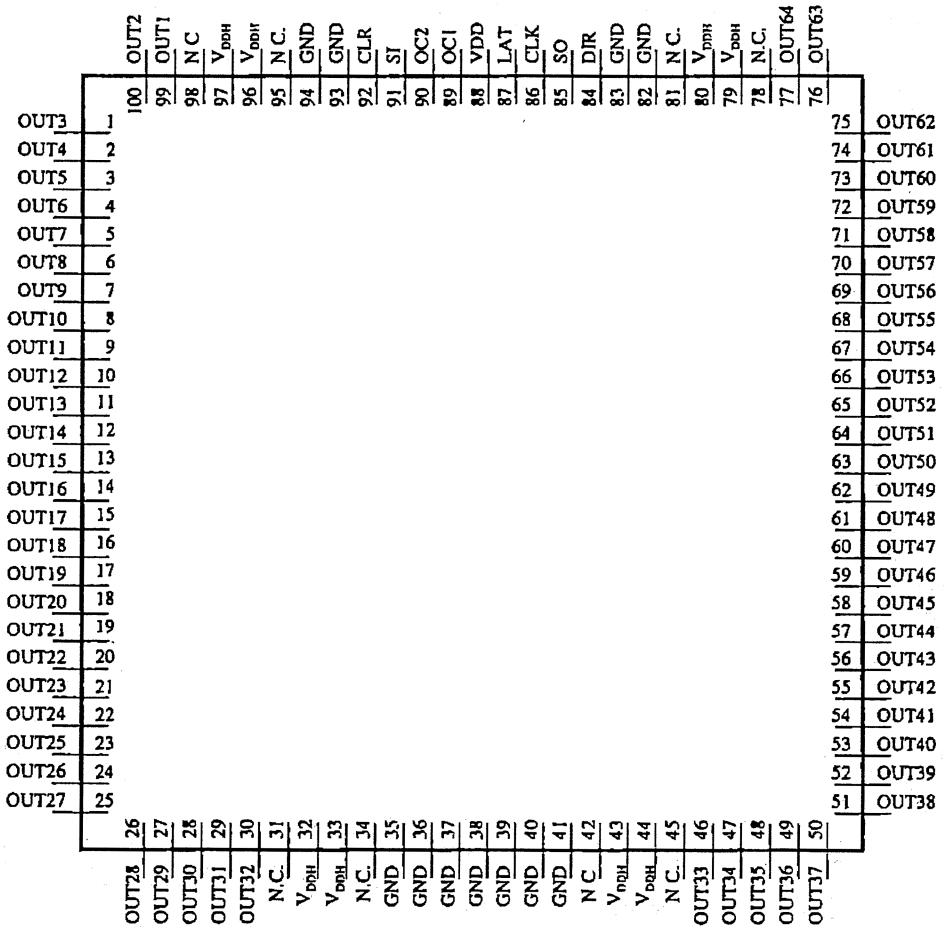

● Pin Function (1/2)

Pin No.	Pin Name	Type	Discription
1	OUT3	Output	High-voltage push-pull output pin
2	OUT4		
3	OUT5		
4	OUT6		
5	OUT7		
6	OUT8		
7	OUT9		
8	OUT10		
9	OUT11		
10	OUT12		
11	OUT13		
12	OUT14		
13	OUT15		
14	OUT16		
15	OUT17		
16	OUT18		
17	OUT19		
18	OUT20		
19	OUT21		
20	OUT22		
21	OUT23		
22	OUT24		
23	OUT25		
24	OUT26		
25	OUT27		
26	OUT28		
27	OUT29		
28	OUT30		
29	OUT31		
30	OUT32		
31	NC	-	Not connected
32	VDDH	Supply	High-voltage circuit supply pin
33	VDDH	Supply	High-voltage circuit supply pin
34	NC	-	Not connected
35	GND	Ground	GND pin
36	GND		
37	GND		
38	GND		
39	GND		
40	GND		
41	GND		
42	NC	-	Not connected
43	VDDH	Supply	High-voltage circuit supply pin
44	VDDH	Supply	High-voltage circuit supply pin
45	NC	-	Not connected
46	OUT33	Output	High-voltage push-pull output pin
47	OUT34		
48	OUT35		
49	OUT36		
50	OUT37		
51	OUT38		
52	OUT39		
53	OUT40		
54	OUT41		
55	OUT42		
56	OUT43		
57	OUT44		
58	OUT45		

● Pin Function (2/2)

Pin No.	Pin Name	Type	Discription
59	OUT46	Output	High-voltage push-pull output pin
60	OUT47		
61	OUT48		
62	OUT49		
63	OUT50		
64	OUT51		
65	OUT52		
66	OUT53		
67	OUT54		
68	OUT55		
69	OUT56		
70	OUT57		
71	OUT58		
72	OUT59		
73	OUT60		
74	OUT61		
75	OUT62		
76	OUT63		
77	OUT64		
78	NC	-	Not connected
79	DDDH	Supply	High-voltage circuit supply pin
80	DDDH	Supply	High-voltage circuit supply pin
81	NC	-	Not connected
82	GND	Ground	GND pin
83	GND	Ground	GND pin
84	DIR	Input	Setup pin of sift register sift direction L: Shift into reverse (SO → SI) H: Shift forward (SI → SO)
85	SO	Input	Serial data input/output pin
86	CLK	Input	Serial clock input pin Fetch SI or SO data to sift register by CLK rise edge
87	LAT	Input	LAT data input pin L: Transfer shft register data to output latch H: Hold data to output latch
88	VDD	Supply	Logic supply pin
89	OC1	Input	Output control pin Control output according to the right truth value table
90	OC2		
91	SI	SI	Input/OutputSerial data input/output pin
92	CLR		All output reset pin CLR pin: L → Normal operation CLR pin: H → All output High
93	GND	Ground	GND pin
94	GND	Ground	GND pin
95	NC	-	Not connected
96	VDDH	Supply	High-voltage circuit supply pin
97	VDDH	Supply	High-voltage circuit supply pin
98	NC	-	Not connected
99	OUT1	Output	High-voltage push-pull output pin
100	OUT2	Output	High-voltage push-pull output pin

OC1	OC2	OUT
L	L	ALL Hi-Z
L	H	DATA
H	L	ALL L
H	H	ALL H

■ SN755866PZP (43 SCAN A ASSY : IC3001 - IC3006)
(43 SCAN B ASSY : IC3201 - IC3206)

• **Mod Ucom**

● **Pin Arrangement (Top view)**

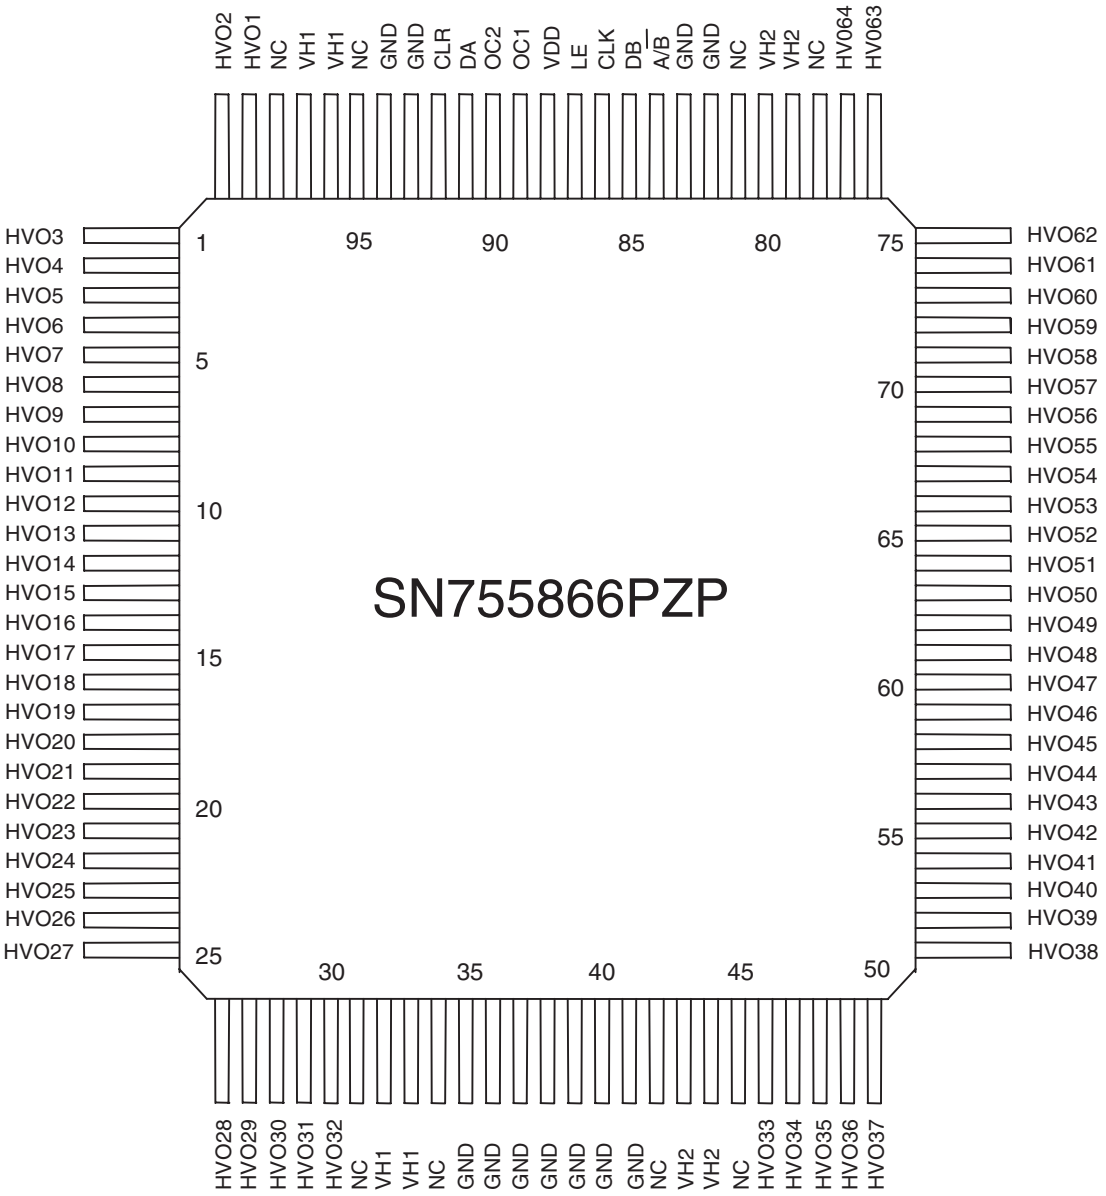
HVO2 HVO1 NC VH1 VH1 NC GND GND CLR DA OC2 OC1 VDD LE CLK DB A/B GND GND NC VH2 VH2 NC HV064 HV063
HVO3 HVO4 HVO5 HVO6 HVO7 HVO8 HVO9 HVO10 HVO11 HVO12 HVO13 HVO14 HVO15 HVO16 HVO17 HVO18 HVO19 HVO20 HVO21 HVO22 HVO23 HVO24 HVO25 HVO26 HVO27
HVO62 HVO61 HVO60 HVO59 HVO58 HVO57 HVO56 HVO55 HVO54 HVO53 HVO52 HVO51 HVO50 HVO49 HVO48 HVO47 HVO46 HVO45 HVO44 HVO43 HVO42 HVO41 HVO40 HVO39 HVO38
1 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95
SN755866PZP
HVO28 HVO29 HVO30 HVO31 HVO32 NC VH1 VH1 NC GND GND GND GND GND GND GND NC VH2 VH2 NC HVO33 HVO34 HVO35 HVO36 HVO37

● **Block Diagram**

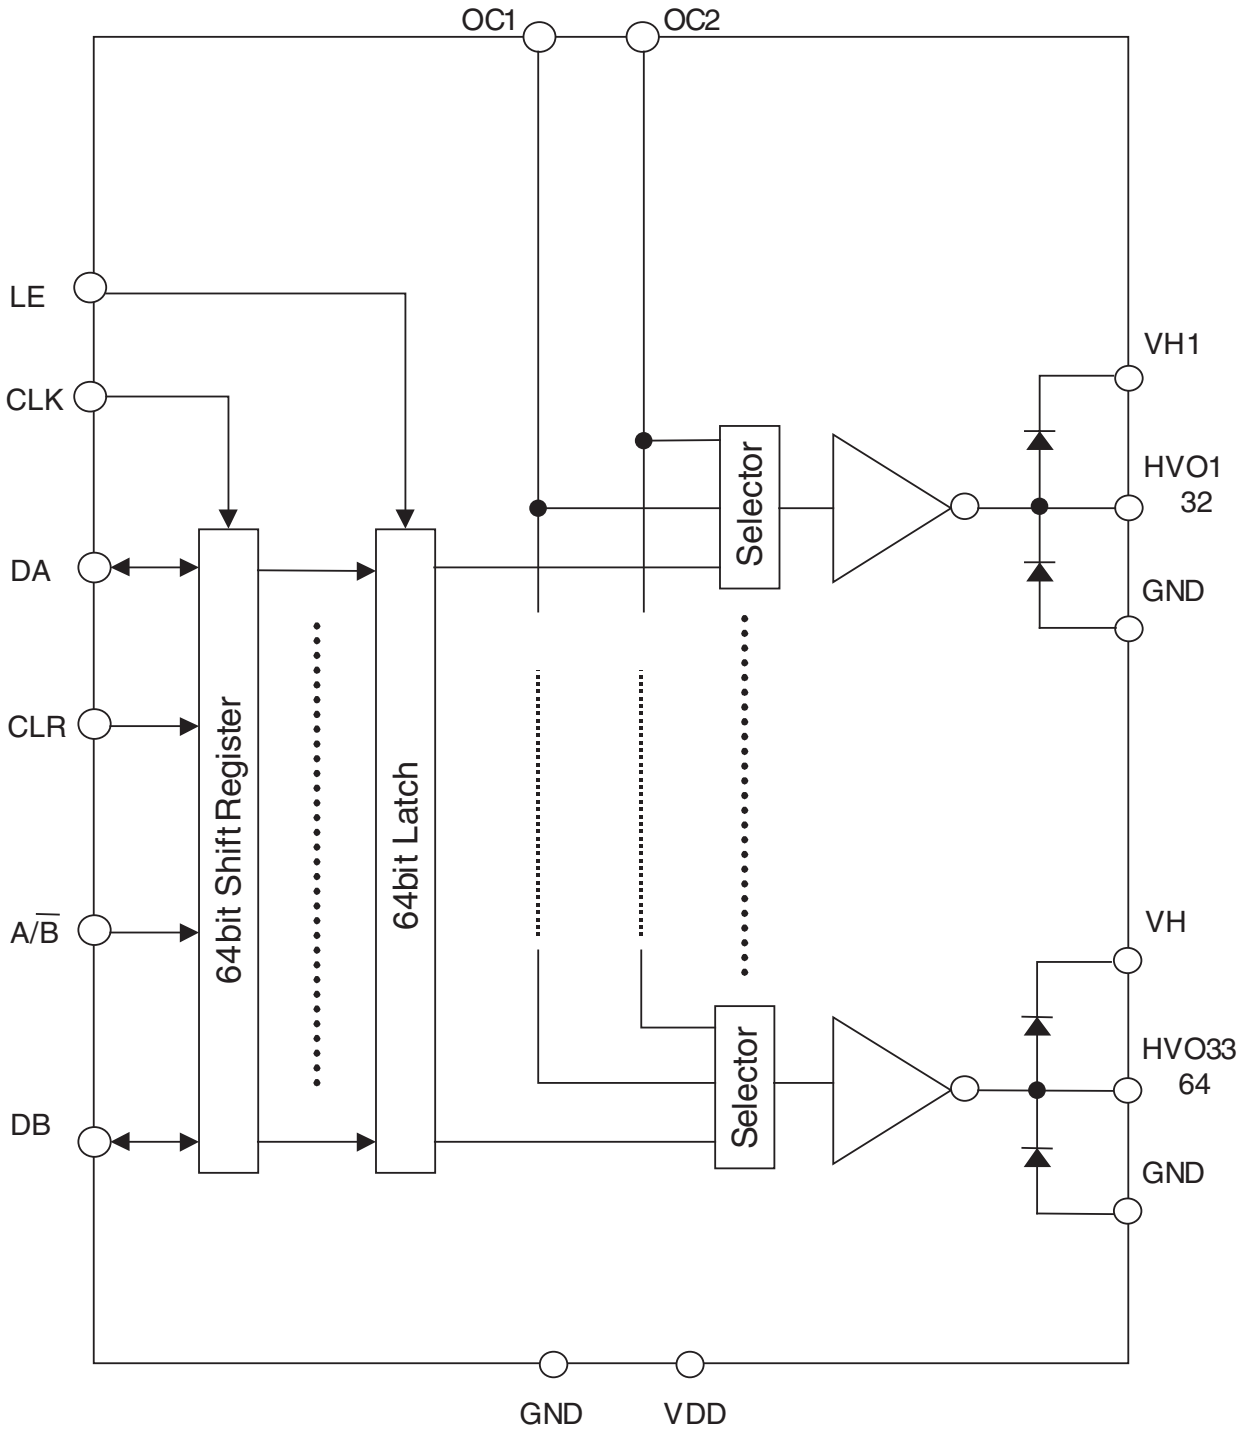

● **Pin Function**

Pin Name	No.	I/O	Function
CLK	86	I	Shift clock.
DA	91	I / O	Serial data input/output of Sift register pin.
DB	85	I / O	Serial data input/output of Sift register pin.
CLR	92	I	"H" level: sift register contents of "L" level.
LE	87	I	"L" level: Slew, "H" level: Larch
A/$\overline{B}$	84	I	Setup pin of sift register sift direction.
OC1	89	I	HVO Output control pin.
OC2	90	I	HVO Output control pin.
HVO	99,100,1-30 46-77	O	High-voltage drive output. (HVO1 - HVO64)
VDD	88	-	Logic power supply.
GND	35-41,82-83 93-94	-	Reference potential 0V (HVO diode anode)
VH1	32,33,96,97	-	HVO1 - 32 High voltage circuit power supply (HVO diode cathode).
VH2	43,44,79,80	-	HVO33 - 64 High voltage circuit power supply (HVO diode cathode).
NC	31,34,41,45 78,81,95,98	-	NC pin

MBM29PL160BD-75PFTN (DIGITAL VIDEO ASSY : IC5305)

• Flash Memory IC

● Block Diagram

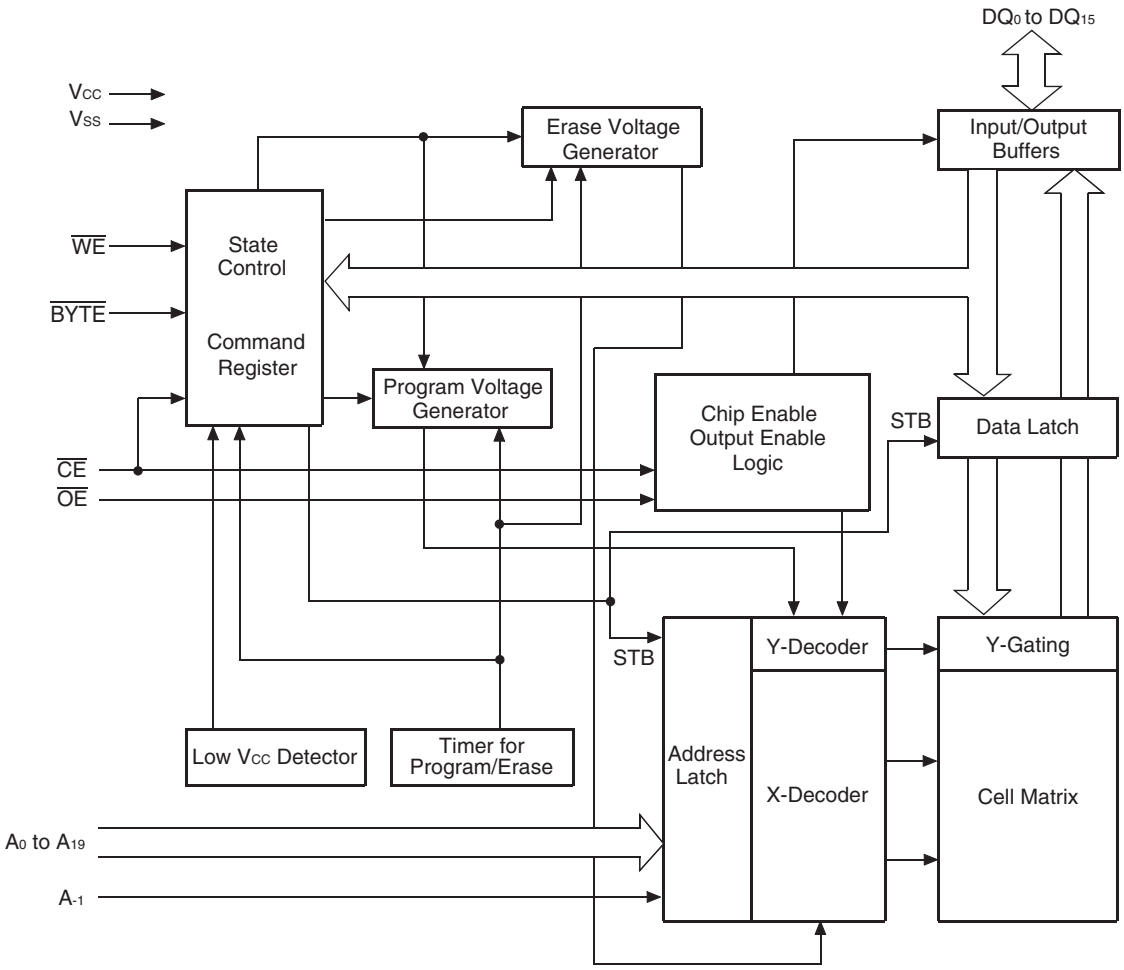

■ M30622F8PGP-K (DIGITAL VIDEO ASSY : IC5201)

• PDP UCOM

● **Pin Function (1/2)**

No.	Pin Name	Function	I/0	ACTIVE
1	VSUS	[D/A] Vofs power control	O	
2	VOFS	[D/A] Vofs power control	O	
3	TXD_IC4	3 serial communication with IC4MANTA - data transmission	O	
4	RXD_IC4	3 serial communication with IC4MANTA - data receive	I	
5	CLK_IC4	3 serial communication with IC4MANTA - clock output	O	
6	BYTE	(GND connection)	I	
7	CNVSS	Pin for processor mode setting (pull-down)	I	
8	NC	NC pin		
9	NC	NC pin		
10	RST_MD	Reset input	I	L
11	XOUT	Output for main clock	O	–
12	VSS	GND	–	–
13	XIN	Input for main clock	I	–
14	VCC1	Power supply = STB3.3V	–	–
15	NMI	(pull-up)	I	
16	REM_B	(Interruption) Remote control signal input (in the panel unit)	I	
17	KEY_B	(Interruption) Key signal input (in the panel unit)	I	
18	RST2	(Interruption) IC4 reset detection	I	L
19	HD_IN_B	HD signal existence distinction	I	L
20	PD_MUTE	Mute the power down output to the POWER SUPPLY Unit	O	L
21	PS_PD	PD signal in the POWER SUPPLY Unit	I	H
22	DCC_PD	PD signal of DC-DC converter	I	H
23	NC	NC pin		
24	NC	NC pin		
25	VD_IN	V. frequency count	I	L
26	EEPRST	EEPROM power SW	O	H
27	E_SCL	IIC clock output for EEPROM	O	
28	E_SDA	IIC data I/O for EEPROM	I/O	
29	TXD	Communication with flash ROM writer - data transmission	O	
30	RXD	Communication with flash ROM writer - data receive	I	
31	SCLK	Communication with flash ROM writer - clock input	I	
32	BUSY	Communication with flash ROM writer - busy output	O	
33	TXD0	UART communication with main UCOM (external PC) - data transmission	O	
34	RXD0	UART communication with main UCOM (external PC) - data receive	I	
35	NC	NC pin		
36	REQ_MD	Communication request to the main UCOM	O	H
37	PSW_D	Mute of DC-DC converter	O	H
38	WE_IC4	In IC4 (MANTA) rewriting, control for communication path switch	O	H
39	EPM	Setting pin for flash rewriting mode (pull-down)	I	
40	IC4_RST	IC4 forced reset	O	L
41	IC4_CE	Enable for IC4 communication	O	L
42	IC4_BUSY	Busy input for IC4 communication	I	H
43	REQ_IC4	Communication request from the IC4	I	H
44	CE	Setting pin for flash rewriting mode (pull-up)	I	
45	PSIZE	Panel size distinction	I	
46	B_SCL	IIC clock output for backup EEPROM	O	H
47	B_SDA	IIC DATA I/O for backup EEPROM	I/O	H
48	ADR_PD	PD signal of address junction	I	H
49	LED_G	Green LED control	O	L
50	LED_R	Red LED control	O	L

● **Pin Function (2/2)**

No.	Pin Name	Function	I/0	ACTIVE
51	DRV_OFF	Driving OFF	O	H
52	RELAY	Power ON control output	O	H
53	POWER	Power ON control input	I	H
54	MR_ST_B	MDR connection detection	I	L
55	OP_DET	Rear case open detection	I	
56	NC	NC pin		
57	PNL_MUTE	Panel mute	I	
58	DITHER	PC/VIDEO dither switch (panel module exclusive use)	I	
59	NC	NC pin		
60	VCC2	Power supply = STB 3.3V	–	–
61	PD_TRG	PD detection	I	L
62	VSS	GND	–	–
63	VH_PD	Vh power decrease PD	I	H
64	YDRV_PD	Y drive PD signal	I	H
65	YRES_PD	Y drive PD signal	I	H
66	YDCDC_PD	PD signal of Y drive DC-DC converter	I	H
67	IC5V_PD	5V power decrease PD	I	H
68	XSUS_PD	X drive PD signal	I	H
69	XDCDC_PD	PD signal of X drive DC-DC converter	I	H
70	XDRV_PD	X drive PD signal	I	H
71	NC	NC pin		
72	MR_AC	MR power monitor	I	H
73	AC_DET	AC power monitor at panel side (same signal as CST1)	I	L
74	DVI_MUTE	Mute of panel link output	O	H
75	A_MUTE	Audio mute	O	H
76	A_NG	Audio NG detection	I	L
77	A_SCL	IIC clock output for audio/others	O	L
78	A_SDA	IIC data I/O for audio/others	I/O	L
79	TRUBASS	TRUBASS ON/OFF	O	H
80	STB_SW	Standby setting of audio amp.	O	L
81	FOCUS	FOCUS ON/OFF	O	H
82	SRS	SRS ON/OFF	O	H
83	DDC_WP	DDCROM write protection	O	H
84	DVI_DET	DVI cable disconnection detection	I	H
85	RSTBTMDS	Reset detection of panel link receiver	I	L
86	L_SYNC	DE omission detection of the panel link	I	L
87	NC	NC pin		
88	NC	NC pin		
89	MASK1	[A/D] Mask display setting	I	
90	MAX_PLS2	[A/D] Brightness setting for panel module	I	
91	MAX_PLS1	[A/D] Brightness setting for panel module	I	
92	TEMP	[A/D] AD input for temperature sensor	I	
93	MODE	[A/D] Operation mode setting	I	
94	AVSS	GND for A/D input	–	–
95	MODEL	[A/D] CMX/HD/TV/WX distinction	I	
96	VREF	Reference voltage for A/D input	–	–
97	AVCC	Power supply for A/D input = STB3.3V	–	–
98	NC	NC pin		
99	NC	NC pin		
100	AMG_MD	Address emergency monitor	I	H

■ PEG054A-K (DIGITAL VIDEO ASSY : IC5401)

• PDP ASIC IC4

● **Pin Function (1/10)**

Ball No.	No.	Pin Name	Function
A1	1	BAI_6	A phase signal input of B video (sixth bit)
B1	2	BAI_5	A phase signal input of B video (fifth bit)
C1	3	BAI_4	A phase signal input of B video (fourth bit)
D1	4	NC	NC pin
E1	5	NC	NC pin
F1	6	BAI_3	A phase signal input of B video (fifth bit)
G1	7	BAI_2	A phase signal input of B video (fourth bit)
H1	8	FIELD	FIELD signal input
J1	9	XSUSB_12	X-Drive control signal output
K1	10	XSUSB_10	X-Drive control signal output
L1	11	XSUSB_4	X-Drive control signal output
M1	12	XSUSB_0	X-Drive control signal output
N1	13	XSUSA_10	X-Drive control signal output
P1	14	XSUSA_4	X-Drive control signal output
R1	15	XSUSA_2	X-Drive control signal output
T1	16	ADRS_0	Address control signal output
U1	17	AD6TXOUT3M	Address LVDS signal output
V1	18	AD6TXCLKOUTM	Address LVDS signal output
W1	19	AD6TXOUT2M	Address LVDS signal output
Y1	20	AD6TXOUT1M	Address LVDS signal output
AA1	21	AD6TXOUT0M	Address LVDS signal output
AB1	22	AD7TXOUT3M	Address LVDS signal output
AC1	23	AD7TXCLKOUTM	Address LVDS signal output
AD1	24	AD7TXOUT2M	Address LVDS signal output
AE1	25	AD7TXOUT1M	Address LVDS signal output
AF1	26	AD7TXOUT0M	Address LVDS signal output
AF2	27	AD7TXOUT0P	Address LVDS signal output
AF3	28	VSSLA	GND
AF4	29	AD3TXOUT3M	Address LVDS signal output
AF5	30	AD3TXCLKOUTM	Address LVDS signal output
AF6	31	AD3TXOUT2M	Address LVDS signal output
AF7	32	AD3TXOUT1M	Address LVDS signal output
AF8	33	AD3TXOUT0M	Address LVDS signal output
AF9	34	AD2TXOUT3M	Address LVDS signal output
AF10	35	AD2TXCLKOUTM	Address LVDS signal output
AF11	36	AD2TXOUT2M	Address LVDS signal output
AF12	37	AD2TXOUT1M	Address LVDS signal output
AF13	38	AD2TXOUT0M	Address LVDS signal output
AF14	39	AD1TXOUT3M	Address LVDS signal output
AF15	40	AD1TXCLKOUTM	Address LVDS signal output
AF16	41	AD1TXOUT2M	Address LVDS signal output
AF17	42	AD1TXOUT1M	Address LVDS signal output
AF18	43	AD1TXOUT0M	Address LVDS signal output
AF19	44	AD0TXOUT3M	Address LVDS signal output
AF20	45	AD0TXCLKOUTM	Address LVDS signal output
AF21	46	AD0TXOUT2M	Address LVDS signal output
AF22	47	AD0TXOUT1M	Address LVDS signal output
AF23	48	AD0TXOUT0M	Address LVDS signal output
AF24	49	VSSL15	GND
AF25	50	AD4TXOUT3P	Address LVDS signal output

● **Pin Function (2/10)**

Ball No.	No.	Pin Name	Function
AF26	51	AD4TXOUT3M	Address LVDS signal output
AE26	52	AD4TXCLKOUTM	Address LVDS signal output
AD26	53	AD4TXOUT2M	Address LVDS signal output
AC26	54	AD4TXOUT1M	Address LVDS signal output
AB26	55	AD4TXOUT0M	Address LVDS signal output
AA26	56	AD5TXOUT3M	Address LVDS signal output
Y26	57	AD5TXCLKOUTM	Address LVDS signal output
W26	58	AD5TXOUT2M	Address LVDS signal output
V26	59	AD5TXOUT1M	Address LVDS signal output
U26	60	AD5TXOUT0M	Address LVDS signal output
T26	61	SDIDBI_N	JTAG signal
R26	62	SDIJTAG	JTAG signal
P26	63	GPIO0_3	Microcomputer macro general-purpose port
N26	64	GPIO0_1	Microcomputer macro general-purpose port
M26	65	YSUSA_4	Y-Drive control signal output
L26	66	YSUSA_10	Y-Drive control signal output
K26	67	YSUSA_14	Y-Drive control signal output
J26	68	YSUSB_4	Y-Drive control signal output
H26	69	YSUSB_6	Y-Drive control signal output
G26	70	YSUSB_10	Y-Drive control signal output
F26	71	YSUSB_14	Y-Drive control signal output
E26	72	NC	NC pin
D26	73	NC	NC pin
C26	74	SCAN_10	Scan control signal output
B26	75	CSIOTXD	Communication with microcomputer
A26	76	CSRD_N	Communication with microcomputer
A25	77	CSCS_N0	Communication with microcomputer
A24	78	EXA16	Flash memory address bus
A23	79	EXA15	Flash memory address bus
A22	80	EXA14	Flash memory address bus
A21	81	EXA13	Flash memory address bus
A20	82	EXA12	Flash memory address bus
A19	83	EXA10	Flash memory address bus
A18	84	EXA7	Flash memory address bus
A17	85	EXA1	Flash memory address bus
A16	86	EXDIO_3	Flash memory data bus
A15	87	EXDIO_5	Flash memory data bus
A14	88	EXDIO_11	Flash memory data bus
A13	89	TRNSEND_O	NC pin
A12	90	RBI_5	B phase signal input of R video (fifth bit)
A11	91	RBI_0	B phase signal input of R video (0 bit)
A10	92	GBI_8	B phase signal input of G video (eighth bit)
A9	93	GBI_2	B phase signal input of G video (second bit)
A8	94	BBI_6	B phase signal input of B video (sixth bit)
A7	95	BBI_0	B phase signal input of B video (0 bit)
A6	96	VDI	VD signal input
A5	97	RAI_5	A phase signal input of R video (fifth bit)
A4	98	DCLKI	CLK input
A3	99	GAI_4	A phase signal input of G video (fourth bit)
A2	100	BAI_9	A phase signal input of B video (ninth bit)

● **Pin Function (3/10)**

Ball No.	No.	Pin Name	Function
B2	101	BAI_8	A phase signal input of B video (eighth bit)
C2	102	BAI_7	A phase signal input of B video (seventh bit)
D2	103	GND	GND
E2	104	NC	NC
F2	105	NC	NC
G2	106	BAI_1	A phase signal input of B video (first bit)
H2	107	XSUSB_15	X-Drive control signal output
J2	108	GND	GND
K2	109	XSUSB_9	X-Drive control signal output
L2	110	XSUSB_3	X-Drive control signal output
M2	111	XSUSA_15	X-Drive control signal output
N2	112	XSUSA_9	X-Drive control signal output
P2	113	GND	GND
R2	114	XSUSA_1	X-Drive control signal output
T2	115	TEST2	Test signal input (Not used)
U2	116	AD6TXOUT3P	Address LVDS signal output
V2	117	AD6TXCLKOUTP	Address LVDS signal output
W2	118	AD6TXOUT2P	Address LVDS signal output
Y2	119	AD6TXOUT1P	Address LVDS signal output
AA2	120	AD6TXOUT0P	Address LVDS signal output
AB2	121	AD7TXOUT3P	Address LVDS signal output
AC2	122	AD7TXCLKOUTP	Address LVDS signal output
AD2	123	AD7TXOUT2P	Address LVDS signal output
AE2	124	AD7TXOUT1P	Address LVDS signal output
AE3	125	VSSLA	GND
AE4	126	AD3TXOUT3P	Address LVDS signal output
AE5	127	AD3TXCLKOUTP	Address LVDS signal output
AE6	128	AD3TXOUT2P	Address LVDS signal output
AE7	129	AD3TXOUT1P	Address LVDS signal output
AE8	130	AD3TXOUT0P	Address LVDS signal output
AE9	131	AD2TXOUT3P	Address LVDS signal output
AE10	132	AD2TXCLKOUTP	Address LVDS signal output
AE11	133	AD2TXOUT2P	Address LVDS signal output
AE12	134	AD2TXOUT1P	Address LVDS signal output
AE13	135	AD2TXOUT0P	Address LVDS signal output
AE14	136	AD1TXOUT3P	Address LVDS signal output
AE15	137	AD1TXCLKOUTP	Address LVDS signal output
AE16	138	AD1TXOUT2P	Address LVDS signal output
AE17	139	AD1TXOUT1P	Address LVDS signal output
AE18	140	AD1TXOUT0P	Address LVDS signal output
AE19	141	AD0TXOUT3P	Address LVDS signal output
AE20	142	AD0TXCLKOUTP	Address LVDS signal output
AE21	143	AD0TXOUT2P	Address LVDS signal output
AE22	144	AD0TXOUT1P	Address LVDS signal output
AE23	145	AD0TXOUT0P	Address LVDS signal output
AE24	146	VSSL15	GND
AE25	147	AD4TXCLKOUTP	Address LVDS signal output
AD25	148	AD4TXOUT2P	Address LVDS signal output
AC25	149	AD4TXOUT1P	Address LVDS signal output
AB25	150	AD4TXOUT0P	Address LVDS signal output

● **Pin Function (4/10)**

Ball No.	No.	Pin Name	Function
AA25	151	AD5TXOUT3P	Address LVDS signal output
Y25	152	AD5TXCLKOUTP	Address LVDS signal output
W25	153	AD5TXOUT2P	Address LVDS signal output
V25	154	AD5TXOUT1P	Address LVDS signal output
U25	155	AD5TXOUT0P	Address LVDS signal output
T25	156	SDITRST_N	JTAG signal
R25	157	RESETX	Reset input
P25	158	GND	GND
N25	159	GPIO0_0	Microcomputer macro general-purpose port
M25	160	YSUSA_5	Y-Drive control signal output
L25	161	YSUSA_11	Y-Drive control signal output
K25	162	YSUSA_15	Y-Drive control signal output
J25	163	GND	GND
H25	164	YSUSB_7	Y-Drive control signal output
G25	165	YSUSB_11	Y-Drive control signal output
F25	166	NC	NC pin
E25	167	NC	NC pin
D25	168	GND	GND
C25	169	SCAN_11	Scan control signal output
B25	170	CSIORXD	Communication with UCOM
B24	171	CSIOSCKI	Communication with UCOM
B23	172	UARTTXD	Communication with UCOM
B22	173	UARTRXD	Communication with UCOM
B21	174	CSWR_N0	Communication with UCOM
B20	175	GND	GND
B19	176	EXA9	Flash memory address bus
B18	177	EXA6	Flash memory address bus
B17	178	EXA0	Flash memory address bus
B16	179	GND	GND
B15	180	EXDIO_6	Flash memory data bus
B14	181	EXDIO_12	Flash memory data bus
B13	182	RBI_9	B phase signal input of R video (ninth bit)
B12	183	RBI_4	B phase signal input of R video (fourth bit)
B11	184	GND	GND
B10	185	GBI_7	B phase signal input of G video (seventh bit)
B9	186	GBI_1	B phase signal input of G video (first bit)
B8	187	BBI_5	B phase signal input of B video (fifth bit)
B7	188	GND	GND
B6	189	HDI	HD signal input
B5	190	RAI_4	A phase signal input of R video (fourth bit)
B4	191	GAI_9	A phase signal input of G video (ninth bit)
B3	192	GAI_3	A phase signal input of G video (third bit)
C3	193	GAI_2	A phase signal input of G video (second bit)
D3	194	VDDD33	3.3V power supply
E3	195	GAI_1	A phase signal input of G video (first bit)
F3	196	GAI_0	A phase signal input of G video (0 bit)
G3	197	NC	NC pin
H3	198	XSUSB_14	X-Drive control signal output
J3	199	VDDIO	3.3V power supply
K3	200	XSUSB_8	X-Drive control signal output

● **Pin Function (5/10)**

Ball No.	No.	Pin Name	Function
L3	201	XSUSB_2	X-Drive control signal output
M3	202	XSUSA_14	X-Drive control signal output
N3	203	XSUSA_8	X-Drive control signal output
P3	204	VDDIO	3.3V power supply
R3	205	XSUSA_0	X-Drive control signal output
T3	206	TEST1	Test signal input (Not used)
U3	207	VSSLA	GND
V3	208	VSSLA	GND
W3	209	VSSLA	GND
Y3	210	VSSLA	GND
AA3	211	VSSLA	GND
AB3	212	VSSLA	GND
AC3	213	VSSLA	GND
AD3	214	VSSLA	GND
AD4	215	VSSLA	GND
AD5	216	VSSLA	GND
AD6	217	VSSLA	GND
AD7	218	VSSLA	GND
AD8	219	VSSLA	GND
AD9	220	VSSLA	GND
AD10	221	VSSLA	GND
AD11	222	VSSLA	GND
AD12	223	VSSLA	GND
AD13	224	VSSLA	GND
AD14	225	VSSLA	GND
AD15	226	VSSLA	GND
AD16	227	VSSLA	GND
AD17	228	VSSLA	GND
AD18	229	VSSLA	GND
AD19	230	VSSLA	GND
AD20	231	VSSLA	GND
AD21	232	VSSLA	GND
AD22	233	VSSLA	GND
AD23	234	VSSLA	GND
AD24	235	VSSLA	GND
AC24	236	VSSLA	GND
AB24	237	VSSLA	GND
AA24	238	VSSLA	GND
Y24	239	VSSLA	GND
W24	240	VSSLA	GND
V24	241	VSSLA	GND
U24	242	VSSLA	GND
T24	243	SDITDO	JTAG signal
R24	244	GPIO0_7	Microcomputer macro general-purpose port
P24	245	VDDIO	3.3V power supply
N24	246	YSUSA_0	Y-Drive control signal output
M24	247	YSUSA_6	Y-Drive control signal output
L24	248	YSUSA_12	Y-Drive control signal output
K24	249	YSUSB_0	Y-Drive control signal output
J24	250	VDDD33	3.3V power supply

● **Pin Function (6/10)**

Ball No.	No.	Pin Name	Function
H24	251	YSUSB_8	Y-Drive control signal output
G24	252	NC	NC pin
F24	253	YSUSB_15	Y-Drive control signal output
E24	254	SCAN_3	Scan control signal output
D24	255	VDDD33	3.3V power supply
C24	256	SCAN_12	Scan control signal output
C23	257	SCAN_13	Scan control signal output
C22	258	SCAN_14	Scan control signal output
C21	259	SCAN_15	Scan control signal output
C20	260	VDDIO	3.3V power supply
C19	261	EXA8	Flash memory address bus
C18	262	EXA5	Flash memory address bus
C17	263	CLKD	CLK input (60MHz)
C16	264	VDDIO	3.3V power supply
C15	265	EXDIO_7	Flash memory data bus
C14	266	EXDIO_13	Flash memory data bus
C13	267	RBI_8	B phase signal input of R video (eighth bit)
C12	268	RBI_3	B phase signal input of R video (third bit)
C11	269	VDDIO	3.3V power supply
C10	270	GBI_6	B phase signal input of G video (sixth bit)
C9	271	GBI_0	B phase signal input of G video (0 bit)
C8	272	BBI_4	B phase signal input of B video (fourth bit)
C7	273	VDDIO	3.3V power supply
C6	274	RAI_9	A phase signal input of R video (ninth bit)
C5	275	RAI_3	A phase signal input of R video (third bit)
C4	276	GAI_8	A phase signal input of G video (eighth bit)
D4	277	GAI_7	A phase signal input of G video (seventh bit)
E4	278	GAI_6	A phase signal input of G video (sixth bit)
F4	279	GAI_5	A phase signal input of G video (fifth bit)
G4	280	VCMP	GND
H4	281	XSUSB_13	X-Drive control signal output
J4	282	XSUSB_11	X-Drive control signal output
K4	283	XSUSB_7	X-Drive control signal output
L4	284	XSUSB_1	X-Drive control signal output
M4	285	XSUSA_13	X-Drive control signal output
N4	286	XSUSA_7	X-Drive control signal output
P4	287	XSUSA_3	X-Drive control signal output
R4	288	ADRS_3	Address control signal output
T4	289	TESTAN	Test signal input (Not used)
U4	290	VDDLA	3.3V power supply
V4	291	VDDLA	3.3V power supply
W4	292	VDDLA	3.3V power supply
Y4	293	VDDLA	3.3V power supply
AA4	294	VDDLA	3.3V power supply
AB4	295	VDDLA	3.3V power supply
AC4	296	VDDLA	3.3V power supply
AC5	297	VDDLA	3.3V power supply
AC6	298	VDDLA	3.3V power supply
AC7	299	VDDLA	3.3V power supply
AC8	300	VDDLA	3.3V power supply

● **Pin Function (7/10)**

Ball No.	No.	Pin Name	Function
AC8	300	VDDLA	3.3V power supply
AC9	301	VDDLA	3.3V power supply
AC10	302	VDDLA	3.3V power supply
AC11	303	VDDLA	3.3V power supply
AC12	304	VDDLA	3.3V power supply
AC13	305	VDDLA	3.3V power supply
AC14	306	VDDBG	3.3V power supply
AC15	307	VDDLA	3.3V power supply
AC16	308	VDDLA	3.3V power supply
AC17	309	VDDLA	3.3V power supply
AC18	310	VDDLA	3.3V power supply
AC19	311	VDDLA	3.3V power supply
AC20	312	VDDLA	3.3V power supply
AC21	313	VDDLA	3.3V power supply
AC22	314	VDDLA	3.3V power supply
AC23	315	VDDLA	3.3V power supply
AB23	316	VDDLA	3.3V power supplyv
AA23	317	VDDLA	3.3V power supply
Y23	318	VDDLA	3.3V power supply
W23	319	VDDLA	3.3V power supply
V23	320	VDDLA	3.3V power supply
U23	321	VDDLA	3.3V power supply
T23	322	SDITDI	JTAG signal
R23	323	GPIO0_6	Microcomputer macro general-purpose port
P23	324	GPIO0_2	Microcomputer macro general-purpose port
N23	325	YSUSA_1	Y-Drive control signal output
M23	326	YSUSA_7	Y-Drive control signal output
L23	327	YSUSA_13	Y-Drive control signal output
K23	328	YSUSB_1	Y-Drive control signal output
J23	329	YSUSB_5	Y-Drive control signal output
H23	330	YSUSB_9	Y-Drive control signal output
G23	331	VCMP	GND
F23	332	SCAN_0	Scan control signal output
E23	333	SCAN_4	Scan control signal output
D23	334	SCAN_7	Scan control signal output
D22	335	SCAN_8	Scan control signal output
D21	336	SCAN_9	Scan control signal output
D20	337	EXA11	Flash memory address bus
D19	338	EXA19	Flash memory address bus
D18	339	EXA4	Flash memory address bus
D17	340	EXDIO_0	Flash memory data bus
D16	341	EXDIO_4	Flash memory data bus
D15	342	EXDIO_8	Flash memory data bus
D14	343	EXDIO_14	Flash memory data bus
D13	344	RBI_7	B phase signal input of R video (seventh bit)
D12	345	RBI_2	B phase signal input of R video (second bit)
D11	346	GBI_9	B phase signal input of G video (ninth bit)
D10	347	GBI_5	B phase signal input of G video (fifth bit)
D9	348	BBI_9	B phase signal input of B video (ninth bit)
D8	349	BBI_3	B phase signal input of B video (tenth bit)

● **Pin Function (8/10)**

Ball No.	No.	Pin Name	Function
D7	350	DEI	DE signal input
D6	351	RAI_8	A phase signal input of R video (eighth bit)
D5	352	RAI_2	A phase signal input of R video (second bit)
E5	353	RAI_1	A phase signal input of R video (first bit)
F5	354	RAI_0	A phase signal input of R video (0 bit)
G5	355	BAI_0	A phase signal input of B video (0 bit)
H5	356	VSS15	GND
J5	357	VDDHR	3.3V power supply
K5	358	XSUSB_6	X-Drive control signal output
L5	359	VSSD15	GND
M5	360	XSUSA_12	X-Drive control signal output
N5	361	XSUSA_6	X-Drive control signal output
P5	362	VSS15	GND
R5	363	ADRS_2	Address control signal output
T5	364	TESTBN	Test signal input (Not used)
U5	365	VSSL15	GND
V5	366	VSSLA	GND
W5	367	VSSLA	GND
Y5	368	VSSL15	GND
AA5	369	VDDLP	3.3V power supply
AB5	370	VSSL15	GND
AB6	371	VSSLA	GND
AB7	372	VSSLA	GND
AB8	373	VSSL15	GND
AB9	374	VSSLA	GND
AB10	375	VSSLA	GND
AB11	376	VSSL15	GND
AB12	377	VSSLA	GND
AB13	378	VSSLA	GND
AB14	379	REFRIN	Reference current generation
AB15	380	VSSBG	GND
AB16	381	VSSL15	GND
AB17	382	VSSLA	GND
AB18	383	VSSLA	GND
AB19	384	VSSL15	GND
AB20	385	VSSLA	GND
AB21	386	VSSLA	GND
AB22	387	VSSLA	GND
AA22	388	VDDLA	3.3V power supply
Y22	389	VSSL15	GND
W22	390	VSSLA	GND
V22	391	VSSLA	GND
U22	392	VSSL15	GND
T22	393	SDITMS	JTAG signal
R22	394	GPIO0_5	Microcomputer macro general-purpose port
P22	395	VSS15	GND
N22	396	YSUSA_2	Y-Drive control signal output
M22	397	YSUSA_8	Y-Drive control signal output
L22	398	VSSD15	GND
K22	399	YSUSB_2	Y-Drive control signal output

● **Pin Function (9/10)**

Ball No.	No.	Pin Name	Function
J22	400	VDDHL	3.3V power supply
H22	401	VSSD15	GND
G22	402	YSUSB_12	Y-Drive control signal output
F22	403	SCAN_1	Scan control signal output
E22	404	SCAN_5	Scan control signal output
E21	405	SCAN_6	Scan control signal output
E20	406	VSS15	GND
E19	407	EXA18	Flash memory address bus
E18	408	EXA3	Flash memory address bus
E17	409	EXDIO_1	Flash memory data bus
E16	410	VSS15	GND
E15	411	EXDIO_9	Flash memory data bus
E14	412	EXDIO_15	Flash memory data bus
E13	413	RBI_6	B phase signal input of R video (sixth bit)
E12	414	CLKS	CLK input (85MHz)
E11	415	VSS15	GND
E10	416	GBI_4	B phase signal input of G video (fourth bit)
E8	418	BBI_2	B phase signal input of B video (second bit)
E9	417	BBI_8	B phase signal input of B video (eighth bit)
E7	419	VSS15	GND
E6	420	RAI_7	A phase signal input of R video (seventh bit)
F6	421	RAI_6	A phase signal input of R video (sixth bit)
G6	422	APL_DT	APL value trigger input
H6	423	VDD15	1.5V power supply
J6	424	VBB	VBB power monitor in the DRAM
K6	425	XSUSB_5	X-Drive control signal output
L6	426	VDDD15	1.5V power supply
M6	427	XSUSA_11	X-Drive control signal output
N6	428	XSUSA_5	X-Drive control signal output
P6	429	VDD15	1.5V power supply
R6	430	ADRS_1	Address control signal output
T6	431	TESTCN	Test signal input (Not used)
U6	432	VDDL15	1.5V power supply
V6	433	VDDLA	3.3V power supply
W6	434	VDDLA	3.3V power supply
Y6	435	VDDL15	1.5V power supply
AA6	436	VDDLA	3.3V power supply
AA7	437	VDDLA	3.3V power supply
AA8	438	VDDL15	1.5V power supply
AA9	439	VDDLA	3.3V power supply
AA10	440	VDDLA	3.3V power supply
AA11	441	VDDL15	1.5V power supply
AA12	442	VDDLA	3.3V power supply
AA13	443	VDDLA	3.3V power supply
AA14	444	VDDLA	3.3V power supply
AA15	445	VDDLA	3.3V power supply
AA16	446	VDDL15	1.5V power supply
AA17	447	VDDLA	3.3V power supply
AA18	448	VDDLA	3.3V power supply
AA19	449	VDDL15	1.5V power supply

● **Pin Function (10/10)**

Ball No.	No.	Pin Name	Function
AA20	450	VDDLA	3.3V power supply
AA21	451	VDDLA	3.3V power supply
Y21	452	VDDL15	1.5V power supply
W21	453	VDDLA	3.3V power supply
V21	454	VDDLA	3.3V power supply
U21	455	VDDL15	1.5V power supply
T21	456	SDITCK	JTAG signal
R21	457	GPIO0_4	Microcomputer macro general-purpose port
P21	458	VDD15	1.5V power supply
N21	459	YSUSA_3	Y-Drive control signal output
M21	460	YSUSA_9	Y-Drive control signal output
L21	461	VDDD15	1.5V power supply
K21	462	YSUSB_3	Y-Drive control signal output
J21	463	VBB	VBB power monitor in the DRAM
H21	464	VDDD15	1.5V power supply
G21	465	YSUSB_13	Y-Drive control signal output
F21	466	SCAN_2	Scan control signal output
F20	467	VDD15	1.5V power supply
F19	468	EXA17	Flash memory address bus
F18	469	EXA2	Flash memory address bus
F17	470	EXDIO_2	Flash memory data bus
F16	471	VDD15	1.5V power supply
F15	472	EXDIO_10	Flash memory data bus
F14	473	TRNSEND_I	NC pin
F13	474	VDD15	1.5V power supply
F12	475	RBI_1	B phase signal input of R video (first bit)
F11	476	VDD15	1.5V power supply
F10	477	GBI_3	B phase signal input of G video (third bit)
F9	478	BBI_7	B phase signal input of B video (seventh bit)
F8	479	BBI_1	B phase signal input of B video (first bit)
F7	480	VDD15	1.5V power supply

■ AN5870SB (RGB ASSY : IC6402) (AV I/O ASSY : IC7610, IC7613) (VIDEO SLOT 2 ASSY : IC7902)

• Wide Band Analog SW

● Pin Arrangement / Block Diagram

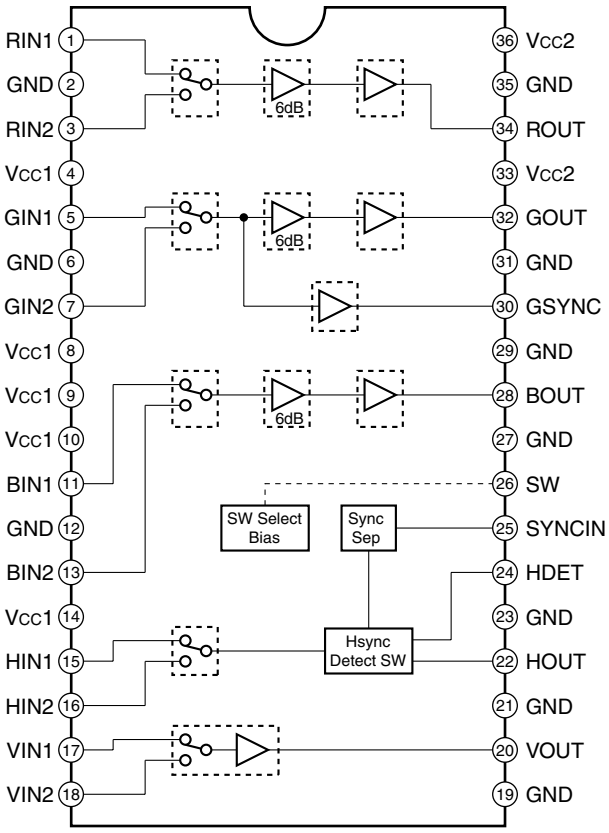

● Pin Function

No.	Name	Function	No.	Name	Function
1	RIN1	R input 1	19	GND	Ground (HV, HSEP, SW)
2	GND	Ground (R)	20	VOUT	V output
3	RIN2	R input 2	21	GND	Ground
4	Vcc1	5V (GSYNC)	22	HOUT	H output
5	GIN1	G input 1	23	GND	Ground
6	GND	Ground (G)	24	HDET	H detect
7	GIN2	G input 2	25	SYNCIN	Sync input
8	Vcc1	5V (R)	26	SW	SW
9	Vcc1	5V (G)	27	GND	Ground
10	Vcc1	5V (B)	28	BOUT	B output
11	BIN1	B input 1	29	GND	Ground (RGB)
12	GND	Ground (B)	30	GSYNC	GSync output
13	BIN2	B input 2	31	GND	Ground (RGB)
14	Vcc1	5V (HV, HSEP, SW)	32	GOUT	G output
15	HIN1	H input 1	33	Vcc2	12V (RGB)
16	HIN2	H input 2	34	ROUT	R output
17	VIN1	V input 1	35	GND	Ground
18	VIN2	V input 2	36	Vcc2	12V (RGB)

AD9883AKST-110 (RGB ASSY : IC6602)

• 110 MSPS Analog Interface

● Pin Arrangement (Top View)

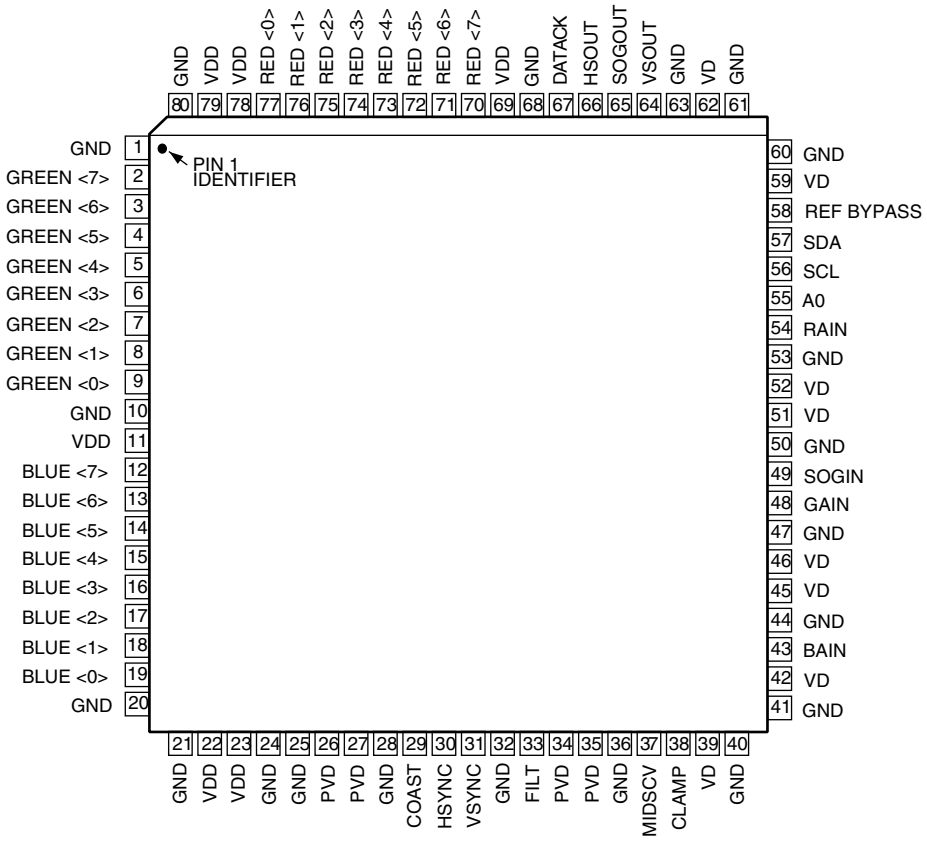

● Block Diagram

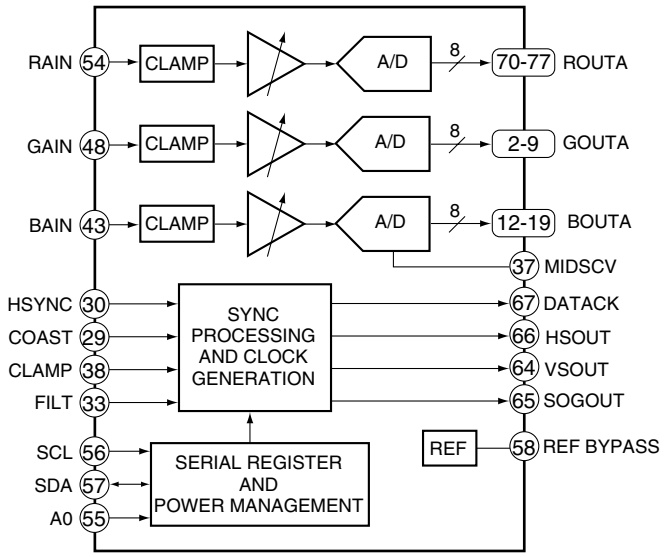

● Pin Function

No.	Pin Name	I/O	Pin Function
1	GND	–	Ground
2	GREEN 7	O	Converter Green output (MSB)
3	GREEN 6	O	Converter Green output
4	GREEN 5	O	Converter Green output
5	GREEN 4	O	Converter Green output
6	GREEN 3	O	Converter Green output
7	GREEN 2	O	Converter Green output
8	GREEN 1	O	Converter Green output
9	GREEN 0	O	Converter Green output
10	GND	–	Ground
11	VDD	–	Power supply (3.3V)
12	BLUE 7	O	Converter Blue output (MSB)
13	BLUE 6	O	Converter Blue output
14	BLUE 5	O	Converter Blue output
15	BLUE 4	O	Converter Blue output
16	BLUE 3	O	Converter Blue output
17	BLUE 2	O	Converter Blue output
18	BLUE 1	O	Converter Blue output
19	BLUE 0	O	Converter Blue output
20	GND	–	Ground
21	GND	–	Ground
22	VDD	–	Power supply (3.3V)
23	VDD	–	Power supply (3.3V)
24	GND	–	Ground
25	GND	–	Ground
26	PVD	–	PLL power supply (3.3V)
27	PVD	–	PLL power supply (3.3V)
28	GND	–	Ground
29	COAST	I	PLL COAST signal input
30	HSYNC	I	Horizontal sync. input
31	VSYNC	I	Vertical sync. input
32	GND	–	Ground
33	FILT	–	External filter connection pin for built-in PLL
34	PVD	–	PLL power supply (3.3V)
35	PVD	–	PLL power supply (3.3V)
36	GND	–	Ground
37	MIDSCV	–	Internal middle scale voltage bias
38	CLAMP	I	Clamp input (External clamp signal)
39	VD	–	Analog power supply (3.3V)
40	GND	–	Ground
41	GND	–	Ground
42	VD	–	Analog power supply (3.3V)
43	BAIN	I	Analog input for converter B
44	GND	–	Ground
45	VD	–	Analog power supply (3.3V)

No.	Pin Name	I/O	Pin Function
46	VD	–	Analog power supply (3.3V)
47	GND	–	Ground
48	GAIN	I	Analog input for converter G
49	SOGIN	I	Input for Sync-on Green
50	GND	–	Ground
51	VD	–	Analog power supply (3.3V)
52	VD	–	Analog power supply (3.3V)
53	GND	–	Ground
54	RAIN	I	Analog input for converter R
55	A0	I	Address input 1 of serial port
56	SCL	I	Data clock (max. 100kHz) of serial port
57	SDA	I/O	Data input/output of serial port
58	REF BYPASS	–	Internal reference bypass
59	VD	–	Analog power supply (3.3V)
60	GND	–	Ground
61	GND	–	Ground
62	VD	–	Analog power supply (3.3V)
63	GND	–	Ground
64	VSOUT	O	VSYNC output (phasing with DATACLK)
65	SOGOUT	O	Sync-on-Green slicer output
66	HSOUT	O	HSYNC output (phasing with DATACLK)
67	DATACLK	O	Data input/output clock
68	GND	–	Ground
69	VDD	–	Power supply (3.3V)
70	RED 7	O	Converter Red output (MSB)
71	RED 6	O	Converter Red output
72	RED 5	O	Converter Red output
73	RED 4	O	Converter Red output
74	RED 3	O	Converter Red output
75	RED 2	O	Converter Red output
76	RED 1	O	Converter Red output
77	RED 0	O	Converter Red output
78	VDD	–	Power supply (3.3V)
79	VDD	–	Power supply (3.3V)
80	GND	–	Ground

SM5301BS (RGB ASSY : IC6601)

• Video Filter

● Block Diagram

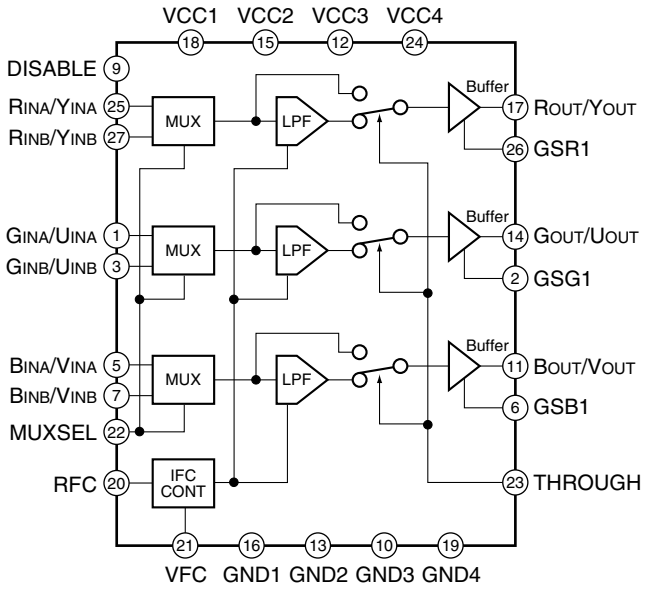

● Pin Arrangement (Top View)

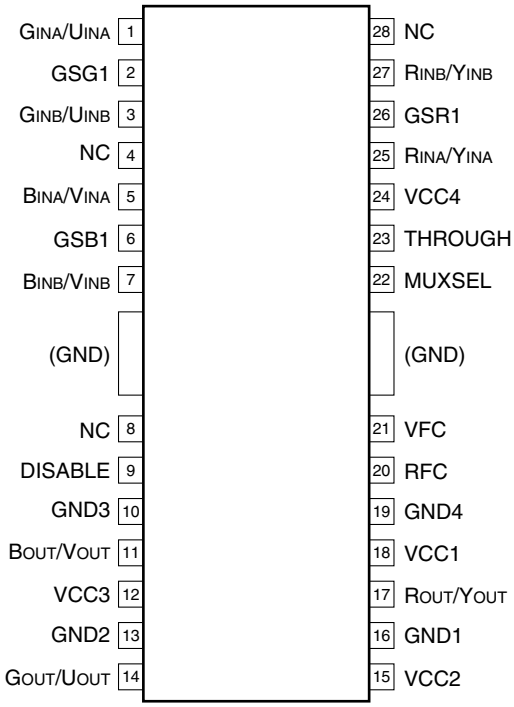

● Pin Function

No.	Pin Name	I/O	Pin Function
1	GINA/UINA	I	Analog GINA or UINA signal input. Sync signal is input on SYNCIN pin.
2	GSG1	I	GOUT/UOUT output buffer gain set input
3	GINB/UINB	I	Analog GINB or UINB signal input. Sync signal is input on SYNCIN pin.
4	(NC)	–	No connection
5	BINA/VINA	I	Analog BINA or VINA signal input. Sync signal is input on SYNCIN pin.
6	GSB1	I	BOUT/VOUT output buffer gain set input
7	BINB/VINB	I	Analog BINB or VINB signal input. Sync signal is input on SYNCIN pin.
8	(NC)	–	No connection
9	DISABLE	I	Power save function. Built-in pull-down resistor. L : Enable H : Disable (Output pins: ROUT/YOUT, GOUT/UOUT, and BOUT/VOUT are high impedance.)
10	GND3	–	Analog ground
11	BOUT/VOUT	O	B/V signal output
12	VCC3	–	Analog 5V supply
13	GND2	–	Analog ground
14	GOUT/UOUT	O	G/U signal output
15	VCC2	–	Analog 5V supply
16	GND1	–	Analog ground
17	ROUT/YOUT	O	R/Y signal output
18	VCC1	–	Analog 5V supply
19	GND4	–	Analog ground
20	RFC	–	LPF (lowpass filter) cutoff frequency setting resistor connection
21	VFC	I	LPF (lowpass filter) cutoff frequency setting voltage input
22	MUXSEL	I	Input select signal. Built-in pull-down resistor. L : XINA pin select H : XINB pin select
23	THROUGH	I	Filter through Built-in pull-down resistor. L : Filter function H : Filter through (buffer only)
24	VCC4	–	Analog 5V supply
25	RINA/YINA	I	Analog RINA or YINA signal input. Sync signal is input on SYNCIN pin.
26	GSR1	I	ROUT/YOUT output buffer gain set input
27	RINB/YINB	I	Analog RINB or YINB signal input. Sync signal is input on SYNCIN pin.
28	(NC)	–	No connection

■ BA7078AF (RGB ASSY : IC6604)

• Synchonous seperation IC

● Block Diagram

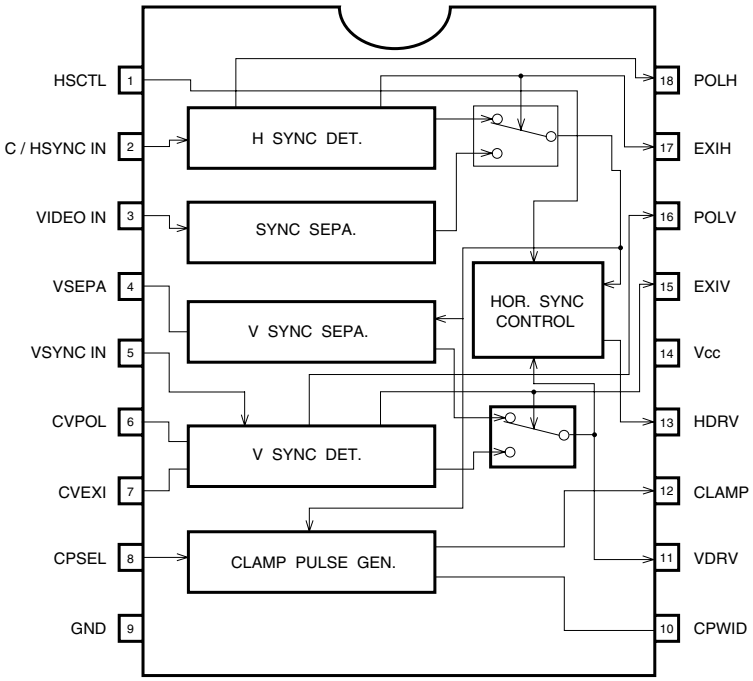

● Pin Function

No.	Pin Name	Pin Function
1	HSCTL	HDRV output Used to select whether to output the VDRV section of the HDRV output signal. High : VDRV section of HDRV is output Low : VDRV section of HDRV is not output
2	C/HSYNC IN	Composite sync / H SYNC input Input either the composite synchronization signal or the horizontal synchronization signal. Input is clamped, and is initiated by capacitor coupling.
3	VIDEO IN	SYNC ON VIDEO input Inputs the SYNC ON VIDEO signal(green). Input is sink chip clamped. Input is initiated by capacitor coupling.
4	VSEPA	f-V conversion Converts the horizontal synchronization signal frequency into a voltage. The voltage generated is proportional to the frequency of the horizontal synchronization signal. Attach a 0.56 μF capacitor between the ground pins.
5	VSYNC IN	V SYNC input Inputs the vertical synchronization signal.
6	CVPOL	Vertical polarity integration Integrates the vertical synchronization signal polarity detection circuit. Attach a 1.5 μF capacitor between this pin and the ground.
7	CVEXI	Vertical existence integration Integrates the vertical synchronization signal existence detection circuit. Attach a 1 μF capacitor between this pin and the ground.
8	CPSEL	Setting the clamp position Used to set the clamp pulse generation position to either the front or back edge of HSYNC High : The front edge is the generation position Open : Composite / H SYNC IN : The front edge is the generation position VIDEO IN : The back edge is the generation position Low : The back edge is the generation position
9	GND	Ground
10	CPWID	Setting the clamp pulse width Sets the clamp pulse width according to the attached time constant. Attach a resistor between this pin and VCC and, a capacitor between this pin and GND. When R = 3.9kΩ and C = 100pF, pulse width is approximately 400 ns. Set the resistor to register an abnormality at 1kΩ.
11	VDRV	VDRV output Outputs the vertical synchronization signal. The output signal has positive polarity.
12	CLAMP	Clamp output Outputs the clamp pulse generated from the vertical synchronization signal. The output signal has a positive polarity.
13	HDRV	HDRV output Outputs the clamp pulse generated from the horizontal synchronization signal. The output signal has positive polarity.
14	Vcc	Power supply
15	EXIV	Vertical existence output Indecates whether the vertical synchronization signal exists.
16	POLV	Vertical polarity output Indicates the polarity of the vertical synchronization signal.
17	EXIH	Horizontal existence output Indicates whether the horizontal synchronization signal exists.
18	POLH	Horizontal polarity output Indicates the polarity of the horizontal synchronization signal.

IC42S32200-7TG-K (RGB ASSY : IC7001, IC7002)

• Synchronous DRAM

● Block Diagram

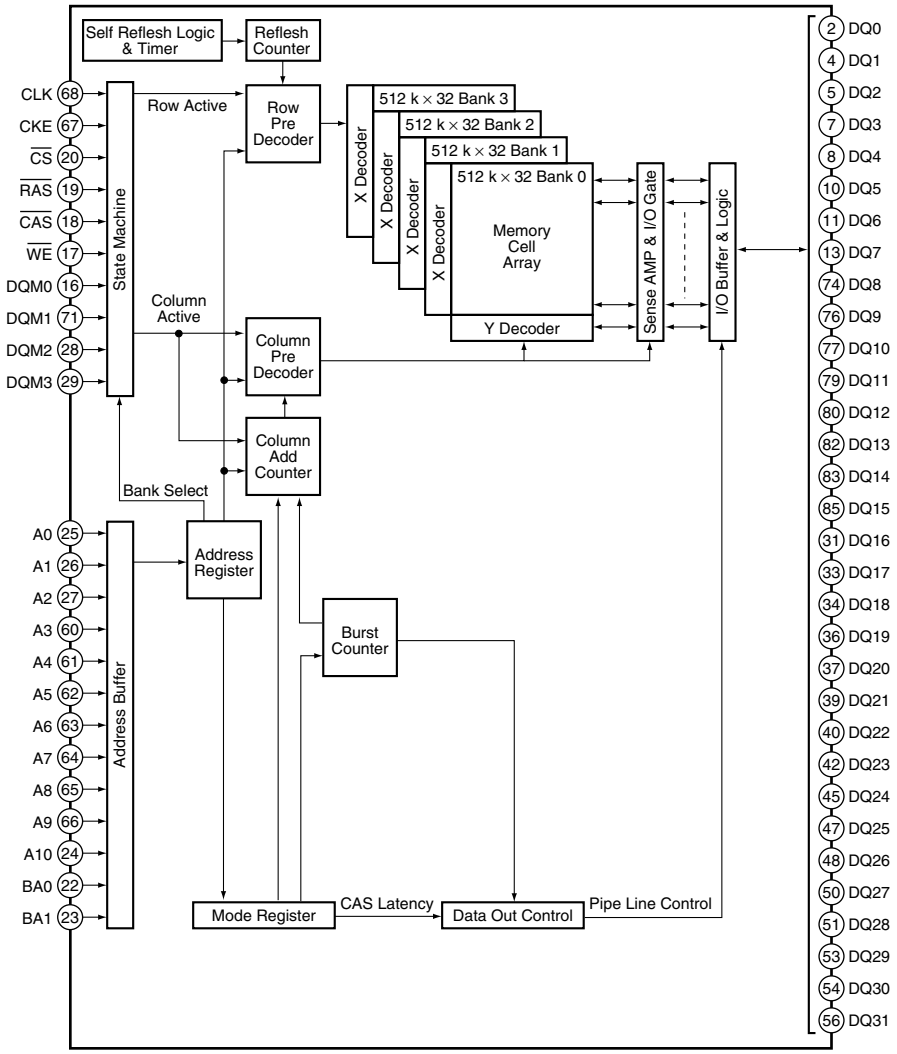

● Pin Function

No.	Pin Name	I/O	Pin Function	No.	Pin Name	I/O	Pin Function
1	VDD	–	Power supply	44	VSS	–	Ground
2	DQ0	I/O	Data input/output	45	DQ24	I/O	Data input/output
3	VDDQ	–	Power supply for output buffer	46	VSSQ	–	Ground for output buffer
4	DQ1	I/O	Data input/output	47	DQ25	I/O	Data input/output
5	DQ2	I/O	Data input/output	48	DQ26	I/O	Data input/output
6	VSSQ	–	Ground for output buffer	49	VDDQ	–	Power supply for output buffer
7	DQ3	I/O	Data input/output	50	DQ27	I/O	Data input/output
8	DQ4	I/O	Data input/output	51	DQ28	I/O	Data input/output
9	VDDQ	–	Power supply for output buffer	52	VSSQ	–	Ground for output buffer
10	DQ5	I/O	Data input/output	53	DQ29	I/O	Data input/output
11	DQ6	I/O	Data input/output	54	DQ30	I/O	Data input/output
12	VSSQ	–	Ground for output buffer	55	VDDQ	–	Power supply for output buffer
13	DQ7	I/O	Data input/output	56	DQ31	I/O	Data input/output
14	NC	–	No connection	57	NC	–	No connection
15	VDD	–	Power supply	58	VSS	–	Ground
16	DQM0	I	Data input/output mask	59	DQM3	I	Data input/output mask
17	/WE	I	Write enable	60	A3	I	Address input
18	/CAS	I	Column address strobe	61	A4	I	Address input
19	/RAS	I	Row address strobe	62	A5	I	Address input
20	/CS	I	Chip select input	63	A6	I	Address input
21	NC	–	No connection	64	A7	I	Address input
22	BA0	I	Bank address input	65	A8	I	Address input
23	BA1	I	Bank address input	66	A9	I	Address input
24	A10/AP	I	Address input	67	CKE	I	Clock enable
25	A0	I	Address input	68	CLK	I	System clock input
26	A1	I	Address input	69	NC	–	No connection
27	A2	I	Address input	70	NC	–	No connection
28	DQM2	I	Data input/output mask	71	DQM1	I	Data input/output mask
29	VDD	–	Power supply	72	VSS	–	Ground
30	NC	–	No connection	73	NC	–	No connection
31	DQ16	I/O	Data input/output	74	DQ8	I/O	Data input/output
32	VSSQ	–	Ground for output buffer	75	VDDQ	–	Power supply for output buffer
33	DQ17	I/O	Data input/output	76	DQ9	I/O	Data input/output
34	DQ18	I/O	Data input/output	77	DQ10	I/O	Data input/output
35	VDDQ	–	Power supply for output buffer	78	VSSQ	–	Ground for output buffer
36	DQ19	I/O	Data input/output	79	DQ11	I/O	Data input/output
37	DQ20	I/O	Data input/output	80	DQ12	I/O	Data input/output
38	VSSQ	–	Ground for output buffer	81	VDDQ	–	Power supply for output buffer
39	DQ21	I/O	Data input/output	82	DQ13	I/O	Data input/output
40	DQ22	I/O	Data input/output	83	DQ14	I/O	Data input/output
41	VDDQ	–	Power supply for output buffer	84	VSSQ	–	Ground for output buffer
42	DQ23	I/O	Data input/output	85	DQ15	I/O	Data input/output
43	VDD	–	Power supply	86	VSS	–	Ground

■ MBM29PL3200BE70PFV (RGB ASSY : IC7152)

• Page Mode Flash Memory

● Block Diagram

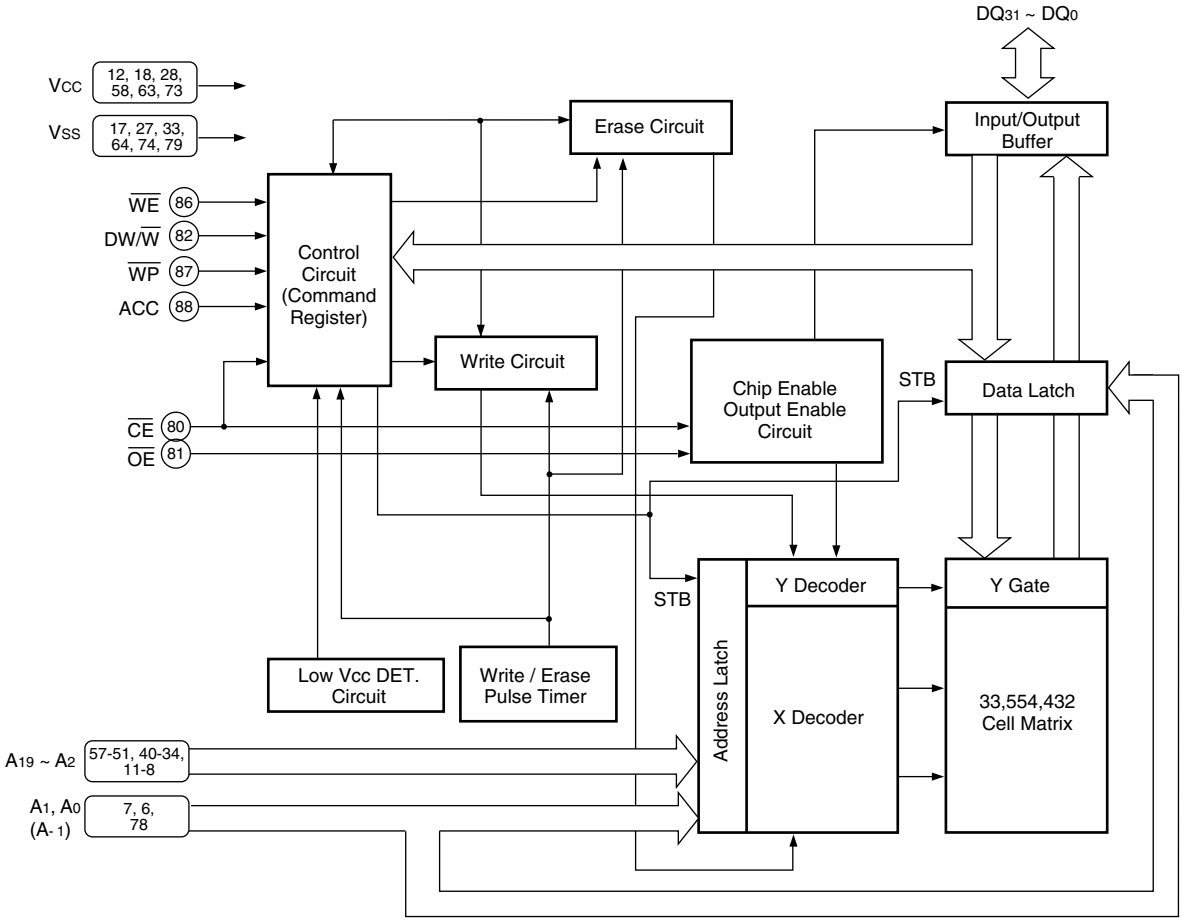

● Pin Function

No.	Pin Name	I/O	Pin Function
57-51, 40-34, 11-6, 78	A_{19} - A_0, A_{-1}	I	Address input
78-75, 72-65, 62-59, 32-19, 26-19, 16-13	DQ_{31} - DQ_0	I/O	Data input/output
80	CE	I	Chip enable
81	OE	I	Output enable
86	WE	I	Write enable
82	DW/W	I	16 bit, 32 bit mode switch
87	WP	I	Write protect
88	ACC	I	Acceleration
17, 27, 33, 64, 74, 79	V_{SS}	–	Ground
12, 18, 28, 58, 63, 73	V_{CC}	–	Power supply
1-5, 41-50, 83-85, 89, 90	N.C.	–	No connection

CXA3516AR (RGB ASSY : IC6001)

• AD + PLL IC

● Pin Arrangement (Top View)

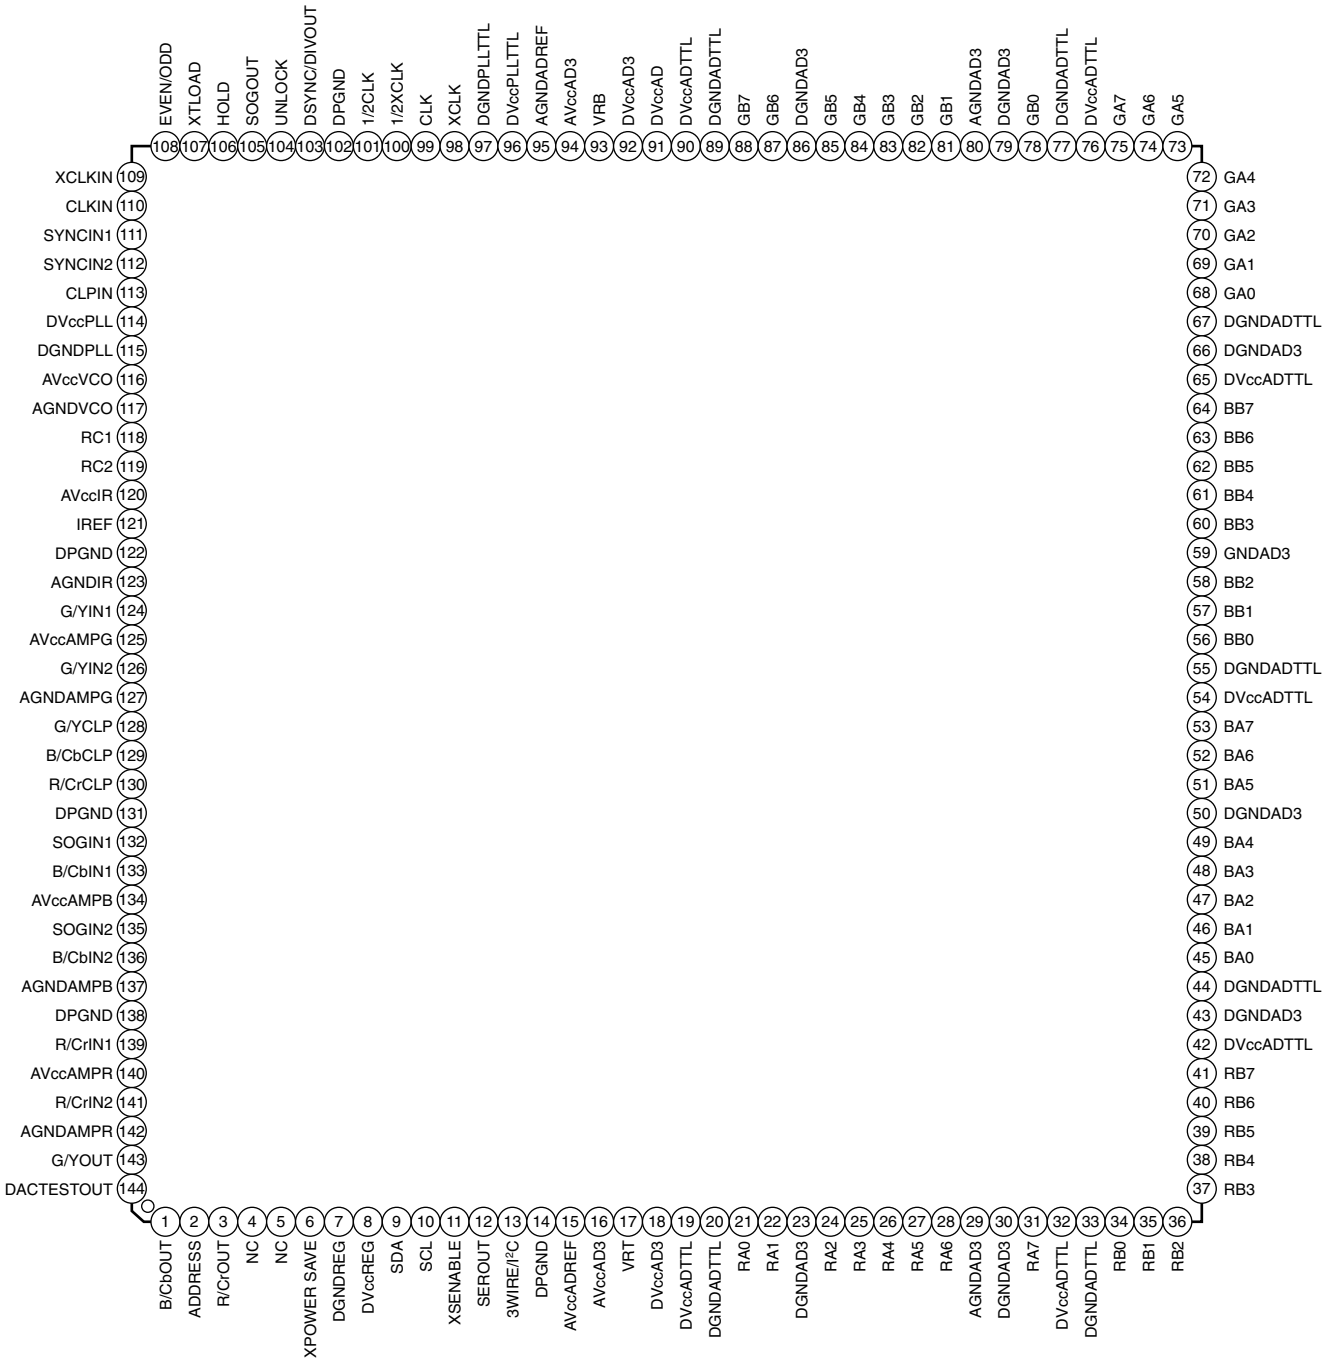

● Block Diagram

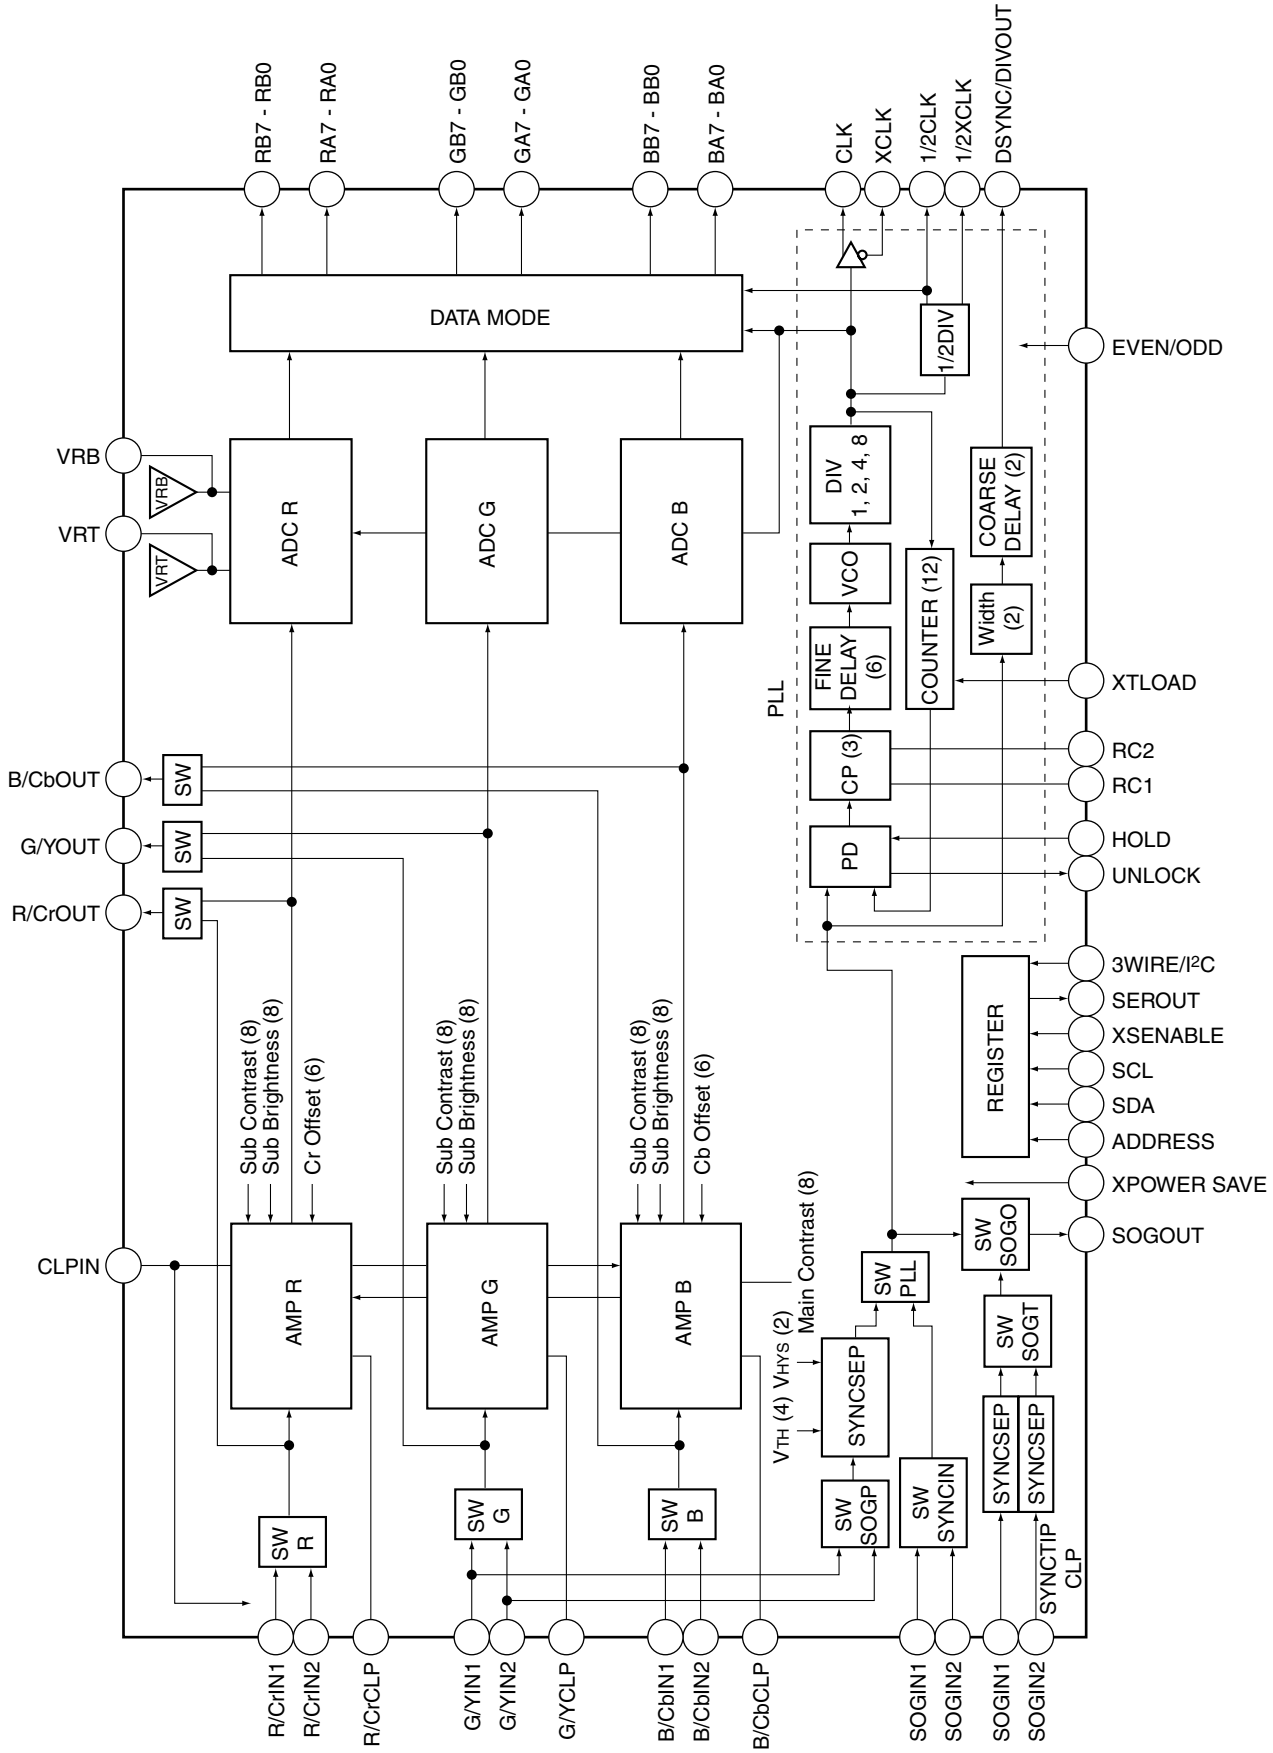

● Pin Function

No.	Symbol	I/O	Pin Function
1	B/CbOUT	O	Amplifier output signal monitor
2	ADDRESS	I	I²C slave address setting
3	R/CrOUT	O	Amplifier output signal monitor
4	NC	–	Not used
5	NC	–	Not used
6	XPOWER SAVE	I	Power save setting
7	DGNDREG	–	Register GND
8	DVccREG	–	Register power supply
9	SDA	I	Control register data input
10	SCL	I	Control register CLK input
11	XSENABLE	I	Enable signal input for 3-wire control register
12	SEROUT	O	3-wire control register data readout
13	3WIRE/I²C	I	Selection of input between I²C bus and 3-wire bus
15	AVccADREF	–	Reference power supply for A/D converter
16, 94	AVccAD3	–	Analog power supply for A/D converter
17	VRT	O	Top reference voltage output for A/D converter
18, 92	DVccAD3	–	Digital power supply for A/D converter
19, 32, 42, 54, 65, 76, 90	DVccADTTL	–	TTL output power supply for A/D converter
20, 33, 44, 55, 67, 77, 89	DGNDADTTL	–	TTL output GND for A/D converter
21, 22, 24-28, 31	RA0 - RA7	O	Data output for R-channel port A side
23, 30, 43, 50, 59, 66, 79, 86	DGNDAD3	–	Digital GND for A/D converter
29, 80	AGNDAD3	–	Analog GND for A/D converter
34-41	RB0 - RB7	O	Data output for R-channel port B side
45-49, 51-53	BA0 - BA7	O	Data output for B-channel port A side
56-58, 60-64	BB0 - BB7	O	Data output for B-channel port B side
68-75	GA0 - GA7	O	Data output for G-channel port A side
78, 81-85, 87, 88	GB0 - GB7	O	Data output for G-channel port B side
91	DVccAD	–	Digital power supply for A/D converter
93	VRB	O	Bottom reference voltage output for A/D converter
95	AGNDADREF	–	Reference voltage GND for A/D converter
96	DVccPLLTTL	–	TTL output power supply for PLL
97	DGNDPLLTTL	–	TTL output GND for PLL
98	XCLK	O	Inverted CLK output
99	CLK	O	CLK output
100	1/2XCLK	O	Inverted 1/2CLK output
101	1/2CLK	O	1/2CLK output
103	DSYNC/DIVOUT	O	DSYNC or DIVOUT signal output
104	UNLOCK	O	Unlock signal output
105	SOGOUT	O	Output for SYNC ON GREEN
106	HOLD	I	Input for phase comparison disable signal

No.	Symbol	I/O	Pin Function
107	XTLOAD	I	Programmable counter reset setting
108	EVEN/ODD	I	Inverted pulse input of ADC sampling CLK
109	XCLKIN	I	Inverted CLK input for testing
110	CLKIN	I	CLK input for testing
111	SYNCIN1	I	Sync input 1
112	SYNCIN2	I	Sync input 2
113	CLPIN	I	Clamp pulse input
114	DVccPLL	–	Digital power supply for PLL
115	DGNDPLL	–	Digital GND for PLL
116	AVccVCO	–	Analog power supply for PLL VCO
117	AGNDVCO	–	Analog GND for PLL VCO
118	RC1	–	External pin for PLL loop filter
119	RC2	–	External pin for PLL loop filter
120	AVccIR	–	Analog power supply for IREF
121	IREF	I	Current setup
123	AGNDIR	–	Analog GND for TREF
124	G/YIN1	I	G/Y signal input 1
125	AVccAMPG	–	Power supply for G/Y amplifier block
126	G/YIN2	I	G/Y signal input 2
127	AGNDAMPG	–	GND for G/Y amplifier block
128	G/YCLP	–	Clamp capcitor for brightness
129	B/CbCLP	–	Clamp capcitor for brightness
130	R/CrCLP	–	Clamp capcitor for brightness
132	SOGIN1	I	SYNC ON GREEN signal input 1
133	B/CbIN1	I	B/Cb signal input 1
134	AVccAMPB	–	Power supply for B/Cb amplifier block
135	SOGIN2	I	SYNC ON GREEN signal input 2
136	B/CbIN2	I	B/Cb signal input 2
137	AGNDAMPB	–	GND for B/Cb amplifier block
139	R/CrIN1	I	R/Cr signal input 1
140	AVccAMPR	–	Power supply for R/Cr amplifier block
141	R/CrIN2	I	R/Cr signal input 2
142	AGNDAMPR	–	GND for R/Cr amplifier block
143	G/YOUT	O	Monitor pin for amplifier output signal
144	DAC TEST OUT	O	DAC testing output for amplifier block control register
14, 102, 122, 131, 138	DPGND	–	GND

■ SII9993CTG100 (AV I/O ASSY : IC6810)

• HDCP Panel Link Receiver

● Pin Arrangement (Top view)

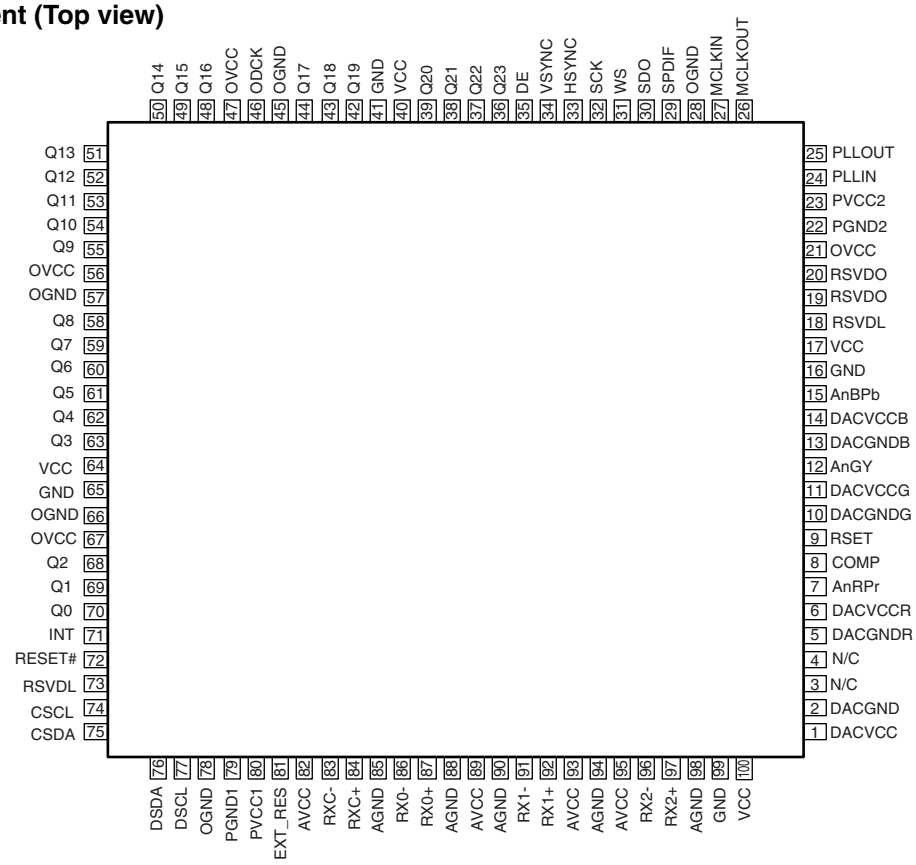

● Block Diagram

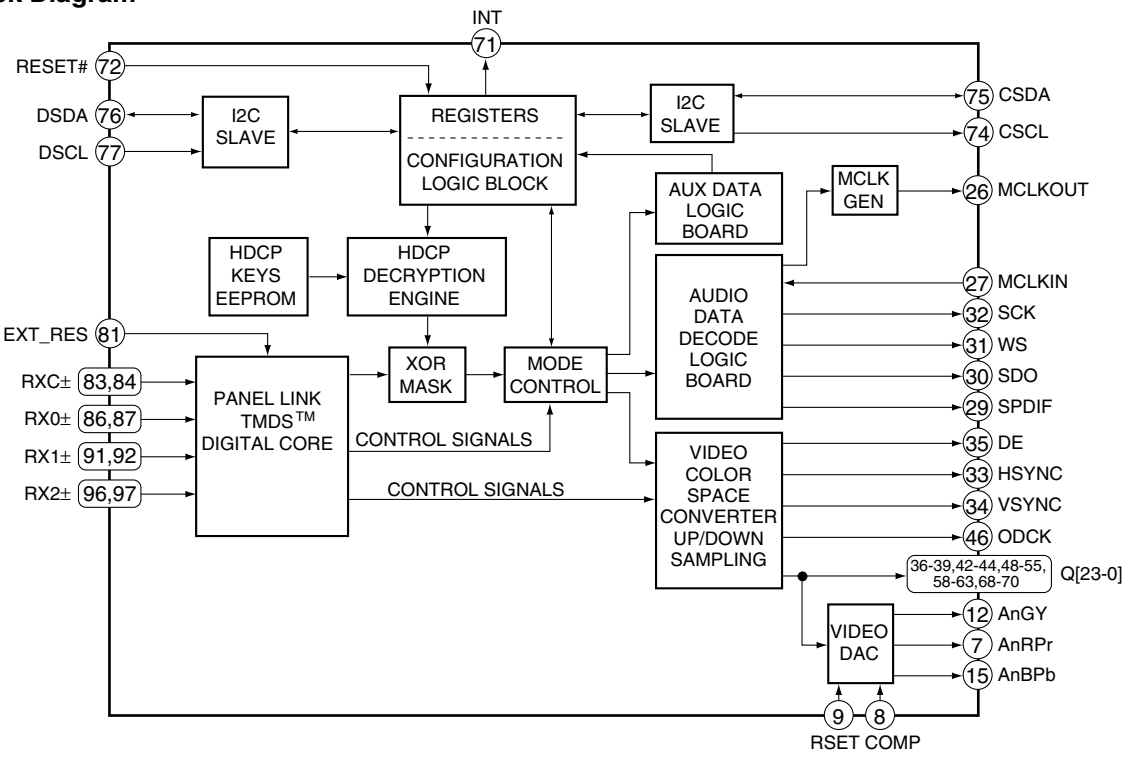

● Pin Function

No.	Pin Name	I/O	Pin Function	No.	Pin Name	I/O	Pin Function
1	DACVCC	–	DAC power supply (3.3V)	51	Q13	O	24-bit output pixel data bus
2	DACGND	–	DAC ground	52	Q12	O	24-bit output pixel data bus
3	N/C	–	No connection	53	Q11	O	24-bit output pixel data bus
4	N/C	–	No connection	54	Q10	O	24-bit output pixel data bus
5	DACGNDR	–	DAC Red ground	55	Q9	O	24-bit output pixel data bus
6	DACVCCR	–	DAC Red power supply (3.3V)	56	OVCC	–	Output bus power supply (3.3V)
7	AnRPr	O	Red, Pr output of analog video	57	OGND	–	Output bus ground
8	COMP	I	For reference amp. correction of DAC inside	58	Q8	O	24-bit output pixel data bus
9	RSET	I	Full scale adjustment resistor input	59	Q7	O	24-bit output pixel data bus
10	DACGNDG	–	DAC Green ground	60	Q6	O	24-bit output pixel data bus
11	DACVCCG	–	DAC Green power supply (3.3V)	61	Q5	O	24-bit output pixel data bus
12	AnGY	O	Green, Y output of analog video	62	Q4	O	24-bit output pixel data bus
13	DACGNDB	–	DAC Blue ground	63	Q3	O	24-bit output pixel data bus
14	DACVCCB	–	DAC Blue power supply (3.3V)	64	VCC	–	Digital power supply (3.3V)
15	AnBPb	O	Blue, Pb output of analog video	65	GND	–	Digital ground
16	GND	–	Digital ground	66	OGND	–	Output bus ground
17	VCC	–	Digital power supply (3.3V)	67	OVCC	–	Output bus power supply (3.3V)
18	RSVDL	I	Reserved Fixed to low.	68	Q2	O	24-bit output pixel data bus
19	RSVDD	O	Reserved No connection	69	Q1	O	24-bit output pixel data bus
20	RSVDD	O	Reserved No connection	70	Q0	O	24-bit output pixel data bus
21	OVCC	–	Output bus power supply (3.3V)	71	INT	O	Interruption output
22	PGND2	–	Audio PLL ground	72	RESET#	I	Reset Activ low.
23	PVCC2	–	Audio PLL power supply (3.3V)	73	RSVDL	I	Reserved Fixed to low.
24	PLLIN	I/O	PLL filter input	74	CSCL	I	Configuration I2C clock
25	PLLOUT	I/O	PLL filter output	75	CSDA	I/O	Configuration I2C data
26	MCCLKOUT	O	Audio master clock output	76	DSDA	I/O	DDC I2C data
27	MCCLKIN	I	Reference audio master clock input	77	DSCL	I	DDC I2C clock
28	OGND	–	Output bus ground	78	OGND	–	Output bus ground
29	SPDIF	O	SPDIF audio output	79	PGND1	–	PLL ground
30	SDO	O	I2S serial data output	80	PVCC1	–	PLL power supply (3.3V)
31	WS	O	I2S word selecting output	81	EXT_RES	I	Input impedance adjustment
32	SCK	O	I2S serial clock output	82	AVCC	–	Analog power supply (3.3V)
33	HSYNC	O	Horizontal sync. control signal output	83	RXC-	I	TMDS data input
34	VSYNC	O	Vertical sync. control signal output	84	RXC+	I	TMDS data input
35	DE	O	Data enable	85	AGND	–	Analog ground
36	Q23	O	24-bit output pixel data bus	86	RX0-	I	TMDS data input
37	Q22	O	24-bit output pixel data bus	87	RX0+	I	TMDS data input
38	Q21	O	24-bit output pixel data bus	88	AGND	–	Analog ground
39	Q20	O	24-bit output pixel data bus	89	AVCC	–	Analog power supply (3.3V)
40	VCC	–	Digital power supply (3.3V)	90	AGND	–	Analog ground
41	GND	–	Digital ground	91	RX1-	I	TMDS data input
42	Q19	O	24-bit output pixel data bus	92	RX1+	I	TMDS data input
43	Q18	O	24-bit output pixel data bus	93	AVCC	–	Analog power supply (3.3V)
44	Q17	O	24-bit output pixel data bus	94	AGND	–	Analog ground
45	OGND	–	Output bus ground	95	AVCC	–	Analog power supply (3.3V)
46	ODCK	O	Data clock output	96	RX2-	I	TMDS data input
47	OVCC	–	Output bus power supply (3.3V)	97	RX2+	I	TMDS data input
48	Q16	O	24-bit output pixel data bus	98	AGND	–	Analog ground
49	Q15	O	24-bit output pixel data bus	99	GND	–	Digital ground
50	Q14	O	24-bit output pixel data bus	100	VCC	–	Digital power supply (3.3V)

IC42S16100-7TG-K (VIDEO SLOT 2 ASSY : IC6106)

• 16M SDRAM

● Block Diagram

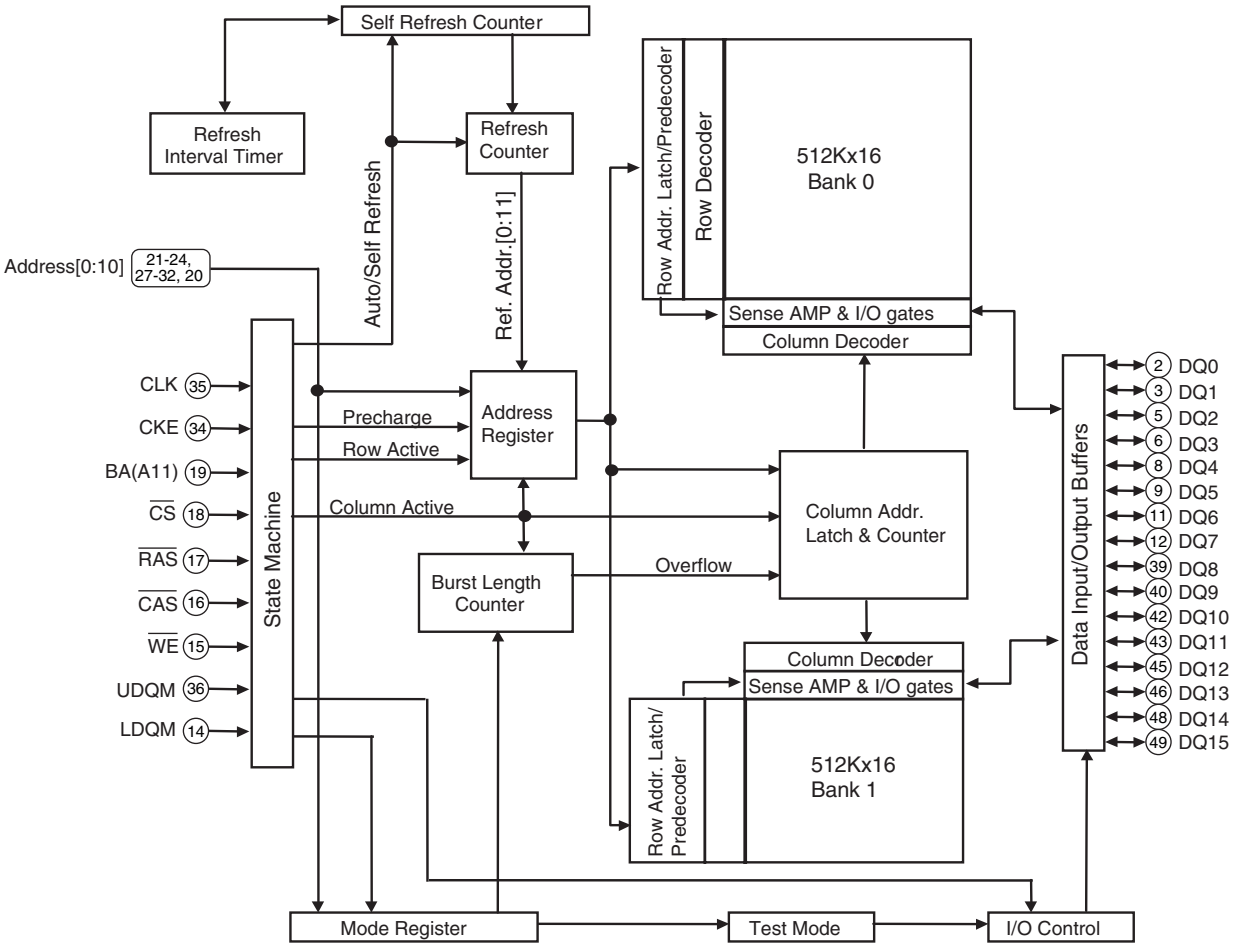

● Pin Arrangement

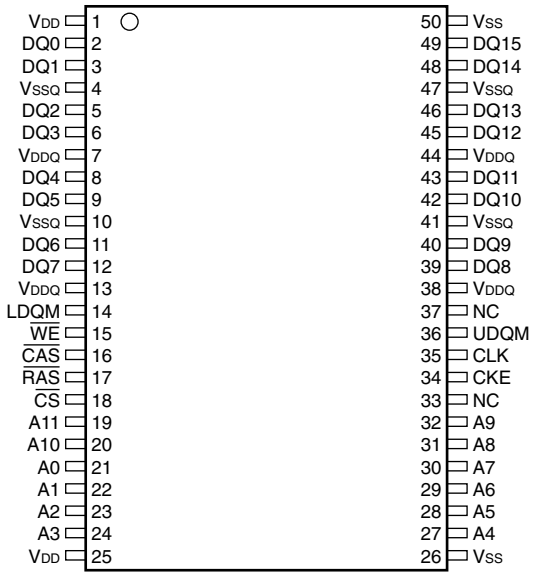

● Pin Function

No.	Pin Name	I/O	Pin Function
1	VDD	–	Power supply
2	DQ0	I/O	Data input/output
3	DQ1	I/O	Data input/output
4	VSSQ	–	Ground for DQ
5	DQ2	I/O	Data input/output
6	DQ3	I/O	Data input/output
7	VDDQ	–	Power supply for DQ
8	DQ4	I/O	Data input/output
9	DQ5	I/O	Data input/output
10	VSSQ	–	Ground for DQ
11	DQ6	I/O	Data input/output
12	DQ7	I/O	Data input/output
13	VDDQ	–	Power supply for DQ
14	LDQM	I	Data input/output mask
15	/WE	I	Write enable
16	/CAS	I	Column address strobe
17	/RAS	I	Row address strobe
18	/CS	I	Chip select input
19	A11	I	Address input
20	A10	I	Address input
21	A0	I	Address input
22	A1	I	Address input
23	A2	I	Address input
24	A3	I	Address input
25	VDD	–	Power supply
26	VSS	–	Ground
27	A4	I	Address input
28	A5	I	Address input
29	A6	I	Address input
30	A7	I	Address input
31	A8	I	Address input
32	A9	I	Address input
33	NC	–	No connection
34	CKE	I	Clock enable
35	CLK	I	System clock input
36	UDQM	I	Data input/output mask
37	NC	–	No connection
38	VDDQ	–	Power supply for DQ
39	DQ8	I/O	Data input/output
40	DQ9	I/O	Data input/output
41	VSSQ	–	Ground for DQ
42	DQ10	I/O	Data input/output
43	DQ11	I/O	Data input/output
44	VDDQ	–	Power supply for DQ
45	DQ12	I/O	Data input/output
46	DQ13	I/O	Data input/output
47	VSSQ	–	Ground for DQ
48	DQ14	I/O	Data input/output
49	DQ15	I/O	Data input/output
50	VSS	–	Ground

LA4625 (AUDIO AMP ASSY : IC5003)

• 2ch BLT AF Power Amp. IC

● Block Diagram

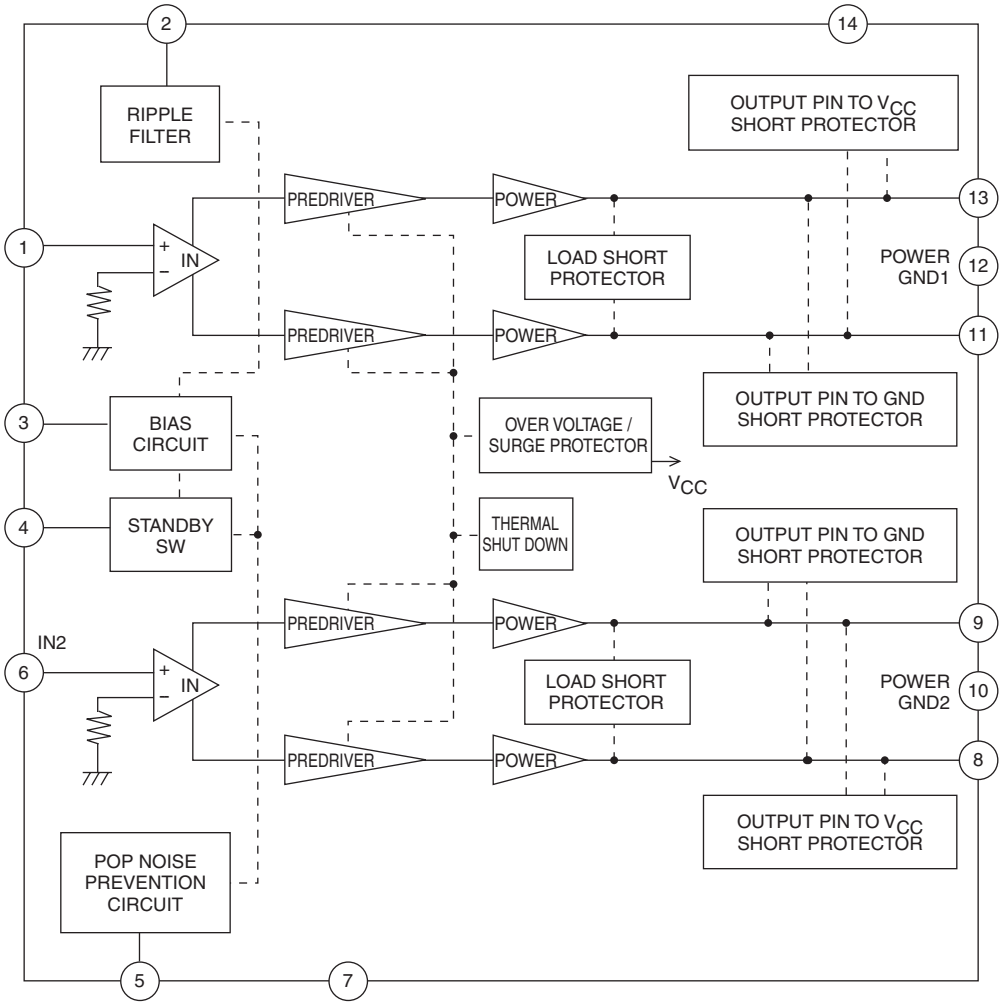

8. PANEL FACILITIES

■ MAIN UNIT

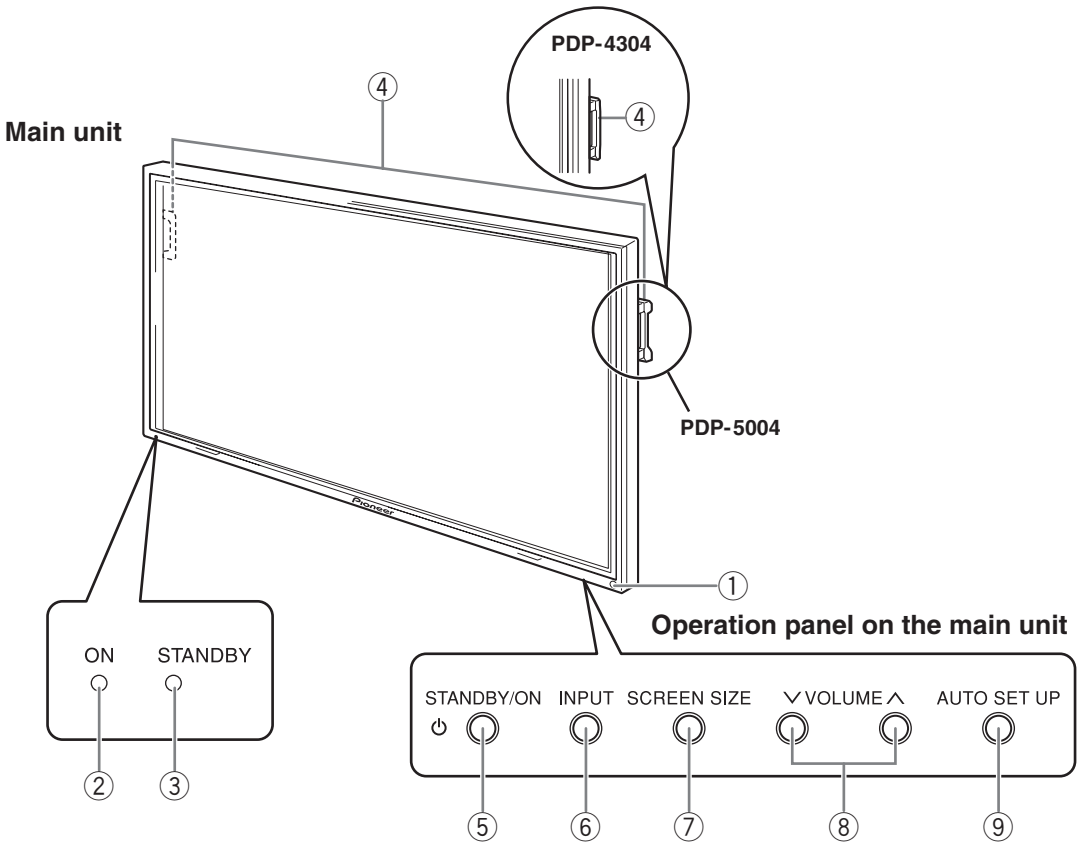

Main unit

① Remot **e control sensor**
Point the remote control toward the remote sensor to operate the unit.

② **ON indicator**
Lights green when the plasma display is operating.
When flashing, the indicator is used to indicate error messages.

③ **STANDBY indicator**
Lights red when the unit is in standby mode.
When flashing, the indicator is used to indicate error messages.

④ **Handles**
The plasma displays PDP-5004 and PDP-4304 utilize differing methods of handle attachment, but the handles themselves are used in the same way.

Operation panel on the main unit

⑤ **STANDBY/ON button**
Press to put the display in operation or standby mode.

⑥ **INPUT button**
Press to select the input.

⑦ **SCREEN SIZE button**
Press to select the screen size.

⑧ **VOLUME (+/–) but tons**
When not indicated for use in onscreen menu items, these buttons are used for adjusting the sound volume.

⑨ **AUTO SET UP button**
When using computer signal input, automatically sets the [POSITION], [CLOCK] and [PHASE] to optimum values.

■ CONNECTION PANEL

Illustration depicts PDP-5004, PDP-5014, PDP-4304 and PDP-4314 models.

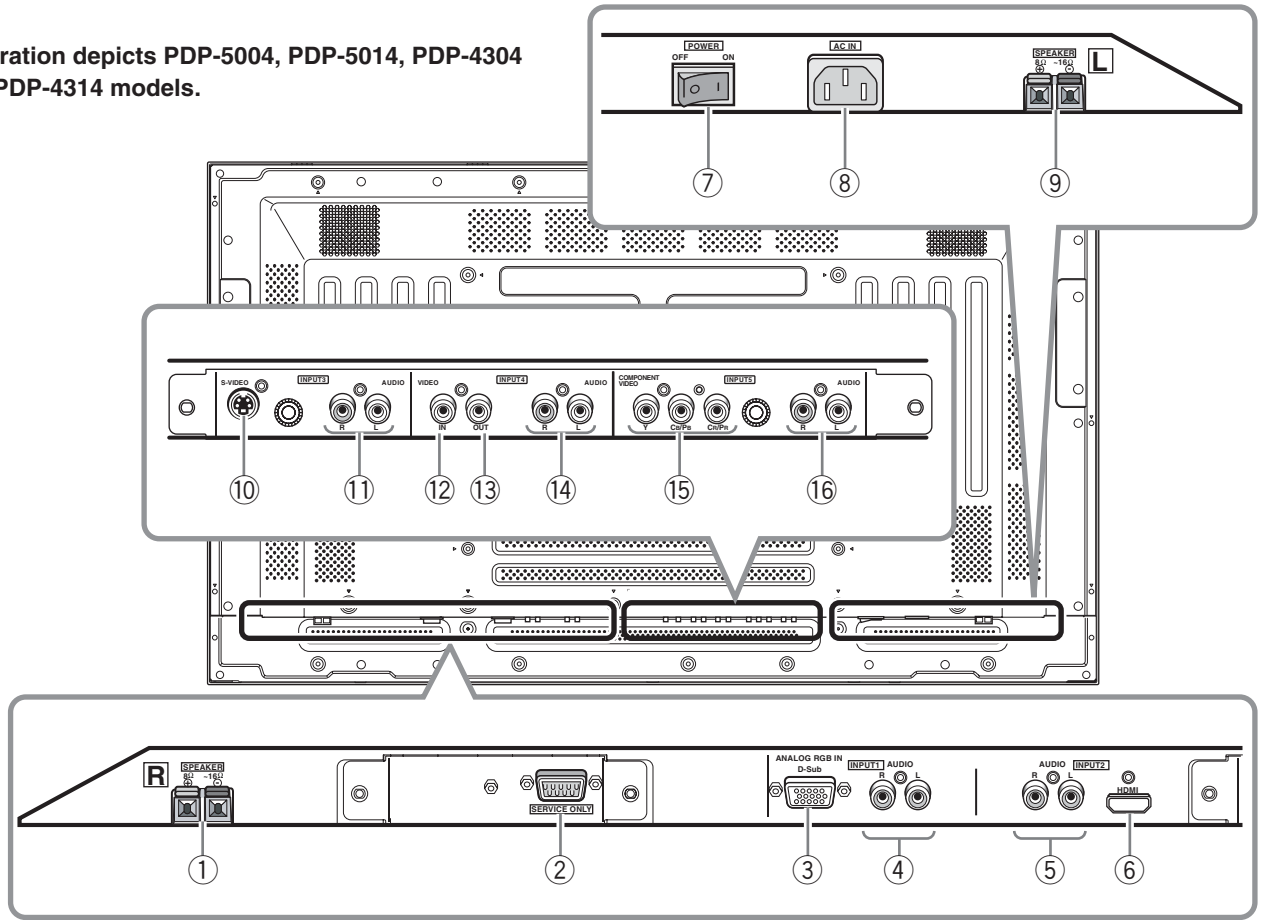

Plasma Display Section

The plasma display is provided with 5 video input connectors, 1 video output connector, audio input jacks and speaker terminals.
For instructions regarding connections, consult the pages noted in parentheses by each item.

① **SPEAKER (R) terminal**
For connection of an external right speaker.
Connect a speaker whose impedance is 8 –16Ω.

② **RS-232 Terminal (used in the factory setup)**

③ **ANALOG RGB IN (INPUT1) (mini D-sub 15 pin)**
For connecting components equipped with RGB outputs jacks, such as a personal computer or external RGB decoder; or components equipped with component output jacks, such as a DVD recorder.
Make sure that the connection made corresponds to the format of the signal output from the connected component.

④ **AUDIO (INPUT1) (RCA pin jack)**
Use to obtain sound when INPUT1 is selected.
Connect this jack to the audio output connector of the device connected to INPUT1 to this unit.

Note
The left audio channel (L) jack is not compatible with monaural input sources.

⑤ **AUDIO (INPUT2) (RCA Pin jacks)**
Use to obtain sound when INPUT2 (analog audio) is selected.
Connect these jacks to the audio output connectors of components connected to INPUT2.

Note
The left audio channel (L) jack is not compatible with monaural input sources.

⑥ **HDMI (INPUT2) (HDMI jack)**
For connection of components that have a digital video output terminal such as a digital set top box, DVD player, etc. compatible with HDCP. Before attempting to connect one of these devices, read its operating instructions to make sure that it can be connected.
(HDCP = High-bandwidth Digital Content Protection)
(HDMI = High Definition Multimedia Interface)

⑦ **MAIN POWER switch**
Use to switch the main power of the plasma display on and off.

⑧ **AC IN**
A power cable is furnished with the plasma display; connect one end of the power cable to this connector, and the other end to a standard AC power source.

⑨ **SPEAKER (L) terminal**
For connection of an external left speaker. Connect a speaker that has an impedance of 8 –16Ω.

⑩ **S-VIDEO (INPUT3) (S-video jack)**
For connection of components that have an S-video output jack such as a video deck, video camera, laser disc player, or DVD recorder.

⑪ **AUDIO R/L (INPUT3) (RCA Pin jacks)**
Use to obtain sound when INPUT3 is selected. Connect these jacks to the audio output connectors of components connected to INPUT3 to this unit.

⑫ **VIDEO IN (INPUT4) (RCA Pin jack)**
For connection of components that have a composite video output jack such as a video deck, video camera, laser disc player, or DVD recorder.

⑬ **VIDEO OUT (INPUT4) (RCA Pin jack)**
Use the VIDEO OUT (INPUT4) jack to output the video signal to an external monitor or other component.

Note
The video signal will not be output from the VIDEO OUT (INPUT4) jack when the main power of this display is off or in standby mode.

⑭ **AUDIO R/L (INPUT4) (RCA Pin jacks)**
Use to obtain sound when INPUT4 is selected. Connect these jacks to the audio output connectors of components connected to INPUT4 to this unit.

⑮ **COMPONENT VIDEO (INPUT5) (RCA Pin jacks)**
For connection of components that have component video output jacks such as a DVD recorder.

⑯ **AUDIO R/L (INPUT5) (RCA Pin jacks)**
Use to obtain sound when INPUT5 is selected. Connect these jacks to the audio output connectors of components connected to INPUT5 to this unit.

■ REMOTE CONTROL UNIT

[PDP-5004, PDP-4304]

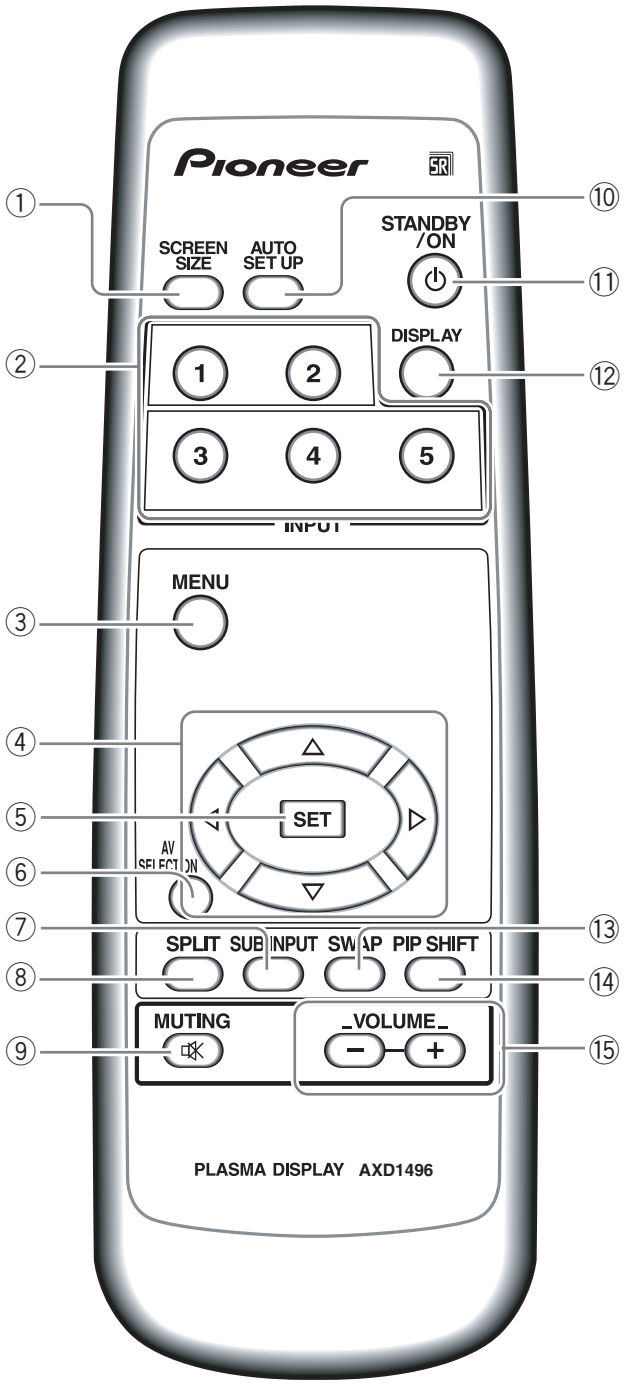

① **SCREEN SIZE button**
Press to select the screen size.

② **INPUT buttons**
Press to select the input.

③ **MENU button**
Press to open and close the on-screen menu.

④ **ADJUST (▲/▼/►/◄) buttons**
Use to navigate menu screens and to adjust various settings on the unit.

⑤ **SET button**
Press to adjust or enter various settings on the unit.

⑥ **AV SELECTION button**
Press to switch to Picture settings.
(VIDEO mode: DYNAMIC, STANDARD, MOVIE, GAME, USER
PC mode: STANDARD, USER)

⑦ **SUB INPUT button**
During multi-screen display, use this button to change inputs to subscreens.

⑧ **SPLIT button**
Press to switch to multi-screen display.

⑨ **MUTING button**
Press to mute the volume.

⑩ **AUTO SET UP button**
When using computer signal input, automatically sets the [POSITION], [CLOCK] and [PHASE] to optimum values.

⑪ **STANDBY/ON button**
Press to put the unit in operation or standby mode.

⑫ **DISPLAY button**
Press to view the unit's current input and setup mode.

⑬ **SWAP button**
During multi-screen display, use this button to switch between main screen and subscreen.

⑭ **PIP SHIFT button**
When using PinP mode with multi-screen display, use this button to move the position of subscreen.

⑮ **VOLUME (+/–) buttons**
Use to adjust the volume.

[PDP-5014, PDP-4314]

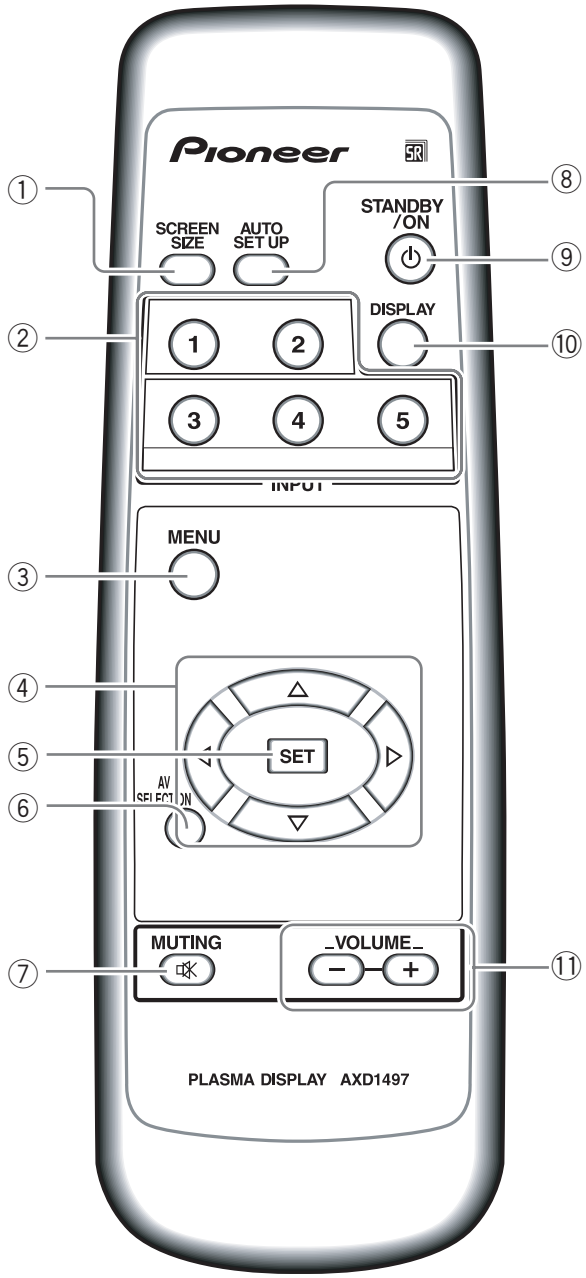

① **SCREEN SIZE button**
Press to select the screen size.

② **INPUT buttons**
Press to select the input.

③ **MENU button**
Press to open and close the on-screen menu.

④ **ADJUST (▲/▼/►/◄) buttons**
Use to navigate menu screens and to adjust various settings on the unit.

⑤ **SET button**
Press to adjust or enter various settings on the unit.

⑥ **AV SELECTION button**
Press to switch to Picture settings.
(VIDEO mode: DYNAMIC, STANDARD, MOVIE, GAME, USER
PC mode: STANDARD, USER)

⑦ **MUTING button**
Press to mute the volume.

⑧ **AUTO SET UP button**
When using computer signal input, automatically sets the [POSITION], [CLOCK] and [PHASE] to optimum values.

⑨ **STANDBY/ON button**
Press to put the unit in operation or standby mode.

⑩ **DISPLAY button**
Press to view the unit's current input and setup mode.

⑪ **VOLUME (+/–) buttons**
Use to adjust the volume.

■ INSTALLATION OF THE UNIT UNIT

Installation using the optional PIONEER stand or installation bracket

- Please be sure to request installation or mounting of this unit or the installation bracket by the dealer where purchased.
- When installing, be sure to use the bolts provided with the stand or installation bracket.
- For details concerning installation, please refer to the instruction manual provided with the st and or installation bracket.

Installation using accessories other than the PIONEER stand or installation bracket (sold separately)

- When possible, please install using parts and accessories manufactured by PIONEER. PIONEER will not be held responsible for accident or damage caused by the use of parts and accessories manufactured by other companies.
- For custom installation, please consult the dealer where the unit was purchased.

Wall-mount installation of the unit

This unit has been designed with bolt holes for wall-mount installation, etc. The installation holes that can be used are shown in the diagram below.

- Be sure to attach in 4 or more locations above and below, left and right of the center line.
- Use bolts that are long enough to be inserted 1/2 inch (12 mm) to 11/16 inch (18 mm) into the main unit from the attaching surface for both a holes.
  Refer to the side view diagram below.
- As this unit is constructed with glass, be sure to install it on a flat, unwarped surface.

⚠ CAUTION

To avoid malfunction, overheating of this unit, and possible fire hazard, make sure that the vents on the main unit are not blocked when installing. Also, as hot air is expelled from the air vents, be careful of deterioration and dirt build up on rear surface wall, etc..

⚠ CAUTION

Please be sure to use an M8 (Pitch = 1.25 mm) bolt (Only this size bolt can be used).

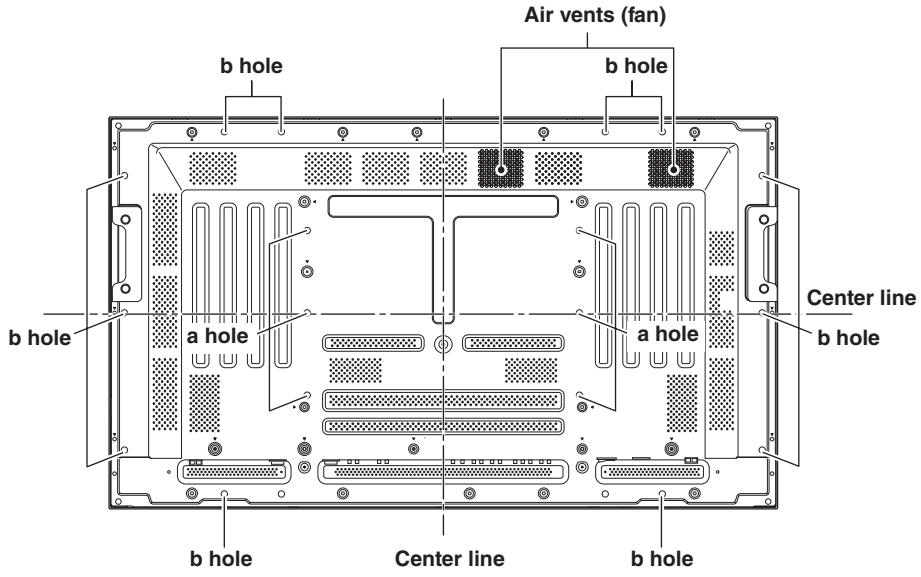

Rear view diagram (PDP-5004/PDP-5014)

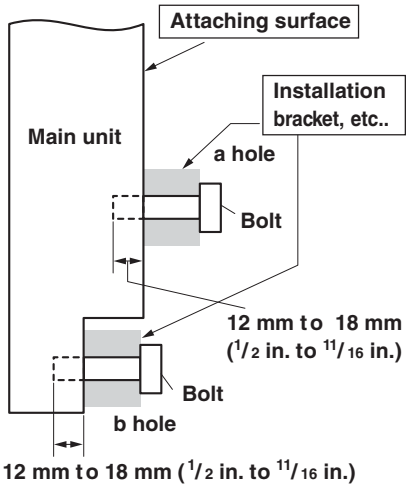

Side view diagram

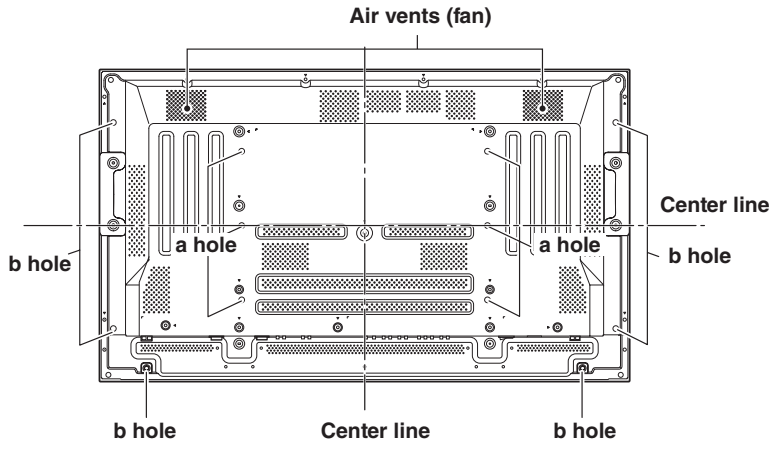

Rear view diagram (PDP-4304/PDP-4314)

⚠ CAUTION

This display unit weighs at least 67 lbs (30 kg) and has little front-to-back depth, making it very unstable when stood on edge. As a result, two or more persons should cooperate when unpacking, moving, or installing the display.

⚠ CAUTION

This unit incorporates a thin design. To ensure safety if vibrated or shaken, please be sure to take measures to prevent the unit from tipping over.